

Ambimall H6I7J7

Ambimall Dimmable Floor Lamp Instruction Manual

Model: H6I7J7

1. SAFETY INSTRUCTIONS

- Ensure the lamp is unplugged before assembly, cleaning, or bulb replacement.
- Do not operate the lamp with a damaged cord or plug.
- Avoid placing the lamp in unstable locations to prevent tipping.
- This lamp is designed for indoor use only. Do not expose to water or high humidity.
- Use only the specified bulb type (E26 Medium base, 9W LED bulb included).

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Bulb (9W LED)
- Remote Control
- Shade (Fabric)
- Lamp Stand (Pole sections and Base)
- User Manual

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Ambimall Dimmable Floor Lamp:

1. **Install the Lampshade:** Unroll the fabric lampshade and attach it to the upper and lower rings using the integrated Velcro strips.
2. **Assemble the Pole:** Screw all the pole tubes together from top to bottom, ensuring they are securely tightened.
3. **Attach to Base:** Insert the assembled pole into the lamp base and secure it.
4. **Secure Lampshade:** Place the assembled lampshade onto the lamp fixture.

5. **Fix Lampshade with Socket Ring:** Screw the socket ring onto the bulb holder to firmly secure the lampshade in place.
6. **Install the LED Bulb:** Carefully screw the provided 9W LED bulb into the E26 medium base socket.



Figure 3.1: Step-by-step assembly guide for the floor lamp.

Remote Control

Max 32ft distance control



Foot Switch

On/Off, Hands-Free



Figure 3.2: Installing the LED bulb into the lamp socket.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Foot Switch:** Tap the foot switch located on the power cord to turn the lamp ON or OFF.
- **Remote Control:** Use the power button on the remote control to turn the lamp ON or OFF.



Figure 4.1: Dual control options: foot switch and remote control.

4.2 Brightness and Color Temperature Adjustment

The lamp offers stepless adjustment for both brightness and color temperature via the remote control.

- **Brightness:** Adjust from 10% (dim) to 100% (bright). Use the brightness adjustment buttons on the remote.
- **Color Temperature:** Adjust from 3000K (warm white) to 6000K (cool white). This allows selection of warm, natural, or cool light. Use the color temperature adjustment buttons on the remote.



Figure 4.2: Adjustable color temperature (3000K-6000K) and brightness (10%-100%).

4.3 Timer and Night Mode

- **1-Hour Timer:** Activate the 1-hour timer function using the remote control. The lamp will automatically turn off after one hour.
- **Night Mode:** Select Night Mode for a soft, low-light setting, ideal for nurseries or late-night use.



Figure 4.3: Night Light Mode and 1-hour timer for convenience.

4.4 Remote Control Functions

The remote control provides various functions for customized lighting:

- **Power Button:** Turns the lamp ON/OFF.
- **Brightness +/-:** Increases or decreases brightness.
- **Color Temperature +/-:** Adjusts color temperature between warm and cool white.
- **Preset Modes:** Includes Nursery Mode, Working Mode, Reading Mode, and Night Light Mode for quick selection of appropriate lighting.
- **Timer Button:** Activates the 1-hour timer.



Figure 4.4: Remote control features and lamp capabilities.

Your browser does not support the video tag.

Video 4.1: Demonstration of adjustable colors and tips for using the Ambimall Floor Lamp.

5. MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the lamp pole and base with a soft, dry cloth. The fabric lampshade can be gently dusted or spot cleaned with a damp cloth if necessary.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use an E26 Medium base LED bulb, maximum 9W.

6. TROUBLESHOOTING

- **Lamp Does Not Turn On:**
 - Check if the power cord is securely plugged into a working outlet.
 - Ensure the bulb is correctly installed and not loose or damaged.
 - Verify that the remote control has working batteries.
- **Remote Control Not Responding:**
 - Replace the remote control batteries if necessary.
 - **Remote Reconnect Procedure:** If the remote cannot control the lamp, try to reconnect it by following these steps:
 - a. Turn off the lamp using the foot switch.
 - b. Turn the lamp back on using the foot switch.
 - c. Immediately press and hold the ON/OFF button on the remote control for 3-5 seconds until the lamp flashes, indicating successful pairing.
- **Light Flickers:**
 - Ensure the bulb is screwed in tightly.
 - Check for loose connections in the pole sections.

7. SPECIFICATIONS

Feature	Detail
Model Number	H6I7J7
Dimensions (D x W x H)	7.87"D x 10.24"W x 60"H
Item Weight	3.8 Pounds
Light Source Type	LED
Wattage	9 watts
Bulb Base	E26 Medium
Voltage	120 Volts
Control Method	Remote, Foot Switch
Color Temperature	3000K-6000K (Adjustable)
Brightness	10%-100% (Stepless Dimmable)
Shade Material	Linen
Base Material	Iron
Indoor/Outdoor Usage	Indoor

8. WARRANTY INFORMATION

This Ambimall Dimmable Floor Lamp is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact Ambimall customer support through the retailer's platform or visit the official Ambimall store page.

Ambimall Store: <https://www.amazon.com/stores/Ambimall/page/25C9C0DC-D2AA-4679-92F6-1A18B082C10B>