

Scoothop G3

Scoothop G3 Electric Scooter User Manual

Model: G3

1. SAFETY INFORMATION

Before operating your Scoothop G3 Electric Scooter, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury or damage to the scooter.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- Do not ride in adverse weather conditions, such as heavy rain, snow, or ice.
- Ensure the scooter's weight limit of 331 lbs (150 kg) is not exceeded.
- Perform a pre-ride inspection before each use, checking brakes, tires, and all connections.
- The Scoothop G3 is UL2272 certified, indicating compliance with electrical safety standards.

 


Image: Certifications for the Scoothop G3 Electric Scooter, showing UL, CE, and FCC compliance.

2. SETUP AND ASSEMBLY

Your Scoothop G3 Electric Scooter comes partially assembled. Follow these steps to complete the setup:

1. **Unboxing:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Handlebar Assembly:** Attach the handlebars to the stem. Ensure all screws are tightened securely. Refer to the assembly video for detailed instructions.
3. **Initial Charge:** Fully charge the scooter's battery before its first use. The charging time is approximately 6-8 hours.
4. **Tire Inflation:** Check the tire pressure of the 10-inch pneumatic tires. Inflate to the recommended PSI as indicated on the tire sidewall.

Your browser does not support the video tag.

Video: Detailed assembly instructions for the Scoothop G3 Electric Scooter, demonstrating handlebar attachment and initial setup.



Image: The Scoothop G3 Electric Scooter in its folded configuration, highlighting its portability for transport and storage.

3. OPERATING INSTRUCTIONS

Understand the controls and features for a safe and enjoyable ride:

- **Power On/Off:** Press and hold the power button on the display to turn the scooter on or off.
- **Digital Display:** The HD digital display shows current speed, battery level, riding mode, light status, cruise control, and potential warning codes.
- **Riding Modes:** Select your desired riding mode (e.g., Eco, Standard, Sport) using the mode button. Each mode offers different speed and power outputs.
- **Acceleration:** Use the thumb throttle to control your speed. Apply gently for smooth acceleration.
- **Braking:** The scooter features dual disc brakes for effective stopping power. Use both brake levers for optimal control and safety.
- **Folding Mechanism:** To fold the scooter for storage or transport, disengage the locking mechanism and fold the stem down until it clicks into place. Reverse the process to unfold.
- **Lighting:** The scooter is equipped with 360-degree surround lighting, including a front headlight and rear brake light, for improved visibility, especially during night rides.

Image: The HD Digital Display of the Scoothop G3, illustrating various indicators like speed, battery, and riding mode.

Image: The Scoothop G3 Electric Scooter demonstrating its capability on diverse terrains, including gravel and dirt paths.

Image: The Scoothop G3 Electric Scooter's LED lighting system, providing visibility during night operation.

4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter:

- **Battery Care:** Charge the battery regularly, even if not in use, to maintain its health. Store the scooter in a cool, dry place. Avoid fully discharging the battery.
- **Tire Maintenance:** Regularly check tire pressure and inspect for wear or damage. Replace worn tires promptly.
- **Brake Inspection:** Periodically check the brake levers and cables for proper function. Adjust or replace brake pads as needed.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using high-pressure water jets directly on electrical components. The scooter has an IP54 water resistance rating, protecting against splashes.
- **General Inspection:** Check all screws and fasteners for tightness. Lubricate moving parts as recommended by the manufacturer.

Image: The Scoothop G3 Electric Scooter demonstrating its IP54 water resistance against splashes.

5. TROUBLESHOOTING

If you encounter issues with your Scoothop G3, refer to the following common problems and solutions:

- **Scooter Not Turning On:**
 - Check if the battery is charged.
 - Ensure all connections are secure.
- **Reduced Range/Speed:**
 - Verify tire pressure is correct.
 - Ensure the battery is fully charged.
 - Consider riding conditions (uphill, heavy load, cold weather can affect performance).
- **Brakes Not Responding:**
 - Inspect brake cables for damage or looseness.
 - Check brake pads for wear and replace if necessary.
- **Unusual Noises:**
 - Inspect wheels, brakes, and suspension for loose parts or obstructions.

For persistent issues or warning codes displayed on the screen, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model	G3
Motor Power	1200W Brushless Motor
Battery	52V 15Ah Lithium Battery
Max Speed	Up to 28 MPH
Range per Charge	28-35 Miles
Charging Time	6-8 Hours
Tires	10-inch Off-Road Pneumatic Tires
Braking System	Dual Disc Brakes
Suspension	Dual Suspension
Max Load Capacity	331 LBS (150 kg)
Frame Material	High-Strength Aluminum Alloy
Water Resistance	IP54
Product Dimensions (Unfolded)	20.87"L x 9.06"W x 50.39"H
Product Dimensions (Folded)	50.39"L x 20.08"W x 7.87"H (from image)

Image: Dimensional overview of the Scoothop G3 Electric Scooter in both unfolded and folded states.

Image: Visual representation of the 1200W motor, highlighting its power output.

Image: Depiction of the 52V 15Ah battery cells, emphasizing long battery life and fast charging.

7. WARRANTY AND SUPPORT

Your Scoothop G3 Electric Scooter comes with a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For any questions, technical assistance, or warranty claims, please contact Scoothop customer support via email. We aim to resolve your issue within 24 hours.

Contact Email: [Please refer to your product packaging or purchase documentation for the specific email address.]

© 2026 Scoothop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GV5R6S8V>

More documents and user manuals: <https://manuals.plus/>