

WTHG0RATWT7NT5K0

Generic Cordless Power Washer Instruction Manual

Model: WTHG0RATWT7NT5K0

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, setup, maintenance, and troubleshooting of the Generic Cordless Power Washer, Model WTHG0RATWT7NT5K0. This portable power washer is designed for efficient outdoor cleaning, offering cordless convenience and adjustable pressure settings for various tasks. It is suitable for cleaning surfaces such as patios, windows, vehicles, and outdoor furniture.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your cordless power washer:

- **Main Unit:** The core body containing the motor and battery compartment.
- **Electroplated Gun Head/Spray Nozzle:** Adjustable nozzle for different spray patterns and pressures.
- **Long Rod Nozzle:** Extends reach for various cleaning applications.
- **Water Inlet Connector:** For connecting the water supply hose.
- **Detergent Tank:** For applying cleaning solutions.
- **Trigger Handle with Labor-Saving Clip:** Ergonomically designed for comfortable operation, allowing continuous water flow.



Image: Close-up view of the ergonomic trigger handle and control knob.



Image: The detergent tank connected to the nozzle assembly, ready for cleaning solution.

Not neglect every detail

We put our heart where you can't see

01

Electroplated gun head

Not easy to rust, strong water column, strong water pressure



Image: Detailed view of the electroplated gun head, featuring a 360-degree rotating adjustable water spray.



Labor-saving clip

No need to press, you can easily water.

Image: Close-up of the labor-saving clip on the power washer trigger, designed for continuous operation without constant pressure.

SAFETY INSTRUCTIONS

Always follow these safety guidelines to prevent injury or damage:

- Read all instructions before operating the power washer.
- Wear appropriate personal protective equipment (PPE), such as safety glasses, gloves, and closed-toe shoes.
- Do not point the spray nozzle at people, pets, or electrical outlets.
- Ensure all connections are secure before turning on the unit.
- Keep children and bystanders away from the operating area.
- Do not operate the power washer in the rain or wet conditions.
- Disconnect the battery and water supply when not in use or during maintenance.
- Use only manufacturer-approved accessories and replacement parts.

SETUP

1. **Charge Battery:** Ensure the battery is fully charged before first use. Refer to the battery charger's instructions for proper charging procedures.
2. **Assemble Nozzle and Rod:** Attach the long rod nozzle to the main unit. Then, attach the desired spray nozzle (electroplated gun head) to the end of the long rod. Ensure connections are tight.
3. **Connect Water Supply:** Connect your garden hose to the water inlet connector on the power washer. Ensure a secure, leak-free connection.
4. **Fill Detergent Tank (Optional):** If using cleaning solution, fill the detergent tank with the appropriate solution. Attach the tank to the power washer assembly.

OPERATING INSTRUCTIONS

Follow these steps for effective cleaning:

1. **Start Water Flow:** Turn on your water supply to allow water to flow through the hose to the power washer.
2. **Insert Battery:** Securely insert the charged battery into its compartment on the power washer.
3. **Select Spray Pattern:** The power washer features a 3-speed adjustable spray nozzle with multiple modes, controlled by rotating the electroplated gun head 360 degrees:
 - **Fan-shaped:** For wide coverage and general cleaning of large surfaces like patios or car bodies.
 - **Concentrated:** For stubborn dirt and grime on smaller, tough areas.
 - **Atomized Rinsing:** For delicate surfaces or light rinsing.

Rotate the nozzle head to select the desired spray pattern.

4. **Begin Cleaning:** Aim the nozzle at the surface to be cleaned and press the trigger. Engage the "labor-saving clip" on the trigger handle for continuous water flow without constant manual pressure.
5. **Adjust Pressure:** If your model has a pressure adjustment, use it to match the cleaning task.
6. **Apply Detergent (if applicable):** If using the detergent tank, ensure it is filled and the appropriate setting is selected on the nozzle or unit to dispense the solution.
7. **Finish Cleaning:** Release the trigger to stop the water flow. Turn off the water supply and remove the battery.



Image: An individual demonstrating the use of the cordless power washer to remove moss from a paved patio area.

MAINTENANCE

- **Clean Nozzle:** After each use, remove any debris from the nozzle and spray tip to prevent blockages.
- **Drain Water:** Disconnect the water supply and run the power washer briefly to drain any remaining water from the pump and hose. This prevents freezing damage in cold weather.
- **Clean Detergent Tank:** If used, rinse the detergent tank thoroughly with clean water.
- **Store Properly:** Store the power washer in a dry, frost-free area. Remove the battery if storing for extended periods.
- **Battery Care:** Store the battery in a cool, dry place and recharge it periodically if not in use to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No water pressure or weak spray.	- Insufficient water supply. - Clogged nozzle. - Air in the pump. - Low battery charge.	- Ensure water tap is fully open. - Clean the nozzle tip. - Run the unit without the nozzle until a steady stream of water emerges. - Recharge the battery.
Unit does not turn on.	- Battery not inserted correctly. - Battery is discharged. - Faulty battery or unit.	- Reinsert battery firmly. - Charge the battery. - Contact customer support if issues persist.
Water leaks from connections.	- Loose connections. - Damaged O-rings or seals.	- Tighten all connections. - Inspect and replace damaged O-rings or seals.

SPECIFICATIONS

Brand	Generic
Model Number	WTHG0RATWT7NT5K0
Dimensions (L x H)	41 cm x 14 cm (approx. 16 in x 5.5 in)
Material	Stainless steel / Polypropylene
Spray Settings	3-speed adjustable (Fan-shaped, Concentrated, Atomized Rinsing)
Power Source	Battery Powered (Cordless)



Image: Dimensional diagram of the power washer, indicating a length of 41cm (16 inches) and a height of 14cm (5.5 inches).

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact your retailer or the manufacturer directly. Keep your purchase receipt and model number (WTHG0RATWT7NT5K0) handy for faster service.

© 2023 Generic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question