

[Manuals.plus](#) /

› [EDJO](#) /

› EDJO 2.4G Full-Sized Wave Keys Ergonomic Wireless Keyboard and Mouse Combo Instruction Manual

EDJO B0GVD89LP7

EDJO 2.4G Full-Sized Wave Keys Ergonomic Wireless Keyboard and Mouse Combo Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your EDJO 2.4G Full-Sized Wave Keys Ergonomic Wireless Keyboard and Mouse Combo. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

SETUP INSTRUCTIONS

Follow these steps to set up your new wireless keyboard and mouse combo:

1. **Unpack the Devices:** Carefully remove the keyboard, mouse, and USB receiver from the packaging.
2. **Locate the USB Receiver:** The 2.4 GHz USB receiver is stored in the battery compartment on the back of the mouse. Open the battery cover on the mouse to retrieve it.
3. **Install Batteries:** The keyboard requires one (1) AA battery, and the mouse requires one (1) AA battery. Insert the batteries into their respective compartments, ensuring correct polarity. (Batteries are not included).
4. **Connect the USB Receiver:** Plug the USB receiver into an available USB port on your computer (desktop, laptop, Chromebook, etc.).

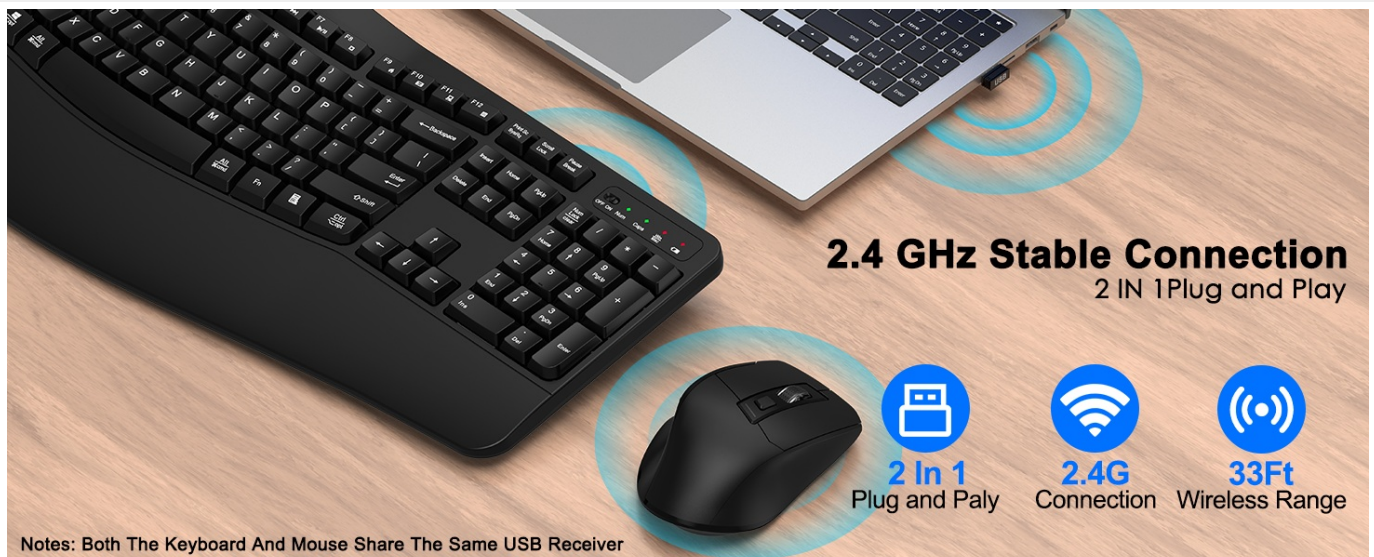


Image: Connecting the 2.4 GHz USB receiver to a computer. The receiver enables wireless communication for both the keyboard and mouse.

5. **Power On:** Turn on the keyboard and mouse using their respective ON/OFF switches. The devices should automatically connect to your computer. No additional software or drivers are required.

OPERATING INSTRUCTIONS

Keyboard Features

- **Wave Keys Ergonomic Design:** The keyboard features a wave-shaped key layout designed to naturally align with your hands and wrists, reducing strain during extended use.
- **Integrated Wrist Rest:** A wide wrist rest is integrated into the keyboard design to provide comfortable support for your wrists.
- **Adjustable Stand:** The keyboard includes an adjustable stand, allowing you to set the typing angle to a comfortable 12 degrees to further reduce wrist fatigue.



Image: The adjustable foldable stand provides a comfortable 12-degree typing angle to relieve fatigue.

Mouse Features

- **Ergonomic Contoured Shape:** The wireless mouse is designed to fit comfortably in the palm of your right hand, complementing its natural curve.

- **Navigation Buttons:** The mouse is equipped with forward and back buttons, located on the side, for faster web navigation.
- **Scroll Wheel:** A central scroll wheel allows for easy vertical scrolling.



Image: Detailed view of the wireless optical mouse, showing its ergonomic design and button functions.

2.4GHz Wireless Connection

The keyboard and mouse utilize a 2.4 GHz wireless connection, offering a strong and reliable signal up to 33 feet (10 meters) without delays or dropouts. Both devices connect via a single USB receiver.

Dual System Layout (Windows/macOS)

This combo supports both Windows and macOS operating systems. To switch between layouts, press the following key combinations:

- For Windows layout: Press **FN + Q**
- For macOS layout: Press **FN + W**

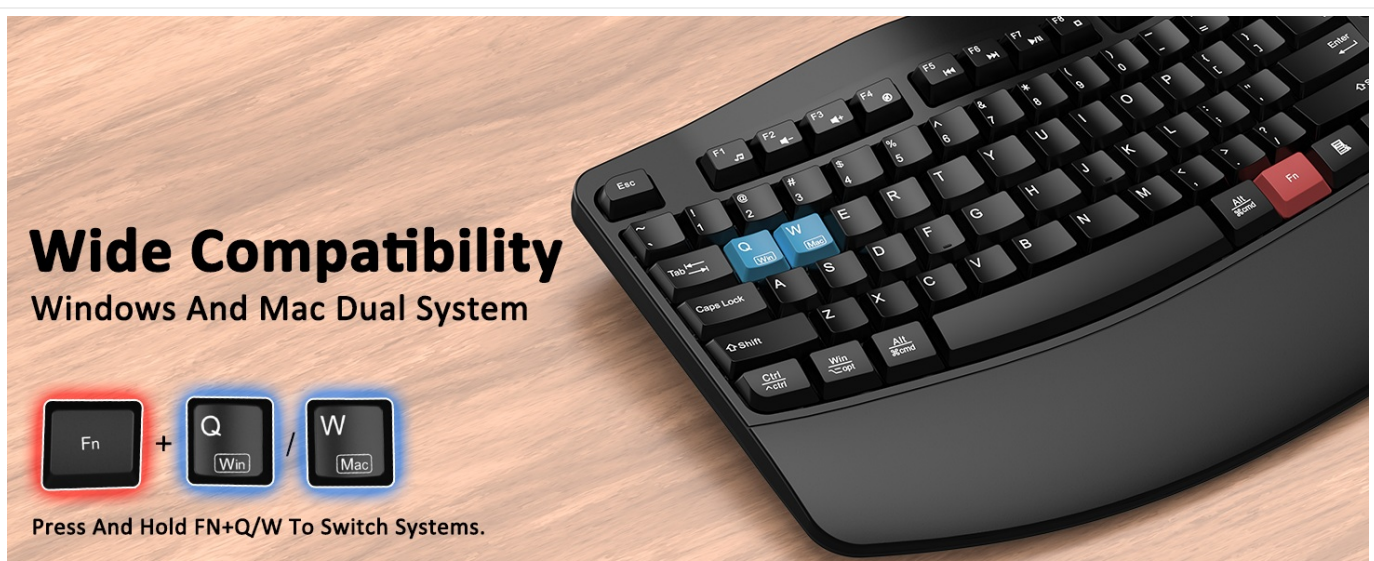


Image: Wide compatibility with Windows and Mac dual systems, showing how to switch layouts.

Multimedia Keys

The keyboard includes 12 multimedia keys (F1-F12) for quick access to functions such as music control, volume

adjustment, and browser shortcuts.



Image: Multimedia keys and number pad layout on the keyboard.

MAINTENANCE

Battery Replacement

The keyboard and mouse require AA batteries. When the devices stop responding or exhibit intermittent connectivity, it is likely time to replace the batteries. Open the battery compartment on the back of each device and replace the old batteries with new AA batteries, ensuring correct polarity.

Energy-Saving Function

To conserve battery life, both the keyboard and mouse feature an automatic power-saving function:

- The keyboard enters sleep mode after 30 seconds of inactivity.
- The mouse enters sleep mode after 15 minutes of inactivity.

To reactivate the devices from sleep mode, simply press any button on the keyboard or move/click the mouse. This function significantly extends battery life.



Image: Smart power-saving features for extended battery life.

Cleaning

To clean your keyboard and mouse, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with a mild cleaning solution can be used, but ensure no liquid enters the devices. Avoid abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low or dead batteries. Devices are in sleep mode. USB receiver not properly connected.	Replace batteries. Press any key/move mouse to wake up. Re-plug the USB receiver into a different USB port.
Intermittent connection or lag	Interference from other wireless devices. Distance from receiver is too great.	Ensure the devices are within 33 feet (10 meters) of the receiver. Move the receiver closer to the devices. Avoid placing the receiver near large metal objects or other strong wireless signals.
Keys or mouse buttons not working	Software conflict or driver issue. Physical obstruction.	Restart your computer. Ensure no debris is under the keys/buttons. Try connecting the combo to another computer to rule out a device-specific issue.
Cannot switch between Windows/macOS layout	Incorrect key combination.	Ensure you are pressing FN + Q for Windows or FN + W for macOS.

SPECIFICATIONS

- **Brand:** EDJO
- **Model:** B0GVD89LP7
- **Color:** Black
- **Connectivity Technology:** 2.4 GHz Wireless (USB Receiver)
- **Special Features:** Ergonomic, Wave Keys, Wrist Rest, Adjustable Stand, Multimedia Keys, Energy-Saving
- **Compatible Devices:** Laptop, Personal Computer (Windows XP/Vista/7/8/10/11, Mac, Chrome OS)
- **Keyboard Layout:** QWERTY
- **Keyboard Description:** Membrane
- **Power Source:** Keyboard: 1 AA battery (not included); Mouse: 1 AA battery (not included)
- **Item Weight:** Approximately 2.5 Pounds



Image: Package contents and dimensions of the keyboard and mouse.

WARRANTY AND AFTER-SALES SERVICE

EDJO guarantees hassle-free after-sales warranty service for all customers who purchase this wireless keyboard and mouse set. If you encounter any issues or require support, please contact us directly. We are committed to providing a satisfactory solution as soon as possible, even if the standard return period has expired.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please refer to the contact information provided with your product packaging or visit the official EDJO support website. Our customer service team is available to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GVD89LP7>

More documents and user manuals: <https://manuals.plus/>