

[Manuals.plus](#) /

› [SILKYDRY](#) /

› SILKYDRY Rolling Storage Cart with 10 Drawers (Model SK-JV14019GW) - Instruction Manual

SILKYDRY SK-JV14019GW

SILKYDRY Rolling Storage Cart with 10 Drawers

Model: SK-JV14019GW

INTRODUCTION

Thank you for choosing the SILKYDRY Rolling Storage Cart with 10 Drawers. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new storage solution. Please read these instructions carefully before use and retain them for future reference.



The SILKYDRY Rolling Storage Cart with 10 Drawers, featuring a wooden top and white frame, shown in a home office environment.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the cart on a soft, clean surface to prevent scratches.
- Do not overload the drawers or the top surface. Refer to the specifications for weight capacity.
- Keep small parts away from children during assembly to avoid choking hazards.
- Always lock the casters when the cart needs to remain stationary to prevent accidental movement.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- 1 x Metal Frame
- 1 x Wooden Top Panel

- 10 x Plastic Drawers (Small)
- 4 x Casters (2 with locking brakes)
- Assembly Hardware (screws, wrench, etc.)
- 1 x Instruction Manual



An exploded view of the cart components, showing the metal frame, individual drawers, and the wooden top.

SETUP AND ASSEMBLY

Follow these steps to assemble your rolling storage cart:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list to ensure nothing is missing.
2. **Attach Casters:** Insert the four casters into the designated holes at the bottom of the metal frame. Ensure that the two casters with locking brakes are positioned on the same side for easier access. Tighten securely.
3. **Assemble Frame:** Connect the vertical and horizontal metal frame pieces using the provided hardware. Ensure all screws are tightened firmly but do not overtighten.
4. **Place Wooden Top:** Position the wooden top panel onto the top of the assembled metal frame. It

should fit securely.

5. **Insert Drawers:** Slide each plastic drawer into its respective slot in the metal frame. The drawers are designed to glide smoothly on the tracks.

OPERATING INSTRUCTIONS

Using the Drawers

The cart features 10 small plastic drawers. These drawers are ideal for organizing various items such as stationery, craft supplies, documents, or small household essentials. Each drawer has a convenient handle for easy access.



Various items like office supplies, stationery, and craft supplies organized within the cart's drawers.

Moving the Cart

The cart is equipped with four 360-degree swivel casters for effortless mobility. To move the cart, simply push or pull it to your desired location. For stability, two of the casters include locking brakes.



Effortless to Move

Equipped with 4 universal casters



360° Swiveling



Wear Resistant



Noise-Free



A detailed view of the cart's casters, highlighting the 360-degree swivel and the locking mechanism.

Locking the Wheels

To prevent the cart from moving, press down on the lever located on the two locking casters. To unlock, lift the lever up. Always ensure the brakes are engaged when the cart is stationary, especially on uneven surfaces.

MAINTENANCE

- **Cleaning:** Wipe the metal frame, wooden top, and plastic drawers with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Caster Care:** Keep the casters free of debris (hair, lint) to ensure smooth rolling.



Close-up of the wooden top, showing its smooth, easy-to-clean surface.

TROUBLESHOOTING

- Drawers sticking or not sliding smoothly:** Ensure the drawers are inserted correctly into their tracks. Check for any obstructions or debris in the tracks.
- Cart wobbles:** Verify that all assembly screws are securely tightened. Ensure the cart is on a level surface.
- Casters not rolling:** Check for debris (hair, lint) wrapped around the caster wheels. Clean as necessary. Ensure caster brakes are disengaged.

SPECIFICATIONS

Feature	Detail
Model Number	SK-JV14019GW
Overall Dimensions (L x W x H)	14.5" x 13" x 33.5"

Drawer Dimensions (L x W x H)	13.5" x 10.5" x 2.5"
Material	Engineered Wood (MDF), Metal, Plastic (PP)
Color	White
Number of Drawers	10
Total Weight Capacity	44 lbs
Net Weight	12 lbs

Product Dimensions



Detailed dimensions of the assembled cart and a single drawer.

WARRANTY AND SUPPORT

SILKYDRY is committed to product quality. While specific warranty details are not provided in this manual, we offer after-sales service and aim to respond to inquiries within 24 hours. For any questions, concerns, or assistance with your product, please contact our customer support through the retailer where you purchased the item.

