

253.23082103

Generic Freezer Door Gasket Installation and Maintenance Guide

Model: 253.23082103

1. PRODUCT OVERVIEW

This document provides instructions for the installation, operation, and maintenance of the Generic freezer door gasket, model 253.23082103. This gasket is designed to replace worn or damaged seals on various freezer models, ensuring an airtight closure to maintain optimal freezer performance and energy efficiency.



Image: A close-up view of the freezer door gasket, showing its flexible material and profile designed for sealing freezer doors.

2. COMPATIBILITY

This freezer door gasket is compatible with a wide range of freezer models from various brands. Please verify your freezer's model number against the list below to ensure proper fit.

Compatible with Electrolux models including: FFUH21F2NWB, FKFH21F7HWE, LFFH21F7HWK.

Compatible with Kelvinator models including: KFU21M7LW0, KFU21M7LW1, KFU21M7LW2.

Compatible with Crosley models including: CFUFH20LW0, CFUFH211PW1, CFUFHC21PW1, CFUFHC21PW2, CFUM21LS0, CFUM21LW1, CFUM21LW2, CFUM21LW3, CFUM21PW1, UL2100CA6, UL2100CA8, UL2110A0, UL2110A1, UL2500CA0, UL2500CA2, UL2500CA5, UL5000CA8, UL5000CA9.

Compatible with Gibson models including: GFU20F5AW1, GFU21M6AW7, GFU2065FWA, GFU2124FWA, GFU21M3AW1, GFU21M4GW2, GFU2065FWB, GFU20F5AW0, GFU20F5AW2, GFU20F5AW3, GFU20F5AW4, GFU20F5AW6, GFU20F5AW7, GFU20F7GW4, GFU20F7GW5, GFU21D9FW1, GFU21M3AW0, GFU21M3AW2, GFU21M3AW3, GFU21M3AW5, GFU21M3AW6, GFU21M4GW1, GFU21M6AW0, GFU21M6AW1, GFU21M6AW2, GFU21M6AW3, GFU21M6AW4, GFU21M6AW6, GFU21M6HW1, GFU21M6HW2, GFU21M7HW2.

Compatible with Kenmore models including: 253.21021105, 253.21041103, 253.21041108, 253.23024100, 253.21021100, 253.21021101, 253.21021102, 253.21021103, 253.21021104, 253.21041100, 253.21041101, 253.21041102, 253.21041104, 253.21041107, 253.21082100, 253.21082101, 253.21082102, 253.21082103, 253.21082104, 253.21082106, 253.21082107, 253.21111100, 253.21111101, 253.21111102, 253.21111103, 253.23024101, 253.23024102, 253.23024103, 253.23024104, 253.23082100, 253.23082101, 253.23082102, 253.23082103, 253.23082104, 253.23114100, 253.23114101, 253.23114102, 253.24042100, 253.24042101, 253.24042102, 253.24042103, 253.24042104, 253.24082100, 253.24082101, 253.24082102, 253.24082103, 253.24082104, 253.24092101, 253.24092102, 253.24092103, 253.24092104, 253.24092105, 253.26042100, 253.26052100, 253.26052101, 253.26052102, 253.26052103, 253.26052104, 253.26062100, 253.26062101, 253.26062102, 253.26062103, 253.26062104, 253.26072100, 253.26072101, 253.26072102, 253.26072103, 253.26082100, 253.26082101, 253.26082102, 253.26092100, 253.26092101, 253.27042700, 253.27042701, 253.27042702, 253.27042703, 253.27042704, 253.27042705, 253.28042800, 253.28042801, 253.28042802, 253.28042803, 253.28042804, 253.28042805, 253.28042807, 253.28042808, 253.28042809, 253.28052800, 253.28052801, 253.280528010, 253.280528011, 253.280528012, 253.280528013, 253.280528014, 253.280528015, 253.280528016, 253.28052802, 253.28052803, 253.28052805, 253.28052806, 253.28052807, 253.28052808, 253.28052809, 253.28062800, 253.28062801, 253.28092800, 253.28092801, 253.280928010, 253.280928011, 253.28092802, 253.28092803, 253.28092805, 253.28092806, 253.28092809, 253.29082990, 253.29082991, 253.29082992, 253.29082993, 253.29082994, 253.29111990, 253.29111991, 253.29111992, 253.9280210, 253.9280212, 253.9280213, 253.9280214, 253.9280215, 253.9280410, 253.9280411, 253.9280412, 253.9280413, 253.9280414, 253.9280415, 253.9280810, 253.9280811, 253.9280812, 253.9281110.

Compatible with Frigidaire models including: FFU20FC4AW0, FFU20FC6AW4, LFFH2067DW2, FFU20FC4AW1, FFU20F9GW3, FFU20FC6AW2, MFU20F3GW7, FFU20FC4AW2, FFU2064DW1, FFU21C3AW1, FFU20FC4CW0, FFU20F9GW2, FFU2124DW9, LFFH2067DW1, FFU20FC4CW2, FFU21C3AW0, AFFU2066DW1, FFU20FC4CW3, GLFU2067FW2, MFU21M3GW1, FFU17G9HW2, FFU2067FW0, FFU20F9GW5, FFU21C4CW6, GFU21M4GW0, MFU20F3GW9, F82U20F3W1, FFU2065FW2, FFU20FC6AW3, FFU20FC6CW0, FFU20FC6CW1, FFU20FK1CW0, FFU2124DW1, LFFU2065DW2, AFFU2066DW4, F82U20F3W0, FFU20F3AW2, FFU20F9GW0, FFU20FC3AW0, FFU20FC4CW1, FFU20FC6AW0, FFU20FC6AW1, FFU20G9HW1, FFU20IC8CW1, GFU20F7GW0, GFU20F7GW2, GLFU2067FW4, MFU20F3GW1, MFU20F3GW3, MFU20F3GW5, MFU20F3GW6, MFU21M3GW3, UL2494ECW8, UL5000ECW4, FFU2064DW2, FFU2064DW4, FFU2065FW0, FFU2065FW1, FFU20F3AW1, FFU20F9GW4, FFU20FC6AW6, FFU20FC6AW7, FFU20FC6AW8,

FFU20FC6CW2, FFU20IC8CW0, FFU21C4CW0, FFU21K2CW0, GFU20F7GW3, GLFU2067FW3, LFFU2065DW4, LFFU2065DW8, MFU20F3GW0, MFU20F3GW4, MFU21M3GW2, UL5000CA5, AFFU2066DW0, AFFU2066DW2, AFFU2066DW3, AFFU2066DW5, AFFU2066DW6, AFFU2067EW0, AFFU2067EW1, AFFU2067EW2, AFFU2067EW3, AFFU2068DW0, AFFU2068DW1, CFU21M3HW0, F82U20F3W2, FFFU20F3KW0, FFU2064DW0, FFU2064DW10, FFU2064DW11, FFU2064DW3, FFU2064DW5, FFU2064DW6, FFU2064DW7, FFU2064DW8, FFU2064DW9, FFU2065FW3, FFU2065FW4, FFU2065FW5, FFU2067FW1, FFU2067FW2, FFU2067FW3, FFU20F3AW0, FFU20F3AW3, FFU20F3AW4, FFU20F9GW1, FFU20F9HW0, FFU20F9HW1, FFU20F9HW2, FFU20F9HW3, FFU20FC6AW5, FFU20FC6CW3, FFU20FC6CW4, FFU20FG4AW0, FFU20FG4AW1, FFU20FG4AW2, FFU20FG6AW0, FFU20FG6AW1, FFU20FG6AW2, FFU20FK0DW0, FFU20FK0DW1, FFU20FK0DW2, FFU20FK0DW3, FFU20FK0DW4, FFU20FK1CW1, FFU20FK1CW2, FFU20G9GW0, FFU20G9GW1, FFU20G9GW2, FFU20G9HW0, FFU20G9HW2, FFU20G9HW3, FFU20IC8CW2, FFU20IC8CW3, FFU20IC8CW4, FFU2124DW0, FFU2124DW10, FFU2124DW11, FFU2124DW12, FFU2124DW13, FFU2124DW14, FFU2124DW15, FFU2124DW2, FFU2124DW3, FFU2124DW4, FFU2124DW5, FFU2124DW6, FFU2124DW7, FFU2124DW8, FFU21C2AW0, FFU21C4CW1, FFU21C4CW2, FFU21C4CW3, FFU21C4CW4, FFU21C4CW5, FFU21C5AW0, FFU21C5AW1, FFU21C5AW2, FFU21D7HW0, FFU21D7HW2, FFU21D7HW3, FFU21D9GW0, FFU21F5HWA, FFU21F5HWA, FFU21F5HWC, FFU21F5HWD, FFU21F5HWF, FFU21F5HWG, FFU21F5HWH, FFU21F5HWJ, FFU21F5HWK, FFU21F5HWL, FFU21F5HWM, FFU21F5HWN, FFU21F5HWR, FFU21F5HWS, FFU21F5HWT, FFU21F5HWU, FFU21F5HWV, FFU21F5HWW, FFU21F5HWX, FFU21F5HWY, FFU21F5HWZ, FFU21G3AW0, FFU21G3AW1, FFU21G5AW0, FFU21G5AW1, FFU21K2CW1, FFU21K2CW2, FFU21K2CW3, FFU21M7HWA, FFU21M7HWA, FFU21M7HWC, FFU21M7HWD, FFU21M7HWE, FFU21M7HWF, FFU21M7HWG, FFU21M7HWH, FFU21M7HWJ, FFU21M7HWK, FFU21M7HWL, FFU21M7HWM, FFU21M7HWN, FFU21M7HWP, FFU21M7HWQ, FFU21M8GW0, FFU21F2NWA, FKFH21F7HWA, FKFH21F7HWA, FKFH21F7HWC, FKFH21F7HWD, GFU20F7GW1, GFU21D9FW3, GFU21M7HW0, GFU21M7HW1, GLFH21F8HWA, GLFH21F8HWA, GLFH21F8HWC, GLFH21F8HWD, GLFH21F8HWE, GLFH21F8HWG, GLFH21F8HWH, GLFH21F8HWJ, GLFH21F8HWM, GLFH21F8HWN, GLFH21F8HWP, GLFU2067FW5, GLFU2067FW6, GLFU2067FW7, GLFU2067FW8, GLFU21F8HWG, KFU21M7LW3, LFFH2067DW3, LFFH2067DW4, LFFH2067DW6, LFFH2067DW7, LFFH21F7HWA, LFFH21F7HWA, LFFH21F7HWC, LFFH21F7HWD, LFFH21F7HWE, LFFH21F7HWF, LFFH21F7HWG, LFFH21F7HWH, LFFH21F7HWJ, LFFU2065DW0, LFFU2065DW1, LFFU2065DW10, LFFU2065DW3, LFFU2065DW5, LFFU2065DW6, LFFU2065DW7, LFFU2065DW9, MFU20F3GW10, MFU20F3GW2, MFU20F3GW8, MFU21M3GW0, TFFU2065FW0, TFFU2065FW1, TFFU2065FWA, TFFU2124DW0, TFFU2124DW1, TFFU2124DWA, UL2030ECW12, UL2030ECW13, UL2100CA1, UL2100CA2, UL2100ECW1, UL2100ECW3, UL2494CA0, UL2494CA5, UL2494CA6, UL2494ECW10, UL2494ECW11, UL4000CA0, UL4000ECW3, UL4000ECW4, UL4000ECW5, UL5000CA1, UL5000CA4, UL5000CA6, UL5000CA7, UL5000ECW3, UL5000ECW5, UL5000ECW7.

3. INSTALLATION INSTRUCTIONS

Follow these steps to replace your freezer door gasket. Always prioritize safety and disconnect power to the appliance before beginning any repair.

1. **Safety First:** Disconnect the freezer from its power source by unplugging it or turning off the circuit breaker.
2. **Empty Freezer (Optional but Recommended):** If possible, empty the freezer to make the door lighter and easier to work with.
3. **Remove Old Gasket:** Carefully pull the old gasket away from the door panel. Most gaskets are held in place by a retaining channel or screws. Note how the old gasket was installed to assist with the new installation.
4. **Clean the Gasket Channel:** Thoroughly clean the groove or channel where the gasket sits on the

freezer door. Remove any debris, ice, or adhesive residue using a mild cleaner and a soft cloth. Ensure the surface is dry before proceeding.

5. **Prepare New Gasket:** If the new gasket is creased or stiff from packaging, you can warm it gently with a hairdryer on a low setting or soak it in warm water for a few minutes to make it more pliable. Ensure it is dry before installation.
6. **Install New Gasket:** Starting from a corner, press the new gasket firmly into the retaining channel around the door. Work your way around the entire perimeter, ensuring the gasket is fully seated and flush. If screws were used, re-insert them.
7. **Check for Proper Seal:** Close the freezer door and check for any gaps or areas where the gasket is not sealing properly. You can use the "dollar bill test" by closing the door on a dollar bill; if you can easily pull it out, the seal is not tight enough in that area. Adjust the gasket as needed.
8. **Reconnect Power:** Once the gasket is securely installed and the door seals properly, reconnect the freezer to its power source.

4. OPERATING CONSIDERATIONS

The primary function of a freezer door gasket is to create an airtight seal, preventing warm air from entering the freezer and cold air from escaping. Proper operation is maintained by ensuring the gasket remains clean and free from obstructions.

- Ensure the freezer door closes completely and the gasket forms a tight seal after each use.
- Avoid overfilling the freezer, which can prevent the door from closing properly and compromise the gasket's seal.

5. MAINTENANCE

Regular maintenance of your freezer door gasket will extend its lifespan and ensure optimal freezer performance.

- **Regular Cleaning:** Clean the gasket regularly with a mild soap and warm water solution. Use a soft cloth to wipe away any food spills, dirt, or mold. Rinse thoroughly and dry completely.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, harsh chemicals, or sharp objects on the gasket, as these can damage the material and compromise the seal.
- **Inspect for Damage:** Periodically inspect the gasket for cracks, tears, hardening, or signs of wear. A damaged gasket should be replaced promptly to prevent energy loss and food spoilage.

6. TROUBLESHOOTING

If you experience issues with your freezer after gasket replacement, consider the following common problems and solutions:

- **Door Not Sealing Properly:**
 - Check if the gasket is fully seated in its channel.
 - Ensure there are no obstructions (e.g., food packaging) preventing the door from closing completely.
 - If the gasket is new and still stiff, gently warm it with a hairdryer to make it more flexible and allow it to conform to the door frame.
- **Excessive Frost Buildup:**

- This often indicates warm air is entering the freezer. Re-check the gasket seal as described above.
- Ensure the freezer door is not being opened too frequently or left open for extended periods.
- **Freezer Running Constantly:**
 - A poor door seal can cause the compressor to run more often to maintain temperature. Verify the gasket seal.
 - Ensure the freezer's temperature setting is appropriate.

7. SPECIFICATIONS

Manufacturer	generic
Part Number	253.23082103
Product Dimensions	1 x 11 x 1 inches
Item Model Number	253.23082103
Included Components	Door Gasket
ASIN	B0GVG4SPPP
Date First Available	March 30, 2026

8. WARRANTY AND SUPPORT

The warranty description for this product is not available. For support regarding installation or troubleshooting, please refer to the instructions provided in this manual or consult a qualified appliance technician.

For further assistance, please contact the retailer or manufacturer directly if contact information is available on your purchase documentation.