

GOWENIC GOWENICzftgqlx0io

GOWENIC Cassette Player and Recorder User Manual

Model: GOWENICzftgqlx0io

1. INTRODUCTION

Thank you for choosing the GOWENIC Cassette Player and Recorder. This device combines classic cassette playback and recording capabilities with modern features like Bluetooth transmission and an integrated speaker. Please read this manual carefully to ensure proper use and to fully enjoy your new device.

Package Contents:

- 1 x GOWENIC Cassette Player and Recorder
- 1 x USB Charging Cable
- 1 x User Manual

2. SETUP

2.1 Charging the Device

Before first use, ensure the cassette player is fully charged. Connect the provided USB charging cable to the device's charging port and to a standard USB power adapter (not included) or a computer's USB port.



Image: The GOWENIC Cassette Player shown next to its USB charging cable, illustrating the components included in the package.

2.2 Inserting a Cassette

1. Gently open the cassette compartment door.
2. Insert a standard audio cassette with the open edge facing towards the player's mechanism.
3. Close the cassette compartment door securely.

3. OPERATING INSTRUCTIONS

3.1 Basic Playback

To play a cassette, press the **PLAY** button. Use the **PAUSE** button to temporarily stop playback, and **STOP** to end playback. The **FF** (Fast Forward) and **RW** (Rewind) buttons allow you to navigate through the tape.



Image: An angled view of the cassette player, highlighting the tactile control buttons for playback, pause, fast forward, and rewind.

3.2 Recording Function

The device supports recording audio onto blank cassettes. To record, ensure a blank cassette is inserted. Press the **RECORD** button (often red) simultaneously with the **PLAY** button. The device can record from its built-in microphone or from external sources if connected.

3.3 Bluetooth Transmission

The GOWENIC Cassette Player features Bluetooth transmission, allowing you to wirelessly send audio from the cassette or external sources to Bluetooth-enabled headphones or speakers. *Note: This Bluetooth function is for transmission only and cannot connect to mobile devices as a receiver.*

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. Activate the Bluetooth transmission mode on the cassette player (refer to specific button/switch if available, otherwise it might be automatic when playing audio).
3. The player will automatically search for and connect to nearby Bluetooth receiving devices.

Wireless Transmitting

Sync with Wireless Headphones



Image: A person comfortably listening to the GOWENIC Cassette Player using wireless headphones, demonstrating the Bluetooth transmitting capability.

Wireless Streaming: Connect to your Wireless Headphones or Speakers



Image: The GOWENIC Cassette Player positioned next to a pair of wireless headphones, illustrating its ability to stream audio wirelessly to external Bluetooth devices.

3.4 Using the Built-in Speaker

The device features an integrated speaker for direct audio playback without the need for external headphones or speakers. Adjust the volume using the volume control dial, typically located on the side of the unit.

Classic Never Fades

Walkman with new tech:

- Rechargeable
- With built-in speaker
- Wireless Transmit



Image: The GOWENIC Cassette Player on a desk, showcasing its retro design and the built-in speaker, ready for direct audio playback.

4. MAINTENANCE

4.1 Cleaning the Device

- Wipe the exterior of the player with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as they may damage the finish.
- Periodically clean the tape heads and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.

4.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge it to about 50% capacity.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Battery is discharged.	Charge the device using the provided USB cable.
No sound during playback.	Volume is too low or muted. Headphones/speakers not connected or paired correctly. Tape heads are dirty.	Increase the volume. Ensure headphones/speakers are properly connected or Bluetooth paired. Clean the tape heads.
Poor sound quality.	Dirty tape heads or worn-out cassette tape.	Clean the tape heads. Try a different cassette tape.
Bluetooth connection issues.	Receiving device not in pairing mode or too far away. Bluetooth function is transmit-only.	Ensure your Bluetooth headphones/speaker are in pairing mode and within range. Remember the player transmits, it does not receive from mobile devices.

If you encounter problems not listed here, please refer to the support section or contact customer service.

6. SPECIFICATIONS

Model: GOWENICzftgqlx0io

Item Type: Cassette Player and Recorder

Material: ABS

Output Power: 2 W

Playback Frequency Range: 250 Hz - 6.3 kHz

Impedance: 4 ohms

Built-in Battery: 2000 mAh Polymer Battery

Bluetooth Support: Transmitter function only (cannot connect to mobile devices)

Country of Origin: China

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This GOWENIC product is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

7.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your GOWENIC Cassette Player, please contact GOWENIC customer support. Refer to the contact information provided on the product packaging or the official GOWENIC website for the most up-to-date support channels.

You can also visit the [GOWENIC brand page on Amazon](#) for more information.

