

Karl home 58 inch TV Stand

Karl home 58 inch TV Stand Instruction Manual

Model: B0GVGZGY6Q

INTRODUCTION

Thank you for choosing the Karl home 58 inch TV Stand. This modern media console is designed to accommodate TVs up to 65 inches, offering both aesthetic appeal and practical storage solutions. It features a fluted oval design, two cabinets with sliding doors, and adjustable open shelves. Constructed from durable engineered wood with sturdy black metal legs, this TV stand provides stable support and enhances any living room or bedroom decor.

SAFETY INFORMATION

- Always follow assembly instructions carefully.
- Do not exceed the maximum weight capacity of 150 lbs for the top surface and 17 lbs per shelf.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and retighten if necessary.
- Place the TV stand on a flat, stable surface to prevent wobbling or tipping.
- Keep small parts away from children during assembly.
- Avoid placing hot items directly on the surface; use coasters or protective pads.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included hardware list and diagrams in your physical manual for specific component identification.

- Top Panel
- Bottom Panel
- Side Panels (Left and Right)
- Back Panels
- Sliding Doors
- Adjustable Shelves
- Metal Legs
- Hardware Pack (screws, dowels, cam locks, etc.)

- Assembly Tools (e.g., Allen wrench, screwdriver)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the step-by-step instructions provided in the physical manual. Below are general guidelines and visual aids.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Verify all parts against the included list.
2. **Attach Metal Legs:** Secure the five black metal legs to the bottom panel of the TV stand using the provided screws. Ensure they are firmly attached for stability.
3. **Assemble Frame:** Connect the side panels to the bottom panel, then attach the top panel. Use cam locks and dowels as indicated in your manual to create a sturdy frame.
4. **Install Back Panels:** Secure the back panels to the rear of the unit. Ensure the cable management holes align correctly.
5. **Insert Adjustable Shelves:** Place the shelf pins into the desired holes within the open compartments. Slide the adjustable shelves onto these pins.
6. **Install Sliding Doors:** Carefully insert the sliding tambour doors into their designated tracks on the front of the unit. Test their movement to ensure smooth operation.
7. **Final Check:** Once assembled, gently move the TV stand to its desired location. Double-check all connections for tightness and stability.

Product Dimension



Figure 1: Product Dimensions. This image illustrates the overall size of the TV stand and the internal measurements of its compartments.



Figure 2: Key Features. This image details the hidden storage, cable management, adjustable shelving, and stable leg design.

Shown from different angles



Figure 3: Views from Different Angles. This image provides a comprehensive look at the TV stand from various perspectives, including the rear cable holes.

OPERATING INSTRUCTIONS

- **Sliding Doors:** The fluted tambour doors slide smoothly along their tracks. Gently push them left or right to reveal or conceal the storage compartments.
- **Adjustable Shelves:** To adjust the height of the open shelves, remove any items, lift the shelf, reposition the shelf pins to the desired height, and then place the shelf back onto the pins.
- **Cable Management:** Utilize the pre-drilled cable holes on the back panel to route power cords and media cables, keeping them organized and out of sight.

Both Elegant Decoration & Practicality



Figure 4: Sliding Tambour Door in Use. This image demonstrates the functionality of the sliding doors for accessing storage.

Fit for TV up to 60"



Figure 5: TV Size Compatibility. This image visually confirms the TV stand's suitability for televisions up to 60 inches.

MAINTENANCE

- **Cleaning:** Wipe the surface with a dry, soft cloth. For tougher spots, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** The wooden surface has water-resistant properties. Wipe up spills immediately to prevent staining or damage.
- **Inspection:** Periodically check all hardware connections to ensure they remain tight. Retighten any loose screws to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.

TROUBLESHOOTING

- **Wobbling:** Ensure the TV stand is on a level surface. Check that all five metal legs are securely attached and all

assembly screws are tightened.

- **Doors Not Sliding Smoothly:** Check the tracks for any obstructions or debris. Ensure the doors are correctly seated in their grooves. A small amount of silicone-based lubricant can be applied to the tracks if needed.
- **Missing Parts:** If any parts are missing or damaged upon arrival, contact Karl home customer support immediately for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Karl home
Model	58 inch TV Stand
Color	Oak
Material	Engineered Wood, Metal
Product Dimensions (L x W x H)	58" x 14" x 23"
Recommended TV Size	Up to 65 inches
Top Surface Weight Capacity	150 lbs
Shelf Weight Capacity	17 lbs per shelf
Number of Doors	2 (Sliding Tambour)
Number of Shelves	2 (Adjustable)
Assembly Required	Yes

WARRANTY AND SUPPORT

Karl home products are designed for quality and durability. For specific warranty details, please refer to the documentation included with your purchase or visit the official Karl home website. If you encounter any issues or require assistance with assembly or parts, please contact Karl home customer support. Keep your purchase receipt for warranty claims.

Customer Support: For inquiries, please visit the [Karl home Store on Amazon](#) or refer to the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GVGZGY6Q>

More documents and user manuals: <https://manuals.plus/>