

CREATE WIND CLEAR EASY S

CREATE WIND CLEAR EASY S Ceiling Fan User Manual

Model: WIND CLEAR EASY S (227380_674029)

1. INTRODUCTION

Thank you for choosing the CREATE WIND CLEAR EASY S Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions carefully before use and retain them for future reference.

The WIND CLEAR EASY S is a silent ceiling fan featuring a 40W DC Brushless motor, hidden retractable blades, and an integrated LED light with three temperature settings. It is designed for rooms up to 10 m² and includes a remote control for convenient operation.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Ensure the main power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- The mounting structure must be capable of supporting the weight of the fan (minimum 15 kg).
- Do not insert objects into the fan blades while the fan is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the remote control provided with the fan.

3. PACKAGE CONTENTS

Carefully unpack your ceiling fan and check that all items are present and undamaged:

- CREATE WIND CLEAR EASY S Ceiling Fan unit
- Remote Control
- Mounting Bracket and Hardware
- User Manual

4. SETUP AND INSTALLATION

Installation of the CREATE WIND CLEAR EASY S ceiling fan should be carried out by a professional electrician to ensure safety and compliance with electrical codes. The fan is designed for ceiling mounting.

4.1 Mounting the Fan

Ensure the ceiling joist or support structure can hold the fan's weight. Secure the mounting bracket to the ceiling using the provided hardware. Connect the electrical wiring according to the wiring diagram (not included in this general manual, refer to specific wiring instructions provided with the product packaging).



Image: The CREATE WIND CLEAR EASY S ceiling fan seamlessly integrated into a modern kitchen and dining space, demonstrating its discreet design.

4.2 Connecting Electrical Wiring

Connect the live, neutral, and ground wires from the ceiling to the corresponding wires on the fan. Ensure all connections are secure and insulated. Once wiring is complete, attach the fan body to the mounting bracket.

Inverno

Verano

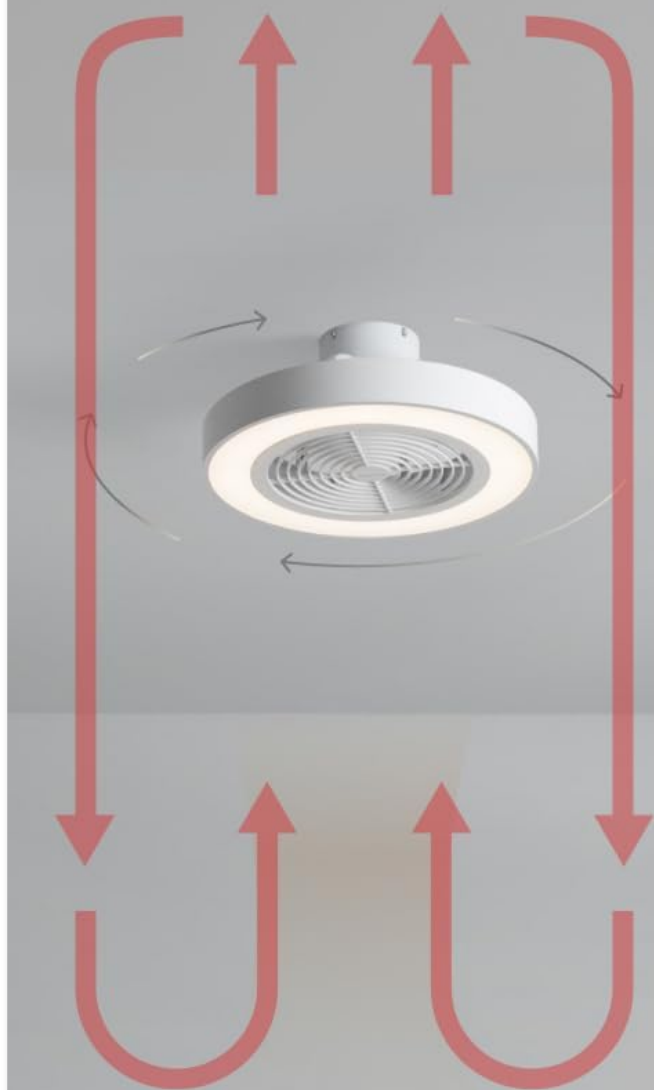


Image: A close-up bottom view of the fan, highlighting the circular LED light and the protective grille over the hidden fan blades.

5. OPERATING INSTRUCTIONS

Your CREATE WIND CLEAR EASY S ceiling fan is operated via the included remote control.

5.1 Remote Control Functions

- **Power On/Off:** Press to turn the fan and light on or off.
- **Fan Speed:** Adjust between 6 speeds.
- **Light Temperature:** Cycle through 3 LED light temperatures (warm, neutral, cool). *Note: Light intensity is not adjustable.*
- **Timer:** Set the fan to turn off automatically after 1, 2, or 4 hours. (Up to 8 hours with Wi-Fi models).
- **Summer/Winter Mode:** Reverse blade rotation for optimal air distribution.



Image: A detailed view of the fan, illustrating its key features: a programmable timer (1-4 hours), quiet operation, and 6 adjustable fan speeds.

5.2 Summer/Winter Function

This function allows you to optimize air circulation for different seasons:

- **Summer Mode:** Blades rotate counter-clockwise, creating a downward airflow that generates a cooling breeze.
- **Winter Mode:** Blades rotate clockwise, creating an upward airflow that circulates warm air trapped near the ceiling, helping to distribute heat more evenly throughout the room.



Image: A visual representation of the fan's dual functionality, showing how airflow is directed downwards for cooling in summer and upwards to redistribute warm air in winter.

5.3 LED Light Settings

The integrated LED light offers three color temperature options to suit your preference:

- **Warm White (2700K):** For a cozy and relaxing ambiance.
- **Neutral White (3300K):** For general illumination and everyday tasks.
- **Cool White (4000K):** For bright, focused lighting.



Image: A diagram illustrating the three distinct light temperature settings available: 2700K (warm), 3300K (neutral), and 4000K (cool).

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

6.1 Cleaning

- Always disconnect power before cleaning.
- Use a soft, damp cloth to wipe down the fan body and blades.
- Do not use abrasive cleaners or solvents, as these can damage the finish.
- Ensure no water enters the motor housing.

6.2 General Care

- Periodically check all connections and mounting hardware for tightness.
- No lubrication is required for the motor.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply Loose wiring connection Remote control battery low	Check circuit breaker/fuse Verify all wiring connections (consult electrician) Replace remote control batteries
Light does not work	No power supply Loose wiring connection LED module fault	Check power Verify wiring (consult electrician) Contact customer support
Remote control not responding	Batteries low or incorrectly inserted Obstruction between remote and fan Remote not paired (if applicable)	Replace batteries, check polarity Ensure clear line of sight Refer to remote pairing instructions (if provided with product)
Excessive noise	Loose mounting screws Obstruction in fan blades	Tighten all mounting screws Ensure nothing is interfering with blades

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	CREATE
Model Name	WIND CLEAR EASY S
Model Number	227380_674029
Color	White

Feature	Specification
Fan Design	Ceiling Fan with Hidden Blades
Power Source	Electric Cable
Dimensions (D x H)	Ø 50 cm x 19.5 cm
Special Feature	Remote Control, Hidden Blades, LED Light
Mounting Type	Ceiling Mount
Material	Aluminum (body), Plastic (blades)
Number of Speeds	6
Noise Level	40 Decibels
Power	40 Watts
Airflow	80 Cubic Meters per Minute
Voltage	240 Volts
Usage	Indoor
LED Light	30W, 3 Temperatures (Warm, Neutral, Cool)
Timer	1-4 hours (up to 8 hours with Wi-Fi model)

9. WARRANTY AND SUPPORT

Your CREATE WIND CLEAR EASY S Ceiling Fan is covered by legal guarantees and a 30-day return policy. For any questions, technical assistance, or warranty claims, please contact CREATE Specialized Customer Support.

Please retain your proof of purchase for warranty purposes.

© 2023 CREATE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question