

WOOX MX0294

WOOX MX0294 34-Inch Ceiling Fan Instruction Manual

Model: MX0294

1. INTRODUCTION

Thank you for choosing the WOOX MX0294 34-inch Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before installation and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the main power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local electrical codes.
- The mounting structure must be capable of supporting the weight of the fan (minimum 15 kg).
- Ensure all electrical connections are secure and comply with local regulations.
- Do not insert objects into the fan blades while the fan is operating.
- Keep children away from the fan during operation.
- This fan is designed for indoor use only.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- Ceiling Fan Motor Housing
- Fan Blades (3 x ABS, maple leaf type)
- LED Light Kit
- Remote Control with Wall Mount

- Mounting Bracket and Hardware
- Instruction Manual

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your WOOX MX0294 ceiling fan.

4.1 Mounting the Fan

Secure the mounting bracket to a ceiling joist or a suitable support structure. Ensure the bracket is firmly attached and can support the fan's weight.

4.2 Wiring Connections

Connect the electrical wires from the ceiling to the fan's wiring according to the provided wiring diagram. Ensure all connections are tight and insulated.

4.3 Attaching the Fan Body and Blades

Carefully lift the fan motor housing and attach it to the mounting bracket. Secure it with the provided screws. Then, attach the three ABS blades to the motor housing.



Image: The WOOX MX0294 ceiling fan installed, demonstrating powerful airflow. This image shows the fan's overall appearance and its ability to circulate air effectively.

Diseño Elegante y Moderno



Pantalla acrílica



Aspas de ABS de alta calidad

Image: A detailed view of the WOOX MX0294 ceiling fan, highlighting its elegant and modern design. The image focuses on the acrylic light screen and the high-quality ABS blades.

4.4 Installing the LED Light Kit

Connect the LED light kit to the fan's electrical connections and secure it to the bottom of the fan housing.

5. OPERATING INSTRUCTIONS

Your WOOX MX0294 ceiling fan is controlled by a smart remote control.

5.1 Remote Control Functions

Control Remoto Inteligente



Image: The smart remote control for the WOOX MX0294 ceiling fan, showing buttons for fan speed, light control, timer, natural wind mode, and night light mode.

- **Power ON/OFF:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the speed buttons (1-6) to adjust the fan's airflow. There are 6 adjustable speeds.
- **Light ON/OFF:** Separate button to control the light.
- **Light Color Temperature:** Cycle through 3 color temperatures: 6500K (Cool White), 4000K (Natural White), and 3000K (Warm White).
- **Light Dimming:** Adjust the brightness of the 15W LED light continuously from 0% to 100%.
- **Timer Function:** Set the fan to turn off automatically after 2 hours (2H) or 4 hours (4H).
- **Inverse Function (Summer/Winter Mode):** Change the direction of the fan blades to optimize air circulation for different seasons.
- **Natural Wind Mode:** Simulates a natural breeze by varying fan speeds.
- **Night Light Mode:** Activates a low-intensity light setting for nighttime use.

3 Tonos de Luz Ajustables



Image: The WOOX MX0294 fan light demonstrating its three adjustable color temperatures: 6500K (Cool White), 4000K (Natural White), and 3000K (Warm White).

Brillo Regulable de 15W



Image: The WOOX MX0294 fan light illustrating its 15W dimmable brightness feature, allowing continuous adjustment from 0% to 100%.

Función Inversa Todo el Año



Image: The WOOX MX0294 fan demonstrating its year-round inverse function, showing downward airflow for cooling in summer and upward airflow for circulating warm air in winter.

Funcionamiento Silencioso y Temporizador

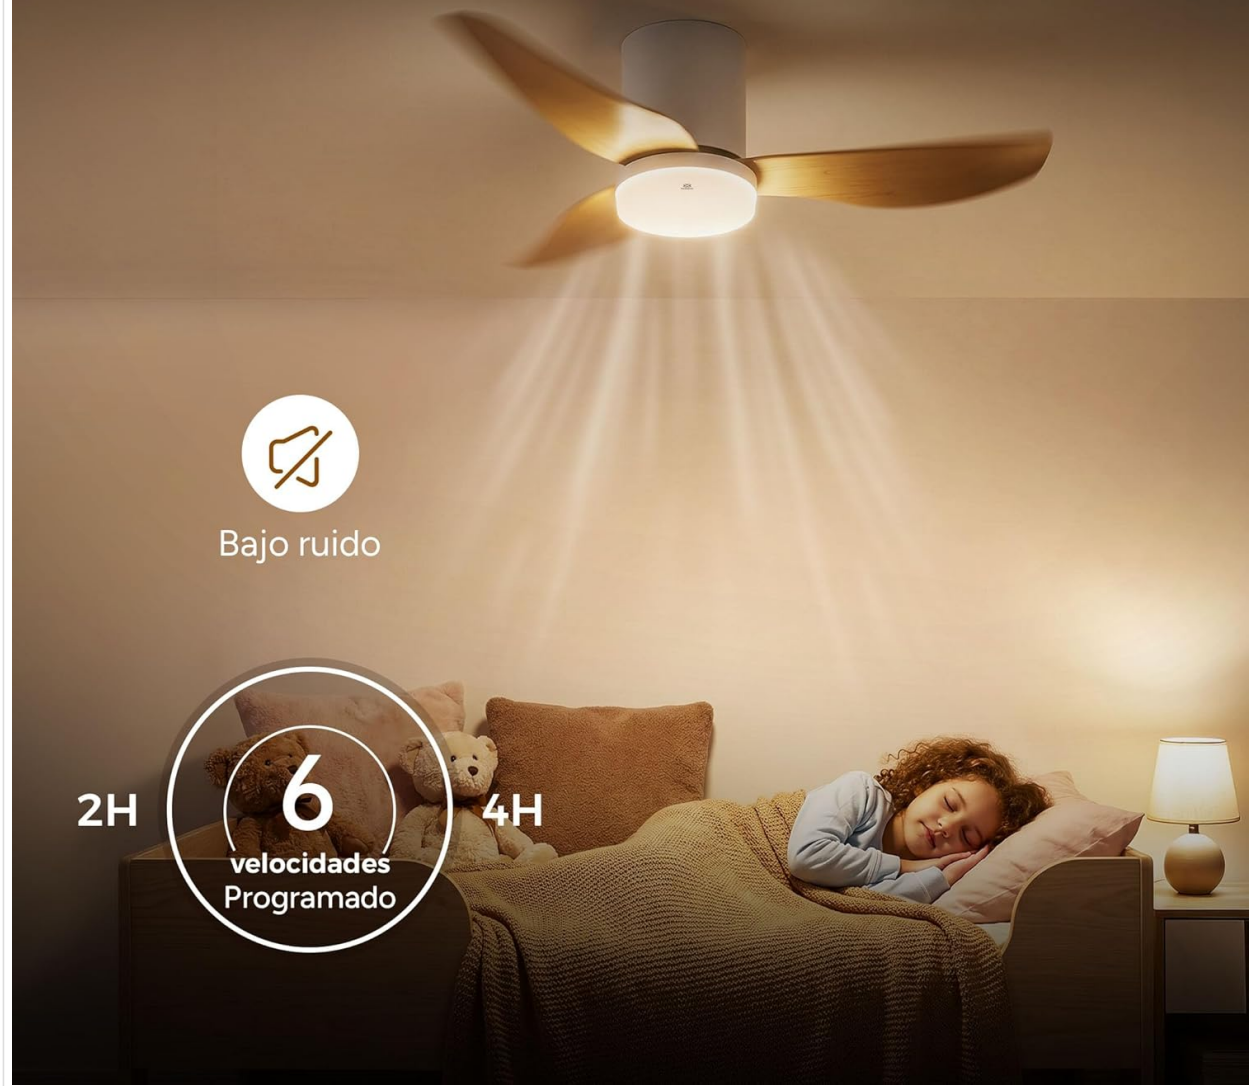


Image: The WOOX MX0294 fan highlighting its silent operation and programmable timer settings for 2 hours and 4 hours, ideal for undisturbed sleep.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Tightening:** Periodically check and tighten all screws on the fan blades and mounting hardware.
- **Lubrication:** The fan motor is permanently lubricated and does not require additional oiling.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

- **Fan Does Not Start:**
 - Check if the power supply is connected.

- Ensure the remote control batteries are working.
 - Verify all wiring connections are secure.
- **Fan Wobbly:**
 - Ensure all blade screws are tightened.
 - Check that the mounting bracket is securely installed.
- **Light Not Working:**
 - Check light wiring connections.
 - Ensure the light is turned on via the remote.
- **Remote Control Not Responding:**
 - Replace remote control batteries.
 - Ensure there are no obstructions between the remote and the fan receiver.

8. SPECIFICATIONS



Image: A table detailing the product parameters of the WOOX MX0294 ceiling fan, including fan size, diameter, light size,

speeds, blade type, color temperature, light source, dimming, and motor type.

Parameter	Specification
Fan Size	34 inches
Diameter	86 cm
Light Size	17 cm
Speeds	6 adjustable levels
Blade Type	3 ABS blades (maple leaf type)
Color Temperature	3000K / 4000K / 6500K
Light Source	LED with aluminum base (15W)
Dimming	Continuous adjustment
Motor	Pure copper DC 30W motor
Product Dimensions (D x W x H)	40 x 40 x 114 cm (packaging/overall)
Color	White

9. WARRANTY AND SUPPORT

WOOX products are designed for quality and reliability. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration.

For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the WOOX customer service department. Keep your proof of purchase for warranty validation.