

Dpofirs Dpofirs5io160ut29-12

Dpofirs USB MP3 Player Instruction Manual

Model: Dpofirs5io160ut29-12

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Dpofirs USB MP3 Player. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Portable Music Player
- 1 x Earphone
- 1 x Instruction Manual
- 1 x Storage Case

3. PRODUCT FEATURES

- **Versatile Music Playback:** Supports MP3 and WMA audio formats with synchronized display.
- **Clear LCD Screen:** Provides convenient visual information during use.
- **Automatic Shutdown:** Features a programmable auto-shutdown function to conserve battery life.
- **Expandable Storage:** Supports external memory cards up to 32GB (card not included).
- **Long-Lasting Power:** Operates on 1 AA battery (not included), offering up to 20 hours of playback.
- **Compact and Portable:** Measures approximately 9.6x2.6x1.6cm (3.78x1.02x0.63in) for easy transport.
- **USB Connectivity:** Integrated USB port for direct connection to a computer for music transfer.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the device.
2. Insert one AA battery, ensuring correct polarity (+/-).

3. Close the battery compartment securely.



Figure 4.1: The MP3 player connected to a desktop computer, emphasizing its battery-powered operation.

4.2 Memory Card Installation (Optional)

To expand storage, insert a microSD card (up to 32GB, not included) into the designated slot on the player.



Figure 4.2: The MP3 player connected to a monitor, highlighting the LCD display and its support for a 32GB memory card.

4.3 Transferring Music Files

1. Connect the MP3 player directly to a USB port on your computer.
2. The player will appear as a removable disk drive.
3. Drag and drop your MP3 or WMA music files into the player's storage or the inserted memory card.
4. Safely eject the device from your computer before disconnecting.



Figure 4.3: The MP3 player being connected to a laptop via its integrated USB port for file transfer.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Long press the power key until the LCD screen illuminates.
- **To Power Off:** Long press the power key again until the screen turns off.

5.2 Music Playback

- **Play/Pause:** Press the central play/pause button.
- **Next Track:** Press the forward button.
- **Previous Track:** Press the backward button.
- **Volume Control:** Use the dedicated volume buttons (usually '+' and '-') to adjust the sound level.



Figure 5.1: Close-up of the MP3 player's control buttons, including play/pause, navigation, and microphone.

5.3 Auto Shutdown Function

The player features an automatic shutdown function to conserve battery. This can typically be configured in the device settings menu. Refer to the on-screen prompts for specific adjustment options.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Avoid liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace the AA battery when the device indicates low power or fails to turn on. Always use a fresh AA battery.
- **Storage:** When not in use for extended periods, remove the battery and store the player in a cool, dry place, preferably in its storage case.
- **Environmental Conditions:** Avoid exposing the player to extreme temperatures, direct sunlight, dust, or moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Low or dead battery; incorrect battery installation.	Replace with a fresh AA battery; ensure correct polarity.
No sound from earphones.	Earphones not properly connected; volume too low; corrupted audio file.	Ensure earphones are fully plugged in; increase volume; try a different audio file.
Cannot transfer files to player.	Player not properly connected to computer; USB port issue; driver issue.	Reconnect player; try a different USB port; ensure player is recognized by computer.
Display is blank or frozen.	Software glitch; low battery.	Remove and reinsert battery to reset; replace battery.

8. SPECIFICATIONS

- **Model Name:** Dpofirs5io160ut29-12
- **Interface:** USB 2.0
- **Supported Audio Formats:** MP3, WMA
- **Expandable Storage:** Up to 32GB (MicroSD card, not included)
- **Battery:** 1 x AA Battery (not included)
- **Battery Life:** Up to 20 hours playback
- **Display:** LCD Screen
- **Dimensions:** Approx. 9.6 x 2.6 x 1.6 cm (3.78 x 1.02 x 0.63 inches)
- **Material:** Plastic, Metal
- **Color:** Blue



9. WARRANTY AND SUPPORT

This Dpofirs product is covered by a manufacturer warranty for 90 days from the date of purchase.

For technical support, warranty claims, or further assistance, please visit the official Dpofirs store or contact customer service through the retailer where the product was purchased.

Dpofirs Store: <https://www.amazon.com/stores/Dpofirs/page/1F296CB7-D5F5-4E09-9904-F4D25B34578E>