

BLACK+DECKER EM0P04P11

BLACK+DECKER EM0P04P11 1.1 Cu Ft Countertop Microwave Oven

Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BLACK+DECKER EM0P04P11 1.1 Cu Ft Countertop Microwave Oven. Please read it thoroughly before first use and retain it for future reference. This microwave oven features a 1.1 cubic foot capacity, 1000 watts of cooking power, 10 power levels, 6 one-touch presets, express cooking, and a child safety lock.



The BLACK+DECKER EM0P04P11 microwave oven on a kitchen counter, surrounded by prepared dishes like pizza, popcorn, and baked potatoes, demonstrating its use for various meals.

SETUP AND INSTALLATION

Placement

- Place the microwave oven on a flat, stable surface capable of supporting its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation around the unit. Maintain a minimum clearance of 4 inches (10 cm) from the top, sides, and rear of the oven to allow for proper airflow.
- The product dimensions are approximately 20.6 inches (W) x 16.5 inches (D) x 11.8 inches (H).

Defrost by Time/Weight



An interior view of the microwave oven with a pizza inside, showing key dimensions: 20.6 inches width, 16.5 inches depth, 11.8 inches height, and an internal turntable diameter of 13.1 inches.

Turntable Installation

1. Place the turntable ring inside the microwave cavity.
2. Position the glass turntable plate securely on top of the turntable ring. Ensure it is centered and sits properly on the coupler.

OPERATING INSTRUCTIONS

Basic Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door.
3. Enter the desired cooking time using the number pad.
4. Press the **Power** button to select a power level (1-10). The default is 100% power.
5. Press **START** to begin cooking.

Express Cooking

For quick heating, simply press the **START/+30 Sec** button to cook at 100% power for 30 seconds. Each subsequent press adds 30 seconds to the cooking time.

Preset Menus

The microwave features 6 one-touch preset cooking menus for common food items:

- **Popcorn**
- **Potato**
- **Pizza**
- **Frozen Vegetable**
- **Beverage**
- **Dinner Plate**

To use a preset, place the food in the oven and press the corresponding preset button. The oven will automatically set the cooking time and power level.



6 Auto Cooking Menus

Quick Start buttons
for easy meal prep and reheating

A visual guide to the six one-touch cooking presets: Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, and Dinner Plate, each with an illustrative image of the food item.

Defrosting by Time/Weight

This feature allows for even defrosting based on either time or the weight of the food item.



Memory Function

Create shortcuts for your favorite settings

A graph illustrating the defrosting process by time, showing temperature changes over time, with a partially defrosted piece of meat in the foreground.

Child Safety Lock

To prevent unintended operation, the microwave is equipped with a child safety lock.

- **To Activate:** Press and hold the **STOP/CANCEL** button for 5 seconds. The control panel will lock, and an indicator will appear on the display.
- **To Deactivate:** Press and hold the **STOP/CANCEL** button again for 5 seconds. The lock indicator will disappear, and the control panel will be active.



Child Safety Lock

Child safety lock to disable the control panel, while door open lock to disable the door

The BLACK+DECKER EM0P04P11 microwave on a counter with a child safety lock icon, indicating the feature that disables the control panel and door.

Memory Function

The microwave includes a memory function to save frequently used cooking settings for quick access.

Multi-stage Cooking

One-Touch Frozen-to-Cooked

Time (s)	Power Level (%)
0s	0
120s	50
240s	70
600s	70

A close-up of the microwave's control panel, highlighting features such as Defrost by time/weight, 6 Preset menus, an easy-to-read display, and the Child Safety Lock function.

CARE AND MAINTENANCE

Cleaning the Interior

- Always unplug the microwave oven before cleaning.
- Wipe the interior cavity with a damp cloth after each use to remove food splatters. For stubborn stains, use a mild detergent.
- The glass turntable is removable and dishwasher safe for easy cleaning.
- Clean the turntable support and roller ring regularly.

Easy to Clean Interior

The 12.4-inch glass turntable is dishwasher safe



A collage of images demonstrating the easy-to-clean interior of the microwave, including wiping the inside, removing the turntable support, and placing the glass turntable in a dishwasher.

Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- The sleek black finish is designed to be fingerprint-resistant.

TROUBLESHOOTING

Specific troubleshooting steps for common issues are not provided in the source data. If you encounter problems with your microwave oven, please refer to the customer support section for assistance.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	EM0P04P11
Capacity	1.1 Cubic Feet
Wattage	1000 watts
Product Dimensions (D x W x H)	16.5"D x 20.6"W x 11.8"H
Color	Black
Installation Type	Countertop
Number of Power Levels	10
Special Feature	Child Safety Lock
Controller Type	Membrane Switch
Included Components	Microwave Oven
UPC	840296520611

WARRANTY INFORMATION

This BLACK+DECKER EM0P04P11 Countertop Microwave Oven comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

CUSTOMER SUPPORT

For technical assistance, service, or questions regarding your BLACK+DECKER microwave oven, please contact BLACK+DECKER customer support. Refer to the product packaging or the official BLACK+DECKER website for the most current contact information.