

[Manuals.plus](#) /

› [AGT INDUSTRIAL](#) /

› AGT INDUSTRIAL Heavy Duty Brush Cutter Motor (Model AGT-A2F55W2Z2) Instruction Manual

AGT INDUSTRIAL A2F55W2Z2

AGT INDUSTRIAL Heavy Duty Brush Cutter Motor Instruction Manual

Model: AGT-A2F55W2Z2

1. OVERVIEW

This manual provides essential information for the safe and effective installation, operation, and maintenance of the AGT INDUSTRIAL replacement motor, model AGT-A2F55W2Z2. This motor is designed for heavy-duty skid steer brush cutter attachments, specifically compatible with the HFRC72, HCRC72, and HDRC72 models. Please read this manual thoroughly before attempting any installation or operation.



Figure 1.1: The AGT INDUSTRIAL Heavy Duty Brush Cutter Motor (Model AGT-A2F55W2Z2). This image shows the overall design of the motor, which is black with yellow caps on the shafts.

2. SAFETY INFORMATION

Always prioritize safety when working with heavy machinery and hydraulic components. Failure to follow safety instructions can result in serious injury or death.

2.1 General Safety Precautions

- **Read the Manual:** Ensure all operators and maintenance personnel read and understand this manual and the brush cutter attachment's manual before use.
- **Personal Protective Equipment (PPE):** Always wear appropriate PPE, including safety glasses, gloves, and sturdy footwear.
- **Hydraulic System Safety:** Hydraulic fluid is under high pressure. Relieve all hydraulic pressure before disconnecting any lines or performing maintenance. High-pressure fluid can penetrate skin, causing severe injury.
- **Secure Equipment:** Ensure the brush cutter attachment and skid steer are on stable, level ground and properly secured before working on them.

- **Authorized Personnel:** Only trained and authorized personnel should perform installation, maintenance, or repairs.
- **Original Parts:** Use only genuine AGT INDUSTRIAL replacement parts to ensure compatibility and safety.

3. SETUP AND INSTALLATION

This section outlines the general steps for replacing the motor. Refer to your specific brush cutter attachment's service manual for detailed, model-specific instructions.

3.1 Pre-Installation Checks

- Verify that the replacement motor (AGT-A2F55W2Z2) is the correct model for your brush cutter attachment (HFRC72, HCRC72, or HDRC72).
- Inspect the new motor for any signs of shipping damage.
- Gather all necessary tools and equipment.

3.2 Removal of Old Motor

1. Park the skid steer on a level surface, engage the parking brake, and lower the brush cutter attachment to the ground.
2. Shut off the skid steer engine and relieve all hydraulic pressure in the system.
3. Disconnect hydraulic lines from the old motor. Cap all open lines and ports immediately to prevent contamination.
4. Remove mounting bolts securing the old motor to the brush cutter attachment.
5. Carefully remove the old motor.

3.3 Installation of New Motor

1. Clean the mounting surface on the brush cutter attachment.
2. Position the new AGT-A2F55W2Z2 motor onto the mounting surface, ensuring proper alignment.
3. Install and tighten mounting bolts to the manufacturer's specified torque.
4. Connect hydraulic lines to the new motor, ensuring correct port connections (e.g., pressure, return, case drain). Use new O-rings or seals as required.
5. Double-check all connections for tightness.

3.4 Post-Installation Checks

- Start the skid steer and slowly engage the hydraulic system.
- Check for any hydraulic fluid leaks around the motor and connections.
- Operate the brush cutter attachment at low speed initially to ensure proper function.

4. OPERATING INSTRUCTIONS

The AGT-A2F55W2Z2 motor is an integral component of your brush cutter attachment. Proper operation of the brush cutter will ensure the longevity and performance of the motor.

- **Refer to Brush Cutter Manual:** Always follow the operating instructions provided in the brush cutter attachment's specific manual.
- **Monitor Hydraulics:** Pay attention to hydraulic pressure and temperature gauges on your skid steer. Operating outside recommended ranges can damage the motor.

- **Avoid Overloading:** Do not attempt to cut material beyond the brush cutter's rated capacity, as this can strain the motor.
- **Smooth Engagement:** Engage the brush cutter's hydraulic power smoothly to prevent sudden shocks to the motor.

5. MAINTENANCE

Regular maintenance is crucial for the optimal performance and extended lifespan of your AGT-A2F55W2Z2 motor.

5.1 Routine Checks

- **Inspect for Leaks:** Regularly check the motor and hydraulic connections for any signs of fluid leaks. Address leaks immediately.
- **Check Mounting Bolts:** Periodically inspect and ensure all mounting bolts are tight.
- **Hydraulic Fluid Quality:** Ensure the hydraulic fluid in your skid steer is clean and at the correct level. Contaminated or low fluid can severely damage hydraulic components, including the motor. Follow the skid steer manufacturer's recommendations for fluid changes and filter replacements.
- **Cleanliness:** Keep the motor and surrounding area clean from dirt, debris, and excessive grease buildup.

6. TROUBLESHOOTING

This section provides guidance for common issues. For complex problems, consult a qualified technician.

Problem	Possible Cause	Solution
Motor not rotating or rotating slowly	Low hydraulic fluid level Clogged hydraulic filter Incorrect hydraulic connections Insufficient hydraulic pressure from skid steer	Check and refill hydraulic fluid Replace hydraulic filter Verify hydraulic line connections Consult skid steer manual or technician
Excessive noise or vibration	Air in hydraulic system Loose mounting bolts Damaged motor bearings (internal issue)	Bleed hydraulic system Tighten mounting bolts Contact AGT INDUSTRIAL support for service
Hydraulic fluid leaks	Loose fittings Damaged O-rings or seals Cracked housing	Tighten fittings Replace O-rings/seals Contact AGT INDUSTRIAL support for service
Motor overheating	Low hydraulic fluid Clogged cooler Operating under excessive load	Check and refill hydraulic fluid Clean hydraulic cooler Reduce operating load

7. SPECIFICATIONS

Key specifications for the AGT INDUSTRIAL Heavy Duty Brush Cutter Motor (Model AGT-A2F55W2Z2).

- **Manufacturer:** AGT Industrial
- **Model Number:** A2F55W2Z2

- **Product Dimensions:** Approximately 15 x 5.5 x 5.5 inches
- **Color:** Black
- **Included Components:** Motor Assembly
- **Compatibility:** AGT Heavy-duty skid steer brush cutter attachments (HFRC72, HCRC72, HDRC72)



Figure 7.1: The motor with a measuring tape indicating its approximate length. The measurement shows the motor is approximately 15 inches long.



Figure 7.2: The motor with a measuring tape indicating its approximate diameter/width. The measurement shows the motor is approximately 5.5 inches wide.

8. WARRANTY AND SUPPORT

For specific warranty information regarding your AGT INDUSTRIAL Heavy Duty Brush Cutter Motor, please refer to the documentation provided at the time of purchase or contact AGT INDUSTRIAL directly. For technical support, replacement parts, or service inquiries, please reach out to AGT Industrial customer service.

AGT Industrial Contact Information:

Please visit the official AGT Industrial website or refer to your purchase invoice for the most current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GVQ2K93Y>

More documents and user manuals: **<https://manuals.plus/>**