

[Manuals.plus](#) /

> [Joby](#) /

> JOBY TelePod Mini Selfie Stick Tripod User Manual

Joby TP02

JOBY TelePod Mini Selfie Stick Tripod User Manual

Model: TP02

INTRODUCTION

The JOBY TelePod Mini is a versatile 3-in-1 device designed for mobile content creators. It functions as a compact selfie stick, a stable handheld grip, and a desktop tripod. This manual provides instructions for its proper setup, operation, and maintenance to ensure optimal performance.

WHAT'S IN THE BOX

Verify that all components are present in your package:

- Mini Selfie Stick Tripod
- Bluetooth Remote
- Mini Fill Light (if included with your model)
- Charging Cable (for fill light/remote)
- Carabiner Lanyard
- User Manual

Packing List

Mini Selfie Stick Tripod *1

Fill Light *1

Charging Cable *1

User Manual *1



Figure 1: Contents of the JOBY TelePod Mini package.

1. Unfolding the Tripod

To use the TelePod Mini as a tripod or selfie stick, gently pull the legs outwards from the base until they lock into position. The center column can be extended by pulling it upwards.





Figure 2: The TelePod Mini in its fully extended tripod configuration.

2. Mounting Your Phone

The integrated phone holder is spring-loaded. Carefully pull the top jaw upwards and insert your smartphone. Ensure the phone is securely gripped by both jaws. The holder supports both horizontal (landscape) and vertical (portrait) orientations by rotating the phone within the clamp.

Go Anywhere, Shoot Anything

Your 3-in-1 Creative Partner

At a mere 146g, PodZilla is comfortable to hold and folds flat for easy storage, sliding into your bag so you can create wherever you go.

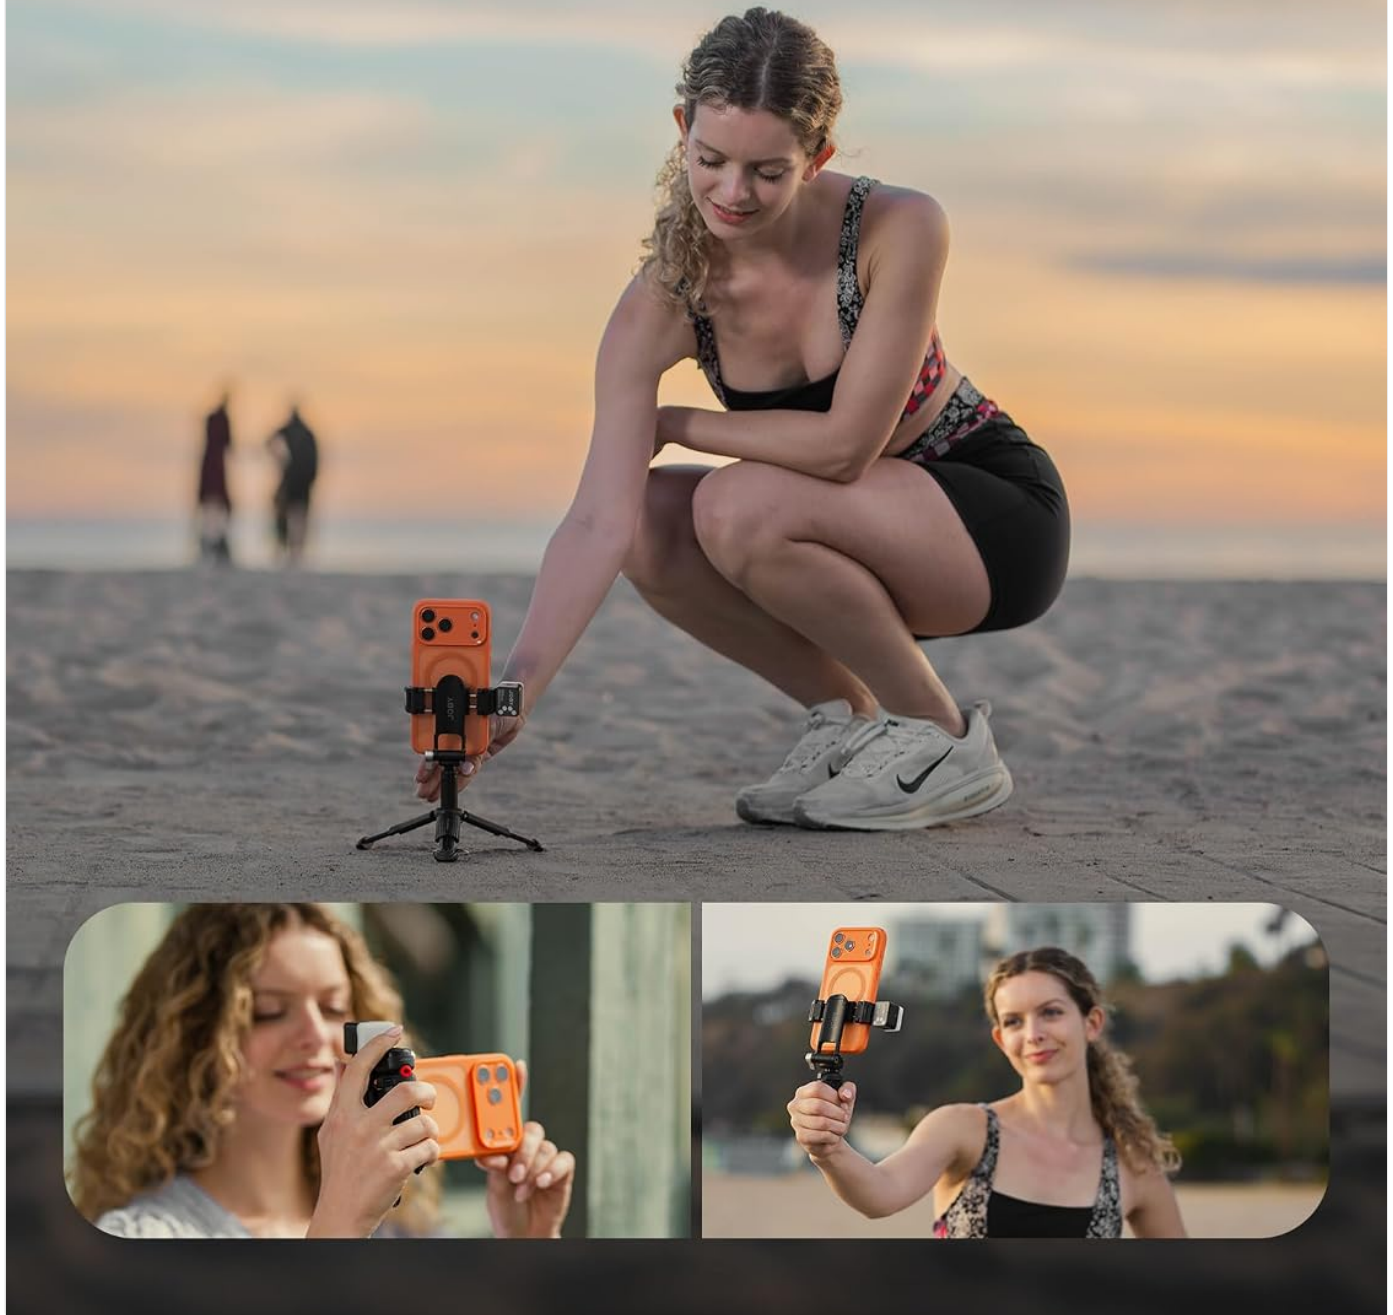


Figure 3: Mounting a smartphone in the TelePod Mini holder.

3. Pairing the Bluetooth Remote

1. Ensure the Bluetooth remote is charged.
2. Turn on the remote by pressing and holding the power button until the indicator light flashes.

3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "JOBY Remote" or a similar name to pair. The indicator light on the remote will stop flashing once paired.
5. The remote can be attached to the tripod handle or used separately for remote shooting.

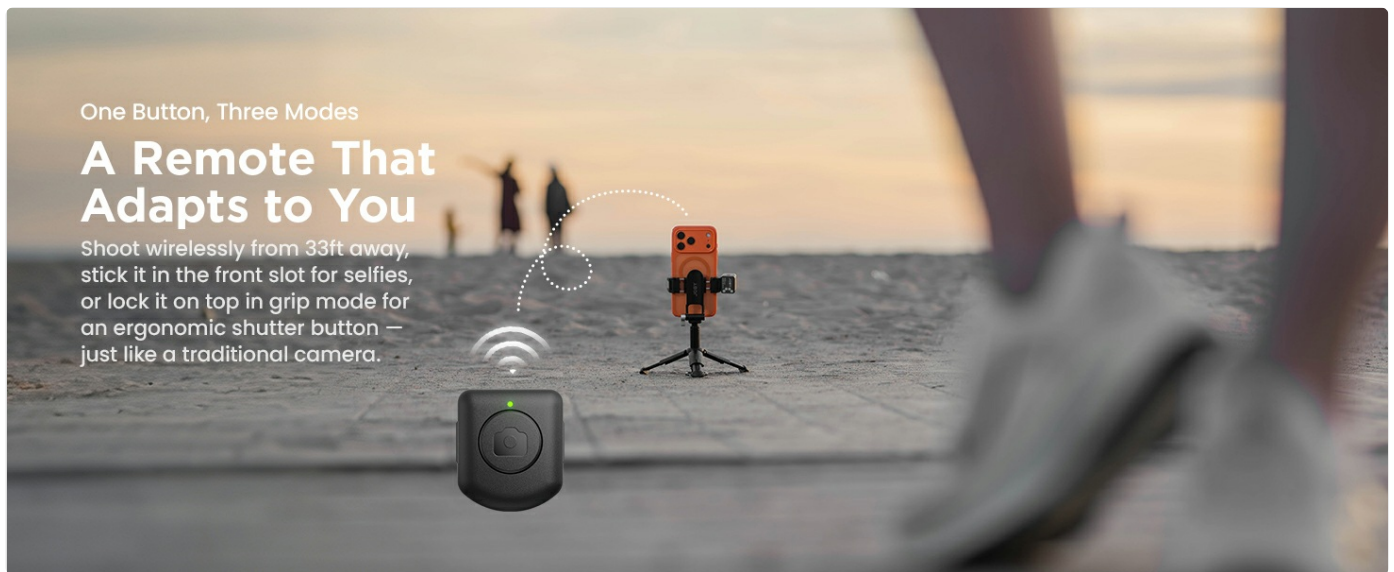


Figure 4: The Bluetooth remote can be used wirelessly from a distance.

OPERATING MODES

1. Selfie Stick Mode

With the legs folded, extend the center column to your desired length. Hold the grip firmly and use the Bluetooth remote to capture photos or start video recording.

Find the Perfect Angle

Stretch the telescopic pole up to 14.8in for creative angles and selfies, extend the legs for a wider base, and dial in your exact framing with 360° rotation and 225° tilt.



Figure 5: Using the TelePod Mini in selfie stick mode.

2. Handheld Grip Mode

Keep the center column retracted and the legs folded for a compact handheld grip. This mode is suitable for stable video recording or vlogging on the go.

3. Desktop Tripod Mode

Extend the legs fully and place the TelePod Mini on a flat surface. Adjust the center column height as needed. This mode is ideal for video calls, live streaming, or hands-free content creation.

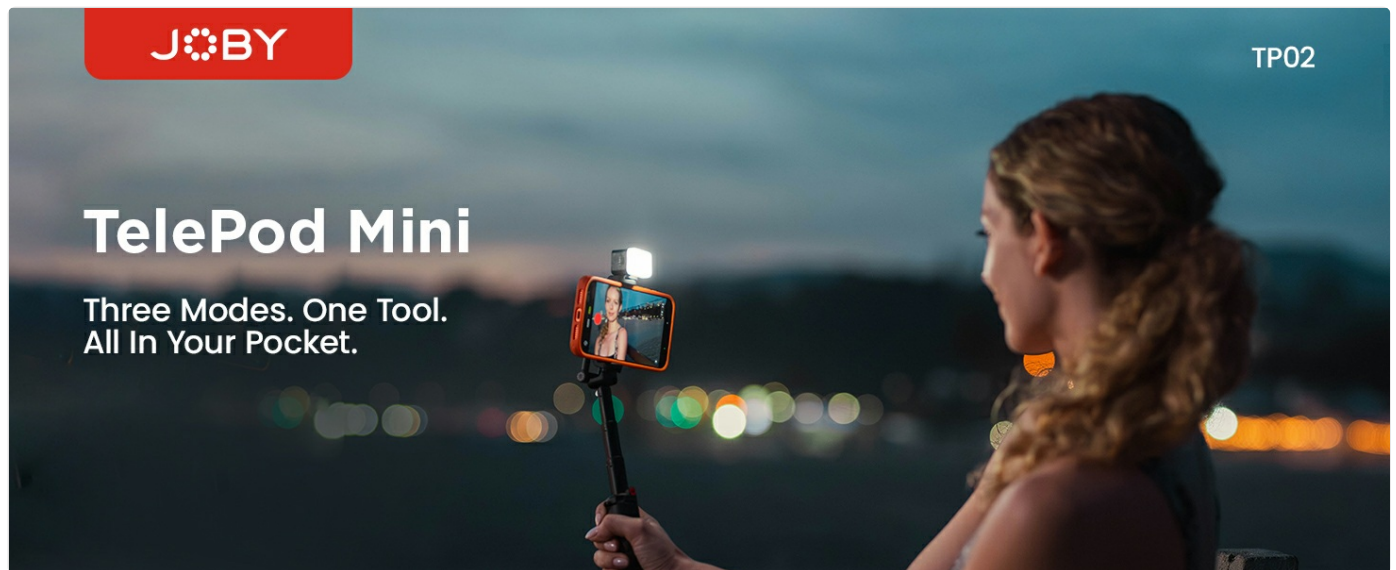


Figure 6: The TelePod Mini used as a stable desktop tripod.

4. Using Cold Shoe Mounts

The phone holder features dual cold shoe mounts. These allow you to attach accessories such as a mini fill light or an external microphone to enhance your mobile shooting setup.

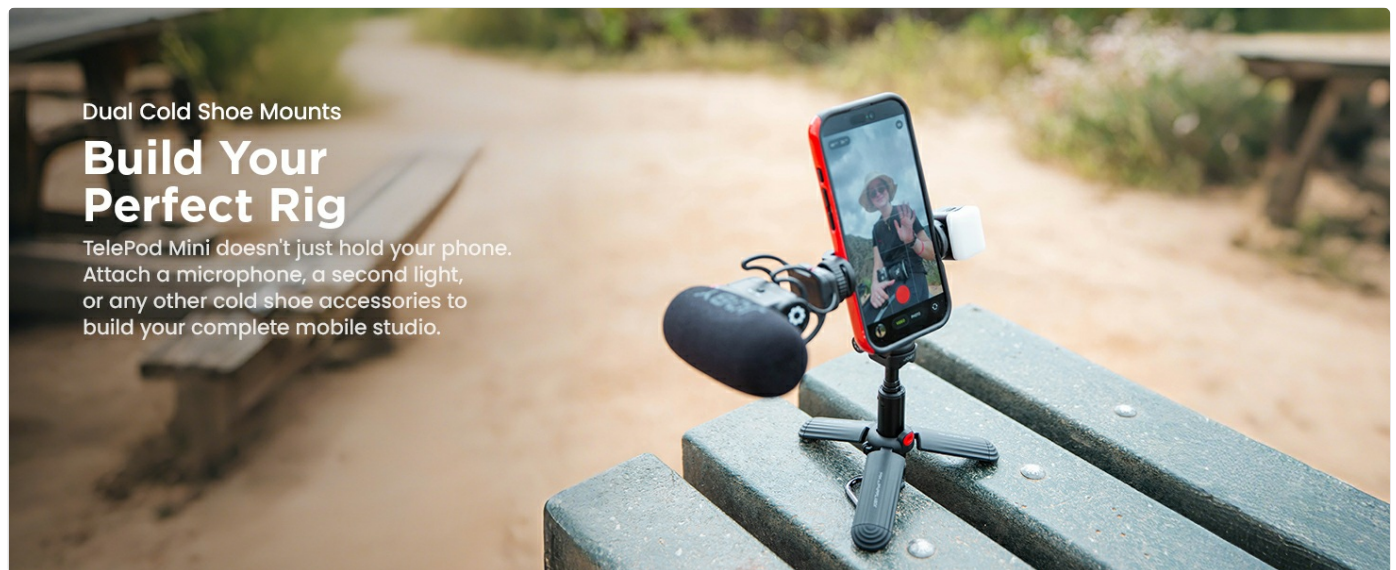 


Figure 7: Attaching accessories like a microphone and fill light using the cold shoe mounts.

PRODUCT DEMONSTRATION VIDEO

Your browser does not support the video tag.

Video 1: Official demonstration of the JOBY TelePod Mini's features and usage modes.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the TelePod Mini in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is folded compactly to prevent damage.

- **Battery Care (Remote/Light):** For models with a mini fill light or Bluetooth remote, ensure batteries are charged periodically if not in regular use to maintain battery health.

TROUBLESHOOTING

Bluetooth Remote Not Connecting:

Ensure the remote is charged and turned on. Check your phone's Bluetooth settings to confirm it's discoverable and try re-pairing. If issues persist, try restarting both your phone and the remote.

Tripod Stability Issues:

Ensure the legs are fully extended and locked into position. For maximum stability, place the tripod on a flat, level surface. Avoid over-extending the center column with heavy phones or accessories.

Phone Not Fitting in Holder:

The phone holder is designed for most smartphones. Ensure you are pulling the top jaw sufficiently upwards to insert your phone. Remove any bulky phone cases if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Joby
Model Name	TelePod Mini Mini
Model Number	TP02
Material	Acrylic
Maximum Height	38.5 centimeters (approx. 15.1 inches)
Compatible Devices	Cellphone
Special Feature	Portable, Bluetooth Remote, Dual Cold Shoe Mounts
GTIN / UPC	850084924002

WARRANTY INFORMATION

The JOBY TelePod Mini comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the official JOBY website or contact customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official JOBY website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GVQ8QBBW>

More documents and user manuals: **<https://manuals.plus/>**