

[Manuals.plus](#) /

› [JISULIFE](#) /

› JISULIFE Pro1 Mini Portable Fan User Manual

JISULIFE Pro1 Mini

JISULIFE Pro1 Mini Portable Fan User Manual

Model: Pro1 Mini

1. PRODUCT OVERVIEW

The JISULIFE Pro1 Mini is a versatile 3-in-1 portable device designed for personal cooling, emergency lighting, and mobile device charging. It integrates a powerful fan, a bright flashlight, and a backup power bank into a compact, elegant design.

Elegance Always

Refined leather finish with
subtle metallic accents



Image: The JISULIFE Pro1 Mini fan in black and white, highlighting its premium leather finish and metallic details.

Mini, Made to Move

Refined leather finish with
subtle metallic accents

Weight as low as

180g

Size reduced by

30%



Image: The compact and lightweight design of the Pro1 Mini fan, weighing only 180g, making it easy to carry.

2. PACKAGE CONTENTS

Please check the package for the following items:

- JISULIFE Pro1 Mini Portable Fan x1
- USB Charging Cable x1
- Lanyard x1
- Pouch x1
- User Manual x1

Fashion Lanyard & Pouch

Refined Packaging



Image: The Pro1 Mini fan with its included lanyard for easy carrying and a protective pouch.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the JISULIFE Pro1 Mini. Connect the provided USB charging cable to the fan's charging port and to a compatible USB power source (e.g., wall adapter, computer USB port). The charging indicator will show the charging status. A full charge typically takes approximately 2 hours.

3.2 Attaching the Lanyard

Thread the included lanyard through the designated loop on the fan for convenient carrying.

4250mAh

High-Capacity Battery

30h
Maximum Runtime

2h
Quick Chargeing

21700
Lithium-Ion Battery Cell



Image: The Pro1 Mini fan's battery specifications, highlighting its 4250mAh capacity for extended use and fast charging.

4. OPERATING INSTRUCTIONS

The JISULIFE Pro1 Mini offers three primary functions: fan, flashlight, and power bank.

Triple The Function, Zero The Hassle

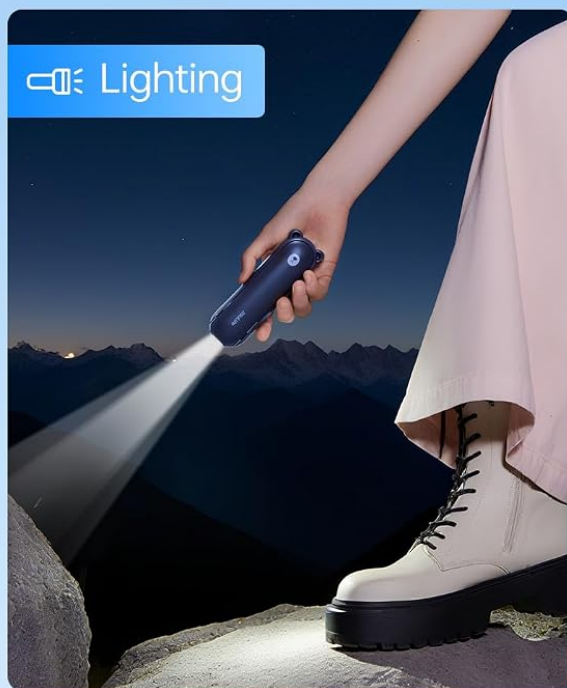
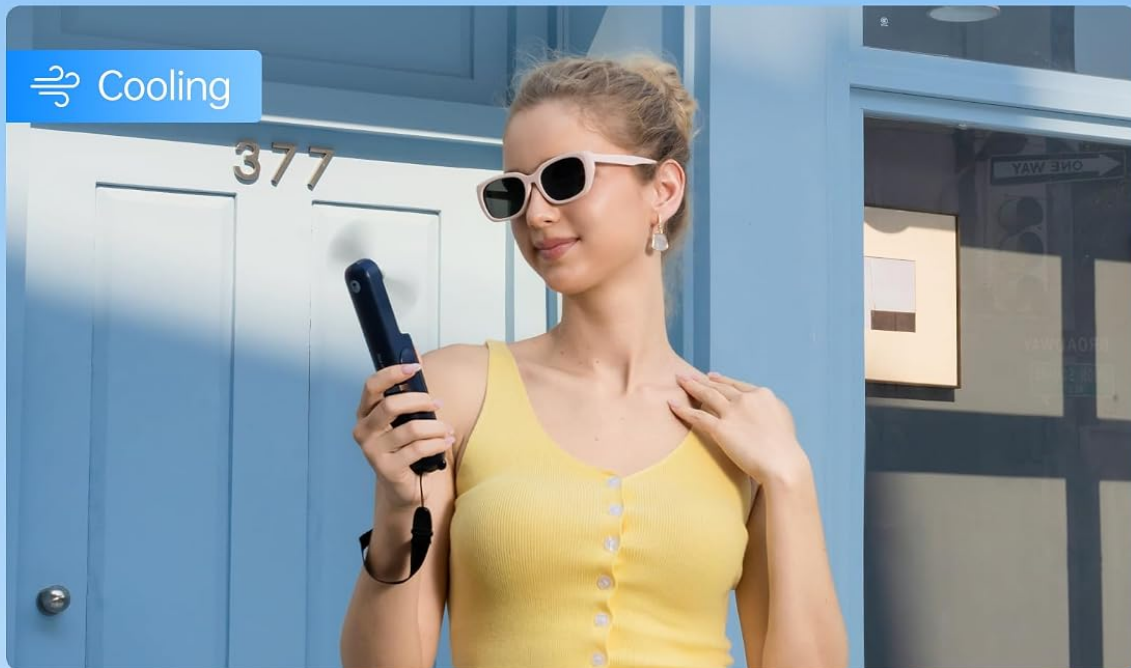


Image: Visual representation of the fan's three functions: cooling, charging, and lighting.

4.1 Fan Operation

1. **Power On/Off:** Press and hold the power button for 2 seconds to turn the fan on or off.
2. **Adjusting Fan Speed:** Once on, short press the power button to cycle through the 100 available wind speeds. The current speed level will be displayed on the integrated screen.
3. **Battery Life:** The fan provides approximately 12-19 hours of cooling depending on the selected speed.

100-Speed Wind Adjustment 3-Phase Brushless Motor

Wind Speed
Increased By

45%↑

Rotational Speed
Increased By

70%↑



Image: The fan's 100-speed adjustment feature, powered by a 3-phase brushless motor for precise airflow control.

Up to 19 Hours Cooling

Stay Refreshed All Day Long



Image: Demonstrating the extended cooling duration of the fan, offering up to 19 hours on lower settings.

4.2 Flashlight Function

To activate the flashlight, locate the dedicated flashlight button (usually separate from the fan power button). Press it once to turn on the light, and press again to turn it off.

4.3 Power Bank Function

The JISULIFE Pro1 Mini can be used to charge other small electronic devices. Connect your device's charging cable to the fan's USB output port. The fan will automatically begin charging your device.

4.4 Safety Features

The fan is equipped with a touch-sensitive auto-stop feature. If the fan blades are accidentally touched while operating, the fan will instantly stop to prevent injury. The blades are also made from soft, flexible material for enhanced safety.



Image: Details of the fan's safety features, including touch-sensitive auto-stop and flexible blades.

5. MAINTENANCE

5.1 Cleaning

- Ensure the fan is turned off and disconnected from any power source before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.

- Do not use abrasive cleaners, solvents, or immerse the fan in water.
- Gently clean any dust from the fan grille using a soft brush or compressed air.

5.2 Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the fan every 3 months to maintain battery health.

6. TROUBLESHOOTING

- **Fan not turning on:**
 - Ensure the fan is fully charged.
 - Press and hold the power button for 2 seconds to activate.
- **Fan not charging:**
 - Check if the USB cable is securely connected to both the fan and the power source.
 - Try a different USB cable or power adapter.
- **Weak airflow:**
 - Increase the fan speed using the power button.
 - Ensure the fan grille is not obstructed by dust or debris.
- **Flashlight not working:**
 - Ensure the fan has sufficient battery charge.
 - Press the dedicated flashlight button.
- **Device not charging from power bank function:**
 - Ensure the fan has sufficient battery charge.
 - Check the connection between the fan's USB output and your device.
 - Try a different charging cable for your device.

7. SPECIFICATIONS

Model	Pro1 Mini
Functions	Portable Fan, Flashlight, Power Bank
Battery Capacity	4250mAh Lithium-ion
Maximum Runtime	Up to 30 hours (fan function, lowest speed)
Charging Time	Approx. 2 hours
Fan Speeds	100 adjustable levels
Weight	180g
Material	Elite PU Leather finish

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official JISULIFE website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Official Website: www.jisulife.com