

Jojoka 5HK-X16B-RADFELCV-TXKW30TBKGF

Jojoka 14-Drawer Dresser TV Stand Instruction Manual

Model: 5HK-X16B-RADFELCV-TXKW30TBKGF

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your Jojoka 14-Drawer Dresser TV Stand. This versatile unit combines a spacious storage dresser with an entertainment center, designed to support televisions up to 75 inches. Please read these instructions carefully before assembly and use to ensure safe and proper functionality.

SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- **Anti-Tip Safety Kit:** Always install the included anti-tip safety kit to prevent accidental tipping, especially in households with children or pets. This kit secures the dresser to the wall.
- **Weight Capacity:** Do not exceed the maximum weight capacity of the top surface (110 lbs) or individual drawers (18 lbs for small, 22 lbs for large). Overloading can compromise stability and cause damage or injury.
- **Level Surface:** Ensure the dresser is placed on a flat, level surface. Use the adjustable leveling feet to stabilize the unit and prevent wobbling.
- **Electrical Safety:** When using the integrated power outlets, ensure all connected devices are within their specified voltage and current limits. Do not overload the power strip. Keep liquids away from electrical components.
- **Assembly:** Follow all assembly steps precisely. Do not skip steps or use unauthorized parts. Two people are recommended for assembly.

FINE WORKMANSHIP



Anti-Dumping Kits



Stable Frame



Wooden Grain



Fabric Drawers

Image: Key safety and construction features, including anti-tip kits and stable frame design.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present in your package:

- 1 x 14 Drawers Dresser (main frame components)
- 1 x Accessory Kit (hardware, tools, anti-tip kit)
- 1 x Instructions Manual (this document)

If any parts are missing or damaged, please contact Jojoka customer support immediately.

SETUP AND ASSEMBLY

Assembly of the Jojoka 14-Drawer Dresser TV Stand requires careful attention to detail. Detailed, step-by-step instructions with diagrams are included in the accessory kit. Please refer to those specific instructions for the assembly process.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

2. **Identify Parts:** Match all components with the labeled parts list provided in the separate assembly guide.
3. **Assemble Frame:** Follow the sequential steps to construct the metal frame and attach the MDF wood panels. Ensure all screws are tightened securely.
4. **Install Drawers:** Insert the fabric drawers into their designated slots.
5. **Attach Anti-Tip Kit:** Securely attach the anti-tip safety kit to the back of the dresser and to a wall stud, following the specific instructions provided with the kit.
6. **Level the Unit:** Adjust the leveling feet at the bottom of the dresser to ensure it stands firmly and without wobbling on your floor.

STABLE CONSTRUCTION



Image: Stable construction details, including support legs and clearance for cleaning.

OPERATING INSTRUCTIONS

Using the Storage Drawers

The dresser features fourteen fabric drawers designed for organizing various items. The drawers are lightweight yet sturdy, providing ample storage capacity.

- **Drawer Operation:** Gently pull and push the fabric drawers to open and close them. Avoid forcing

the drawers, as this may cause damage.

- **Organization:** Utilize the different drawer sizes to organize clothing, accessories, electronics, books, or other household items.



Image: Examples of how to organize various items within the 14 fabric drawers.

Utilizing the Integrated Power Hub

The top surface of the dresser includes an integrated power hub with two AC outlets and two USB ports for convenient device charging and power access.

- **Connecting Devices:** Plug your television, media players, lamps, or other electronic devices into the AC outlets.
- **USB Charging:** Use the USB ports to charge smartphones, tablets, smartwatches, or other USB-powered devices.
- **Cable Management:** Route power cords neatly to prevent clutter and tripping hazards.

DESKTOP WITH POWER OUTLETS

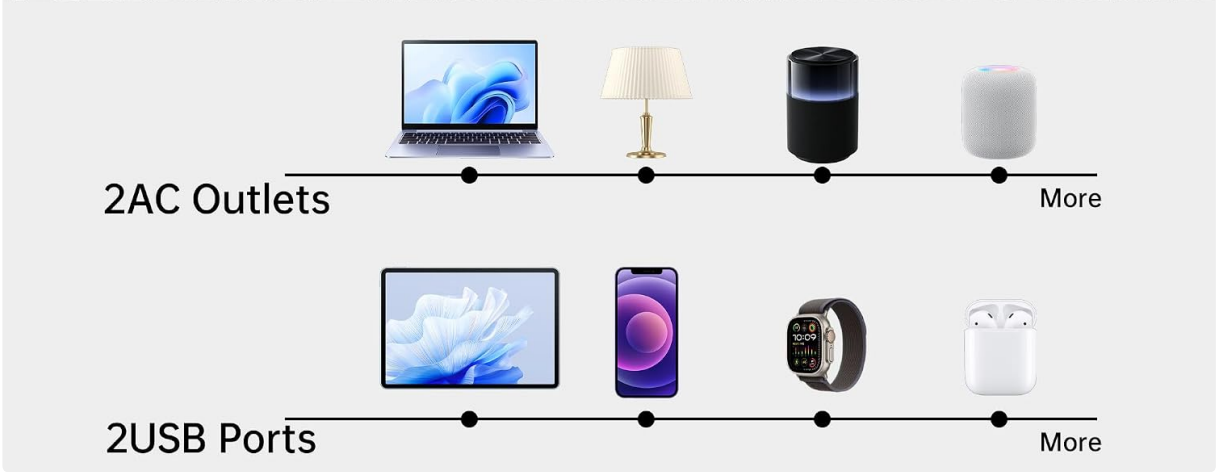




Image: The dresser supporting a television up to 75 inches, demonstrating its function as an entertainment center.

MAINTENANCE

Proper care will extend the life and appearance of your Jojoka dresser.

- **Cleaning the Frame and Top:** Wipe the MDF wood and iron frame surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cleaning Fabric Drawers:** The non-woven fabric drawers are designed to be easy to clean. Spot clean with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash or tumble dry.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth to prevent buildup.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.



Image: Features of the fabric drawers, emphasizing ease of cleaning and durability.

TROUBLESHOOTING

If you encounter issues with your dresser, refer to the following common solutions:

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom. Check and tighten all assembly screws. Ensure the anti-tip kit is properly installed.
Drawers do not slide smoothly.	Drawer overloaded; fabric snagged; frame misalignment.	Reduce weight in the drawer. Check for any obstructions or fabric snags. Ensure the frame is assembled correctly and is level.
Power outlets/USB ports not working.	No power to the unit; faulty connection; overloaded circuit.	Ensure the dresser's power cord is securely plugged into a functional wall outlet. Check if the wall outlet is working. Avoid connecting too many high-power devices.

Problem	Possible Cause	Solution
Missing parts during assembly.	Packaging not thoroughly checked.	Double-check all packaging materials. If still missing, contact Jojoka customer support with your purchase details.

SPECIFICATIONS

Key technical specifications for the Jojoka 14-Drawer Dresser TV Stand:

Feature	Detail
Brand	Jojoka
Model Number	5HK-X16B-RADFELCV-TXKW30TBKGF
Material	MDF Wood, Iron Frame, Non-woven Fabric Drawers
Overall Dimensions (L x W x H)	63" x 13.8" x 29.5" (approximate)
Product Dimensions (D x W x H)	35.24"D x 16.73"W x 9.25"H (as per product data, likely shipping dimensions or a specific component)
Number of Drawers	14
Top Surface Weight Capacity	110 lbs
Small Drawer Weight Capacity	18 lbs
Large Drawer Weight Capacity	22 lbs
TV Size Compatibility	Up to 75 inches
Integrated Power Outlets	2 x AC Outlets, 2 x USB Ports
Item Weight	48.7 Pounds
Assembly Required	Yes

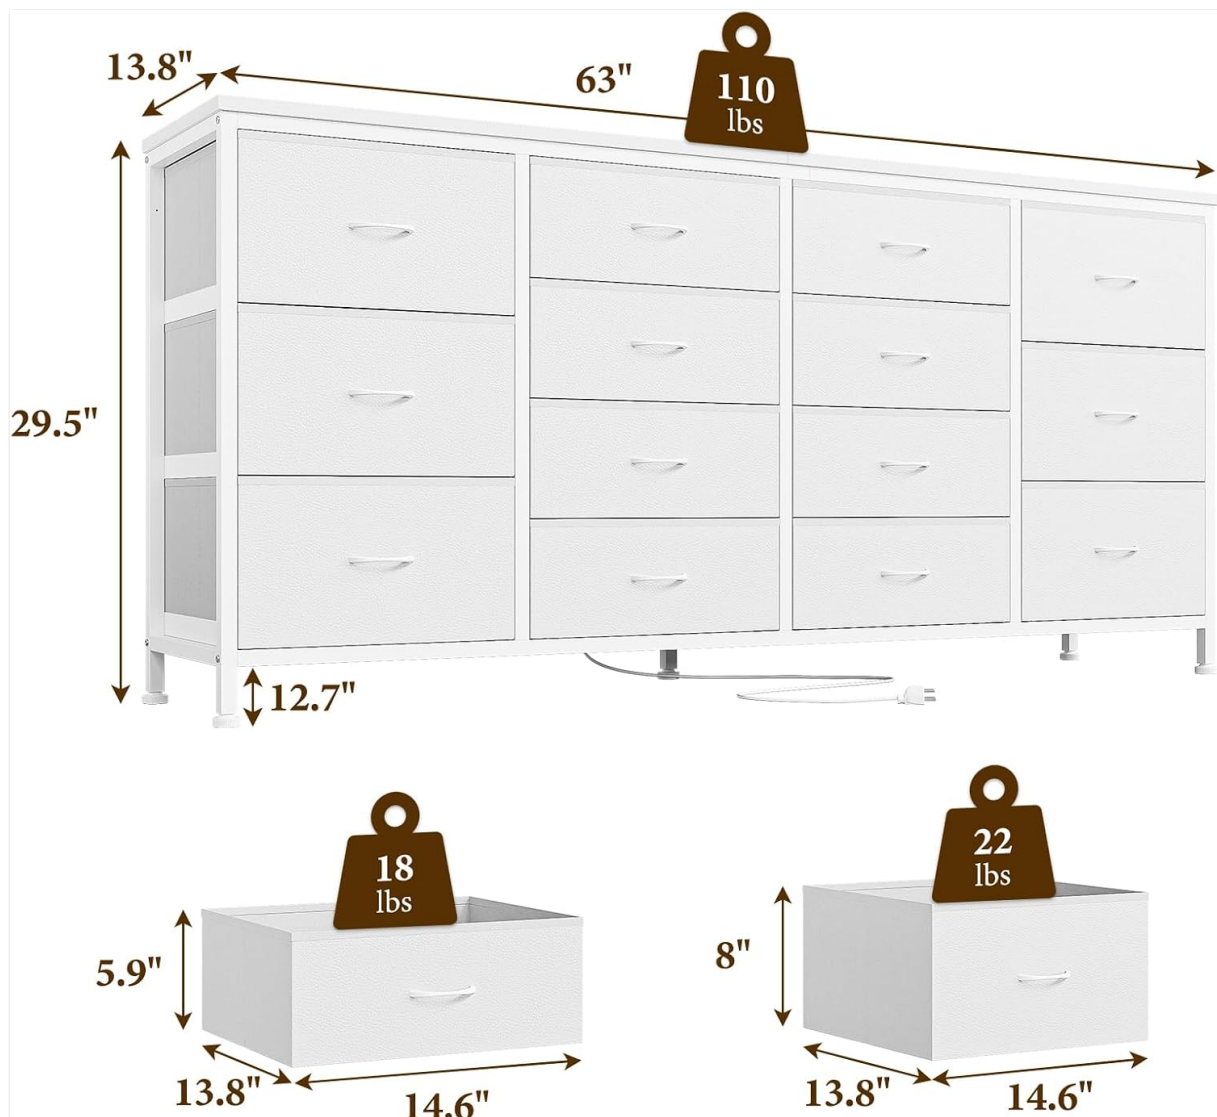


Image: Detailed dimensions and weight capacities of the dresser and its drawers.

WARRANTY INFORMATION

Jojoka products are manufactured with quality and durability in mind. Specific warranty details, including coverage period and terms, are typically provided with your purchase documentation or can be found on the official Jojoka website. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, questions, or to report missing/damaged parts, please contact Jojoka customer service:

- **Online:** Visit the official Jojoka website for support resources and contact forms.
- **Email:** Refer to your purchase documentation for the customer support email address.
- **Phone:** Refer to your purchase documentation for customer service phone numbers.

When contacting support, please have your product model number (5HK-X16B-RADFELCV-TXKW30TBKGF) and proof of purchase readily available.

