

[Manuals.plus](#) /

› [Amazon](#) /

› Amazon Fire HD 10 Tablet User Manual (13th Generation, 2023 Release)

Amazon Fire HD 10

Amazon Fire HD 10 Tablet User Manual

Model: Fire HD 10 (13th Generation, 2023 Release)

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Amazon Fire HD 10 tablet. Please read this guide thoroughly to ensure optimal use of your device.

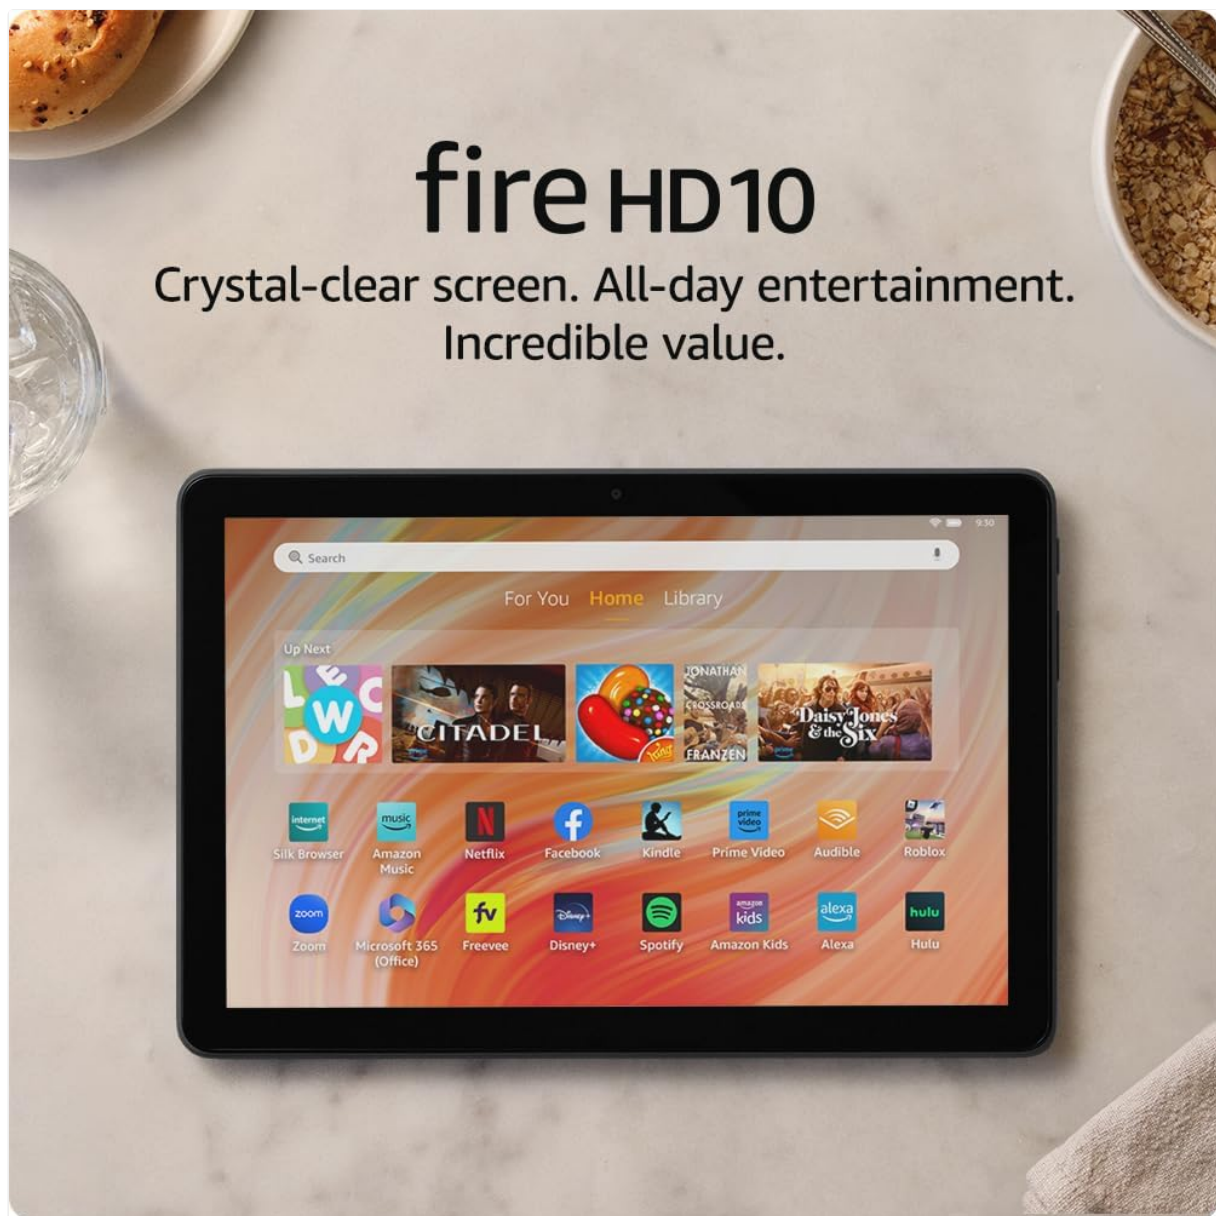


Image: The Amazon Fire HD 10 tablet, showcasing its vibrant Full HD display and user interface.

2. SETUP

2.1. Unboxing and Initial Charge

Your Fire HD 10 tablet comes with the following items:

- Fire HD 10 tablet
- USB-C (2.0) cable
- 9W power adapter
- Quick Start Guide

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's USB-C port and the 9W power adapter to a wall outlet. A full charge typically takes under 4 hours with the included adapter. Using a 15W adapter (sold separately) can reduce charge time to under 3 hours.

2.2. Powering On and Initial Configuration

1. Press and hold the power button until the Amazon logo appears.
2. Follow the on-screen prompts to select your language and connect to a Wi-Fi network. The tablet supports

dual-band Wi-Fi (802.11a/b/g/n/ac).

3. Register your device with your Amazon account. If you do not have an Amazon account, you will be prompted to create one.
4. Customize settings such as time zone, date, and accessibility features.

2.3. Expanding Storage

The Fire HD 10 tablet supports expandable storage up to 1 TB using a micro-SD card (sold separately). Locate the micro-SD card slot on the side of the tablet, insert the card, and follow the on-screen instructions to format it if prompted.

3. OPERATING INSTRUCTIONS

3.1. Basic Navigation

Navigate your Fire HD 10 using touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages, home screens, or menus.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

3.2. Entertainment and Productivity

The 10.1" 1080p Full HD display provides a vibrant viewing experience for videos, games, and reading. The octa-core processor and 4 GB RAM ensure smooth performance for various applications.



Watch videos and more on the 10.1" 1080p Full HD display

Image: Watching videos on the Fire HD 10 tablet's Full HD display.

Multitasking

The tablet's octa-core processor and 4 GB RAM facilitate efficient multitasking. You can switch between applications or use split-screen mode for enhanced productivity.



Multitasking is easy with an octa-core processor and 4 GB RAM

Image: Multitasking on the Fire HD 10 tablet with two apps open simultaneously.

Reading

Enjoy reading Kindle books with the built-in Kindle app. The tablet's battery life supports up to 13 hours of reading.



Relax all day with 13-hour battery
and expandable storage

Image: Reading an e-book on the Fire HD 10 tablet.

Camera Usage

The Fire HD 10 features 5 MP front and rear-facing cameras capable of 1080p HD video recording. Use the front camera for video calls and the rear camera for capturing photos and videos.



Say hello to loved ones with a 5 MP camera

Image: Video calling with the Fire HD 10 tablet's front-facing camera.

3.3. Alexa Integration

Your Fire HD 10 tablet includes built-in Alexa. You can activate Alexa hands-free by saying "Alexa" or by tapping the Alexa icon. Alexa can assist with tasks such as playing music, providing information, controlling smart home devices, and reading Kindle books aloud.

For privacy, you can view and delete your voice recordings or use the Alexa Hands-Free Mode on/off toggle at any time.

3.4. Bluetooth Connectivity

The tablet features Bluetooth 5.3 for connecting to compatible stereo headphones, speakers, microphones, and other LE accessories. To pair a Bluetooth device:

1. Go to **Settings > Connected Devices > Bluetooth**.
2. Ensure Bluetooth is turned on.
3. Select your device from the list of available devices to pair.

3.5. Accessibility Features

The Fire HD 10 offers various accessibility features. To access these, go to **Settings > Accessibility**. Features include:

- **VoiceView screen reader:** For users who are blind or visually impaired.
- **Screen Magnifier:** To zoom in/out and pan around the screen.
- **Tap to Alexa:** Access Alexa via touch instead of speech.
- **Switch Access:** For users with motor impairments, using compatible Bluetooth devices.
- **Kindle Read Aloud:** Alexa reads Kindle books aloud.
- Settings for Closed Captioning, Font Size, Display Size, High Contrast Text, Color Inversion, Color Correction, and Convert Stereo to Mono audio.

4. MAINTENANCE

4.1. Cleaning Your Tablet

To clean your Fire HD 10 tablet, power it off and disconnect any cables. Use a soft, lint-free cloth slightly dampened with water. Avoid using abrasive cleaners, solvents, or aerosol sprays directly on the device.

4.2. Software Updates

Your tablet will periodically receive software security updates to improve performance and add new features. Ensure your device is connected to Wi-Fi to receive these updates. You can check for updates manually in **Settings > Device Options > System Updates**.

4.3. Battery Care

To maximize battery life, avoid exposing the tablet to extreme temperatures. For optimal performance, use the included 9W power adapter or a compatible 15W adapter for charging. Battery life is up to 13 hours, varying based on usage and settings.

5. TROUBLESHOOTING

5.1. Device Not Responding

If your tablet is unresponsive, press and hold the power button for 20-30 seconds to perform a forced restart.

5.2. Wi-Fi Connectivity Issues

If you experience issues connecting to Wi-Fi:

- Ensure Wi-Fi is enabled in **Settings**.
- Restart your Wi-Fi router.
- Forget the network and reconnect by re-entering the password.
- Ensure you are within range of the Wi-Fi signal.

5.3. App Performance Issues

If an app is crashing or performing slowly:

- Close and reopen the app.
- Clear the app's cache in **Settings > Apps & Games > Manage All Applications**.
- Ensure the app is updated to its latest version.
- Restart the tablet.

For further assistance, visit the Amazon Device Support pages or contact Amazon Customer Service.

6. SPECIFICATIONS

Feature	Detail
Display	Brilliant 10.1" 1080p display (1920 x 1200) with over 2 million pixels (224 ppi). Screen strengthened with aluminosilicate glass.
Size	9.69" x 6.49" x 0.34" (246mm x 164.8mm x 8.6mm)
Weight	15.29 oz (433.6g)
CPU & RAM	Octa-core processor (2x Arm Cortex-A76 up to 2.05 Ghz and 6x Arm Cortex A55 up to 2Ghz), 3 GB or 4 GB RAM
Storage	32 GB (24 GB available) or 64 GB (54.3 GB available) internal storage. Micro-SD slot for up to 1 TB additional storage.
Battery Life	Up to 13 hours of reading, browsing, watching videos, and listening to music.
Charge Time	Under 4 hours with included 9W adapter. Under 3 hours with 15W adapter (sold separately).
Wi-Fi Connectivity	Dual-band 802.11 a/b/g/n/ac. Wi-Fi 6 (802.11 ax) not supported.
Ports	USB-C (2.0) connector, micro-SD slot.
Audio	3.5 mm stereo jack, dual integrated speakers.
Sensors	Accelerometer, ambient light sensor.
Camera Specs	5 MP front and rear-facing cameras with 1080p HD video recording.
Microphone	1 built-in microphone.
Bluetooth	Built-in Bluetooth 5.3 with A2DP support.
Generation	13th generation - 2023 release.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

Your Amazon Fire HD 10 tablet includes a 1-year limited warranty and service. Optional extended warranties (1-year, 2-year, and 3-year) are available for purchase separately for U.S. customers. Use of the Fire HD 10 tablet is subject to Amazon's Conditions of Use.

7.2. Customer Support

For additional support, troubleshooting, or warranty claims, please visit the official Amazon Device Support website or contact Amazon Customer Service directly. You can find more information specific to your device by visiting [Manage Your Content and Devices](#).

