



[Manuals.plus](#) /

> [OLIXIS](#) /

> OLIXIS Tower Fan AC-DSV25TS-35D5 User Manual

OLIXIS AC-DSV25TS-35D5

OLIXIS Tower Fan AC-DSV25TS-35D5 User Manual

Model: AC-DSV25TS-35D5

INTRODUCTION

Thank you for choosing the OLIXIS Tower Fan. This manual provides essential information for the safe operation, installation, and maintenance of your new fan. Please read it thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

- Always ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or objects into the fan grille. The fan features a finger-pinch resistant grille for safety.
- Keep the power cord away from heated surfaces and do not run it under carpets.
- Unplug the fan from the power outlet when not in use, before cleaning, or when moving it.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- The fan includes built-in circuit protection and a fuse plug for enhanced safety. Do not operate the fan with a damaged cord or plug.
- Do not use the fan in wet or damp locations, such as bathrooms.
- The child lock feature helps prevent unintended operation by children.



Image: Overview of OLIXIS Tower Fan safety features.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged:

- OLIXIS Tower Fan Unit
- Remote Control
- Base (two halves)
- Screws for Base Assembly
- User Manual (this document)

PRODUCT DIAGRAM

Familiarize yourself with the main parts of your OLIXIS Tower Fan:

Easy to Use



Top Control Panel

M Hold 3s to turn on/off child lock

L Select to set a timer (0-12h)

Built-In Handle

Image: Key features of the OLIXIS Tower Fan, including the top control panel and built-in handle.

- **Top Control Panel:** For manual operation and settings adjustment.
- **LED Display:** Shows current settings such as speed, mode, and timer.
- **Air Outlet:** Where the cooled air is expelled.
- **Built-in Handle:** For easy portability.
- **Base:** Provides stability for the fan unit.

SETUP AND ASSEMBLY

Follow these steps to assemble your OLIXIS Tower Fan:

1. Take the two base halves and position them in a crossed manner.
2. Insert the pegs on one half into the corresponding slots on the other half.
3. Press down on the edges to securely click the two base halves together.

4. Attach the assembled base to the main fan unit.
5. Secure the base to the fan unit using the provided screws.
6. Thread the power cord through all cord keepers before placing the fan upright.

Air That Feels Right

Say Goodbye to

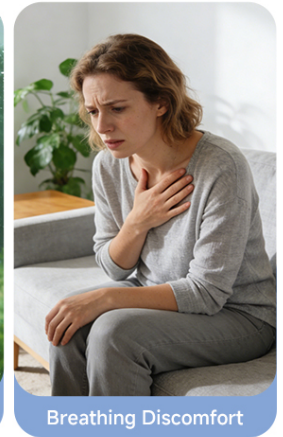 


Image: Visual guide for assembling the fan base.

Assembly Video Guide

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step process for installing the OLIXIS Tower Fan, including base assembly and initial setup.

OPERATING INSTRUCTIONS

Control Panel and Remote Control

The fan can be operated using the touch control panel on top of the unit or the included remote control. The remote control offers convenient operation from a distance.

Your Breeze, Your Way

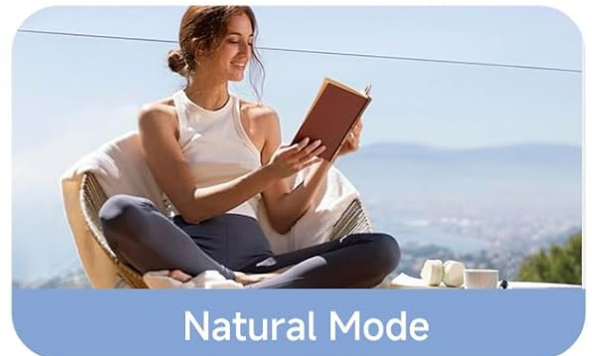 
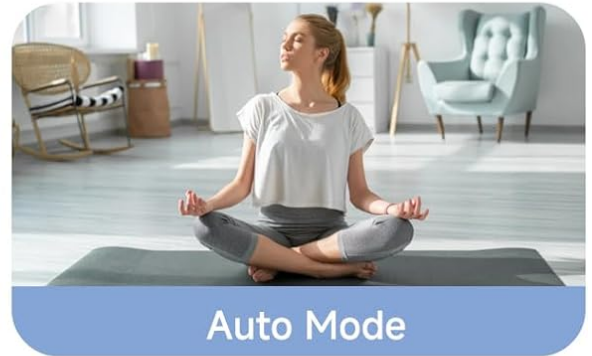 
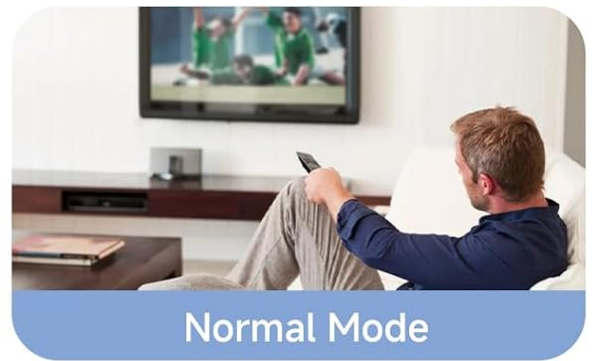 


Image: Control panel and remote control layout with various mode options.

Functions:

- **Power Button:** Turns the fan On or Off.
- **Speed Adjustment:** Cycle through 5 fan speeds (Lv.1 to Lv.5).
- **Mode Selection:** Choose from 4 operating modes: Normal, Natural, Auto, and Sleep.
- **Oscillation:** Activates or deactivates the 64° wide oscillation feature.
- **Timer:** Set the fan to automatically turn off after 1 to 12 hours.
- **Child Lock:** Press and hold the 'M' button for 3 seconds on the control panel to activate/deactivate.

Operating Modes

- **Normal Mode:** Provides a constant airflow at your selected speed.

- **Natural Mode:** Simulates natural breeze by varying fan speed intermittently.
- **Auto Mode:** Adjusts fan speed automatically based on the room's ambient temperature. Higher temperatures result in higher fan speeds.
- **Sleep Mode:** Gradually reduces fan speed every 30 minutes and dims the LED display for a quieter and less disruptive environment, ideal for sleeping.



Image: Auto Mode functionality, showing fan speed adjustment based on room temperature.

Sleep Unbroken, Cool Unstoppable

Ultra Quiet



Image: Fan operating in Sleep Mode, highlighting its ultra-quiet 28dB operation.

Oscillation

Activate the oscillation function to distribute airflow across a wider area (64°). This helps cool the room more efficiently.



Image: Fan demonstrating 64° oscillation for broad air distribution.

Product Overview Video

Your browser does not support the video tag.

Video: This video provides a brief overview of the OLIXIS Tower Fan's features and operation.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlet and outlet grilles.
- **Storage:** When not in use for extended periods, unplug the fan, clean it, and store it in a cool, dry place.
- Ensure the fan is completely dry before plugging it back in or storing.

TROUBLESHOOTING

If you encounter issues with your OLIXIS Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power, power cord not fully plugged in, fuse blown.	Check power outlet, ensure plug is fully inserted, check household circuit breaker, inspect fuse in the plug (if applicable).
Weak airflow.	Fan speed too low, air inlets/outlets blocked by dust.	Increase fan speed, clean air inlets and outlets as per maintenance instructions.
Fan makes unusual noise.	Obstruction, fan not on a level surface.	Check for any foreign objects near the fan grilles, ensure fan is on a stable, level surface.
Remote control not working.	Batteries depleted, remote not aimed at sensor.	Replace remote control batteries, ensure clear line of sight to the fan's sensor.

If the problem persists after attempting these solutions, please contact OLIXIS customer support.

SPECIFICATIONS

Feature	Detail
Model Name	AC-DSV25TS-35D5
Dimensions (D x W x H)	9.84"D x 9.84"W x 35.43"H
Item Weight	7.4 Pounds
Power Source	AC
Wattage	50 watts
Voltage	120 Volts
Number of Speeds	5
Number of Modes	4 (Normal, Natural, Auto, Sleep)
Noise Level	28 Decibels
Oscillation Angle	64°
Timer	1-12 Hours
Air Flow Capacity	Up to 22.3 ft/s
Air Delivery Distance	Up to 26.52 ft
Control Method	Remote, Touch
Material	Acrylonitrile Butadiene Styrene, Plastic, Polycarbonate
Certifications	ETL, FCC, UL
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

Manufacturer's Warranty

The OLIXIS Tower Fan (Model: AC-DSV25TS-35D5) is covered by a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage resulting from:

- Accident, misuse, abuse, or alteration.
- Unauthorized repair or modification.
- Failure to follow operating instructions.
- Normal wear and tear.

Customer Support

For warranty claims, technical assistance, or any questions regarding your OLIXIS Tower Fan, please contact OLIXIS customer support through the retailer's platform or the official OLIXIS website. Please have your model number (AC-DSV25TS-35D5) and proof of purchase ready when contacting support.