

SKY LINE OCEAN STP2151

SKY LINE OCEAN Cherry Blossom Bonsai Tree Building Set

Model: STP2151 | Brand: SKY LINE OCEAN

INTRODUCTION

Thank you for choosing the SKY LINE OCEAN Cherry Blossom Bonsai Tree Building Set. This intricate micro-brick kit allows you to construct a beautiful Japanese sakura tree house model, complete with integrated LED lighting. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a rewarding building experience.

Safety Warning:

- This product contains small parts and is not suitable for children under 14 years of age due to choking hazards.
- Keep all packaging materials away from children.
- Always follow the assembly instructions carefully.

SETUP AND ASSEMBLY

The SKY LINE OCEAN Cherry Blossom Bonsai Tree Building Set requires assembly. Detailed, step-by-step instructions are provided in the separate instruction booklet included in your package. Please refer to that booklet for specific building sequences.

Before You Begin:

1. **Unpack Carefully:** Open the box and remove all contents. Verify that all sealed bags of bricks and the instruction booklet are present.
2. **Organize Parts:** It is highly recommended to sort the micro-bricks by color and shape before starting assembly. This will significantly streamline the building process.
3. **Clear Workspace:** Ensure you have a clean, well-lit, and spacious area to work on your model.

Assembly Process:

Follow the numbered steps in the included instruction booklet precisely. Each step illustrates which pieces are needed and where they should be placed. Pay close attention to the orientation of the bricks.



Image: The fully assembled Cherry Blossom Bonsai Tree model, showcasing its intricate design and pink blossoms.



Image: The assembled model with approximate dimensions: 17.5cm (width), 16.9cm (depth), and 16.1cm (height).

The set includes over 2151 micro precision pieces designed for a secure fit. Apply gentle, even pressure when connecting bricks to avoid damage.

OPERATING THE LED LIGHTS

Your Cherry Blossom Bonsai Tree model features integrated LED lights to enhance its visual appeal, especially in low-light conditions. The LED system is designed to be simple to operate.

Powering the Lights:

Locate the battery compartment or USB power input point, typically at the base of the model. Insert the required batteries (not included, refer to the instruction booklet for type and quantity) or connect a compatible USB power source.

Turning On/Off:

A small switch is usually located near the power input. Flip the switch to the 'ON' position to illuminate the LED lights. Flip it to 'OFF' to turn them off.



Image: The Cherry Blossom Bonsai Tree model with its integrated LED lights glowing, creating a warm ambiance.



Image: The Cherry Blossom Bonsai Tree model in daylight, showing its detailed construction without the LED lights active.

MAINTENANCE

To ensure the longevity and appearance of your SKY LINE OCEAN Cherry Blossom Bonsai Tree, follow these simple maintenance guidelines:

- **Cleaning:** Gently dust the model regularly with a soft, dry cloth or a soft brush. For stubborn dirt, a slightly damp cloth can be used, but avoid excessive moisture, especially near electrical components. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** If disassembling or storing the model, keep all pieces in a secure container to prevent loss. Store in a cool, dry place away from direct sunlight to prevent color fading.
- **Battery Replacement:** If the LED lights dim or stop working, replace the batteries as per the instructions in the assembly booklet. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

Should you encounter any issues with your building set, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Missing or damaged pieces	Manufacturing error or accidental loss during unpacking/assembly.	Carefully check all packaging. If pieces are genuinely missing or damaged, contact SKY LINE OCEAN customer support with details of the missing part (refer to the parts list in the instruction booklet).
LED lights do not turn on	Incorrect battery installation, dead batteries, or loose connection.	Ensure batteries are inserted with correct polarity. Replace with fresh batteries. Check that the power switch is in the 'ON' position. Verify all connections to the LED unit are secure.
Model is unstable or parts fall off	Bricks not fully pressed together or incorrect assembly step.	Review the relevant assembly steps in the instruction booklet. Ensure each brick is firmly pressed into place. Disassemble and reassemble the problematic section if necessary.

SPECIFICATIONS

Brand: SKY LINE OCEAN

Model Number: STP2151

Set Name: Cherry Blossom Bonsai Tree Building Set

Number of Pieces: 2151+

Material: Plastic

Item Dimensions (Assembled): Approximately 14 x 14 x 14 Centimeters (5.5 x 5.5 x 5.5 inches)

Item Weight: 0.15 Kilograms

Minimum Recommended Age: 14 years

Additional Features: Built-in LED Light Feature, Glow in the Dark elements

Assembly Required: Yes

Indoor/Outdoor Usage: Indoor

Operation Mode: Manual (for assembly and light switch)



Image: The Pink Sakura variant (left) alongside a Purple Sakura variant, demonstrating the product's aesthetic.

WARRANTY AND SUPPORT

For any inquiries regarding missing parts, assembly assistance, or product support, please contact SKY LINE OCEAN directly.

Manufacturer Contact Email: guddatoys@gmail.com

Manufacturer: SKY LINE OCEAN

Please retain your proof of purchase for any warranty claims or support requests.