

Guide Gear D479

Guide Gear 4x4 Replacement Blind Instruction Manual

Model: D479

PRODUCT OVERVIEW

This manual provides instructions for the Guide Gear 4x4 Replacement Blind, designed specifically for the Guide Gear 4x4 6' Tower and Blind (item #718070). This product is a direct replacement blind and does not include the tower structure.

Key Features

- **Compatibility:** Direct replacement for Guide Gear 4x4 6' Tower and Blind (item #718070).
- **Material:** Water-resistant 210D polyester shell for protection against weather elements.
- **Visibility:** LookOut 1-way mesh allows visibility from inside while obscuring view from outside.
- **Adjustable Windows:** Nine adjustable windows provide multiple options for viewing and shooting angles.
- **Access:** Triangle zippered door for convenient entry and exit.
- **Interior:** Black PU-coated fabric interior designed to minimize scent, shine, and noise.
- **Storage:** Integrated mesh gear pockets for small accessories.



Figure 1: Guide Gear 4x4 Replacement Blind, Mossy Oak Country Roots.

The Guide Gear 4x4 Replacement Blind is engineered to provide a comfortable and concealed environment for hunting, allowing for clear observation and precise targeting.

SETUP INSTRUCTIONS

This section outlines the general steps for installing your replacement blind. Ensure you have the Guide Gear 4x4 6' Tower and Blind (item #718070) frame ready for installation.

1. Unpacking and Inspection

1. Carefully remove the replacement blind from its packaging.
2. Inspect all components for any signs of damage or missing parts. Contact customer support if any issues are found.
3. Familiarize yourself with the blind's structure, including the door, windows, and attachment points.

2. Attaching the Replacement Blind to the Tower Stand Frame

1. Ensure the tower stand frame is securely assembled and placed on a stable, level surface.
2. Drape the blind fabric over the top of the tower stand frame, aligning the roof section first.
3. Secure the top corners and edges of the blind to the corresponding points on the tower frame using the provided attachment mechanisms (e.g., straps, clips, or bungee cords).
4. Work your way down, attaching the side panels of the blind to the vertical supports of the tower frame. Ensure the fabric is taut but not overly stretched to prevent damage.
5. Confirm that the zippered door is properly aligned and can be opened and closed without obstruction.
6. Secure the bottom edges of the blind to the base of the tower stand, if applicable, to prevent wind from lifting the blind.



Figure 2: Replacement blind installed on a tower stand (tower stand sold separately).

OPERATING THE BLIND

The Guide Gear 4x4 Replacement Blind is designed for ease of use and optimal concealment.

Window Operation

The blind features nine adjustable windows. These windows can be opened or closed independently to suit your viewing and shooting needs. The LookOut 1-way mesh allows you to see outside while remaining concealed from game. Adjust windows by unzipping or unfastening the covers and securing them in the open position using the integrated ties or loops.

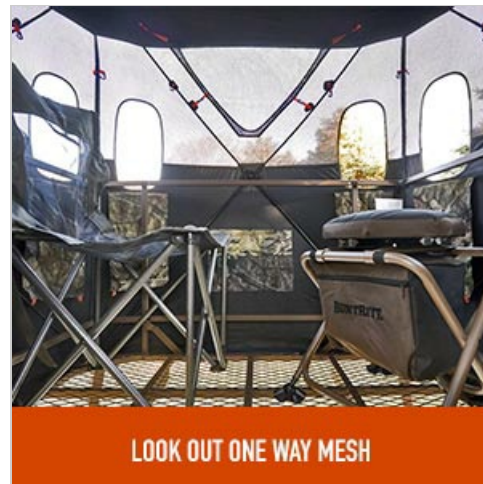


Figure 3: Detail of the LookOut 1-way mesh window.

Door Access

Access the blind through the triangle-shaped zippered door. Ensure the zipper is fully closed when inside to maintain concealment and prevent drafts. Operate the zipper smoothly to avoid snags or damage.

Gear Pockets

Utilize the internal mesh gear pockets for convenient storage of small items such as calls, rangefinders, or snacks. This helps keep your hunting space organized and quiet.



Figure 4: Interior view of the blind with windows and mesh gear pockets.

MAINTENANCE AND CARE

Proper maintenance will extend the lifespan and performance of your Guide Gear 4x4 Replacement Blind.

Cleaning

- After each use, especially in wet or muddy conditions, clean the exterior of the blind.
- Use a damp cloth and mild soap to gently wipe down the 210D polyester shell. Avoid harsh chemicals or abrasive cleaners, which can damage the fabric and its water-resistant coating.
- Rinse thoroughly with clean water and allow the blind to air dry completely before storage to prevent mold and mildew.
- Clean zippers periodically to ensure smooth operation.

Storage

- When not in use, particularly during off-season or harsh weather, it is recommended to remove the blind from the tower stand.
- Fold or roll the blind neatly and store it in a cool, dry place away from direct sunlight. Prolonged exposure to UV rays can cause the fabric to fade and deteriorate over time.
- Ensure the blind is completely dry before storage to prevent mildew and odors.

TROUBLESHOOTING

This section addresses common issues you might encounter with your replacement blind.

Blind Fit Issues

- **Issue:** The blind does not fit correctly on the tower stand frame.
- **Solution:** Verify that your tower stand is the Guide Gear 4x4 6' Tower and Blind (item #718070). This replacement blind is designed specifically for that model. Ensure all attachment points are correctly aligned and secured.

Material Fading or Deterioration

- **Issue:** The blind fabric shows signs of fading or premature wear.
- **Solution:** While the 210D polyester shell is durable, prolonged exposure to harsh weather conditions, especially UV radiation, can cause fading and material degradation. To maximize the lifespan of your blind, remove and store it indoors when not in active use, particularly during off-season or extended periods of inclement weather.

Zipper Malfunction

- **Issue:** Zippers are difficult to operate or get stuck.
- **Solution:** Ensure zippers are clean and free of dirt or debris. Apply a silicone-based lubricant specifically designed for zippers to improve smoothness. Avoid forcing stuck zippers, as this can cause damage.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Guide Gear Replacement Blind
Part Number	D479
Material	Water-resistant 210D polyester shell
Color	Mossy Oak Country Roots
Item Package Dimensions (L x W x H)	39.37 x 6.7 x 6.7 inches
Package Weight	11.8 pounds
Included Components	Replacement Blind (Poles and hardware included)

WARRANTY AND SUPPORT

Warranty Information

This Guide Gear product is covered by a **30-day return policy**. Please refer to your purchase documentation or retailer's return policy for specific terms and conditions regarding returns and exchanges.

Customer Support

For any questions, concerns, or assistance with your Guide Gear 4x4 Replacement Blind, please contact the manufacturer or your retailer's customer service department. When contacting support, please have your model number (D479) and purchase information readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question