



[Manuals.plus](#) /

› [EPiC](#) /

› EPiC: Elvis Presley in Concert [4K UHD/Blu-Ray] Instruction Manual

EPiC B0GWLSKL7K

EPiC: Elvis Presley in Concert [4K UHD/Blu-Ray] Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the optimal enjoyment and care of your **EPiC: Elvis Presley in Concert** 4K UHD and Blu-Ray disc set. This release features a cinematic portrait of Elvis Presley, showcasing candid conversations, dazzling performance footage, and archival film. Please read this manual thoroughly to ensure proper setup, playback, and maintenance of your discs.

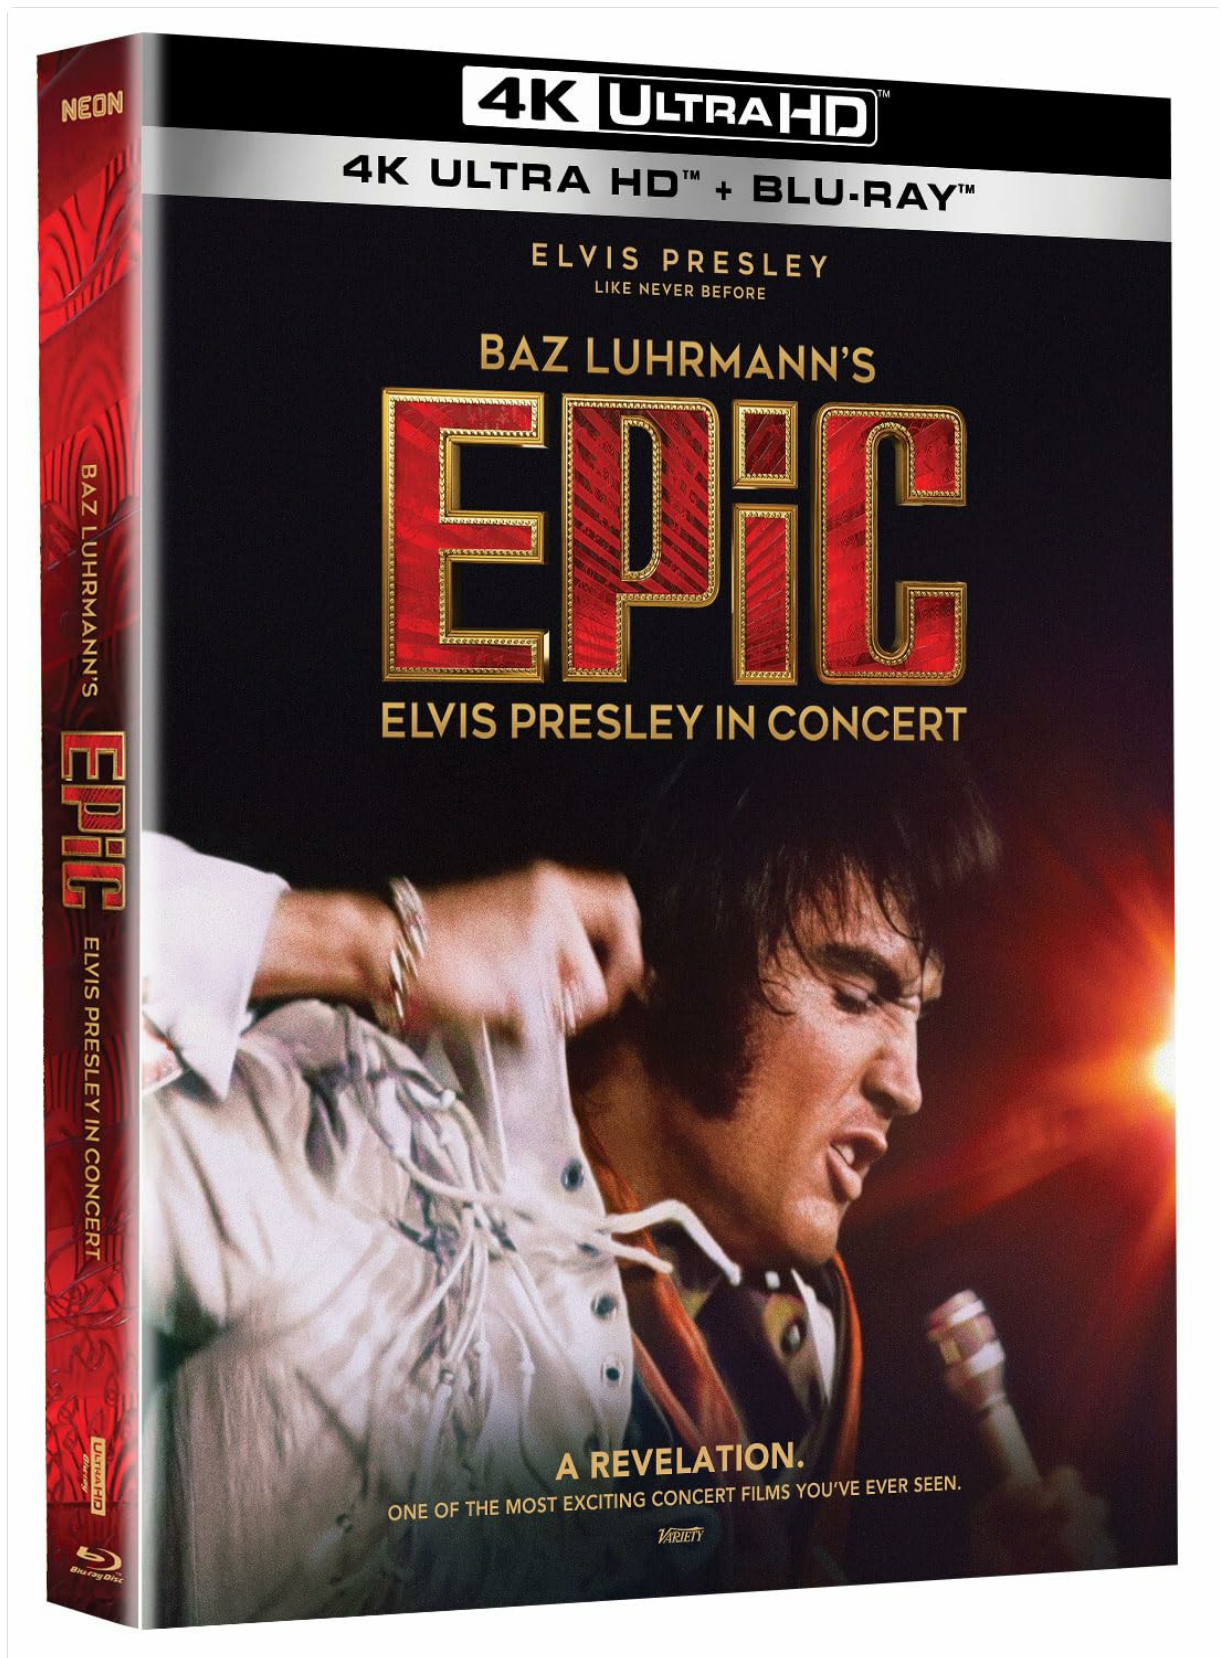


Image 1.1: Front cover of the EPiC: Elvis Presley in Concert 4K UHD Blu-Ray disc set, featuring Elvis Presley performing.

2. SETUP AND COMPATIBILITY

2.1 System Requirements

- **4K UHD Playback:** To experience the 4K Ultra HD disc, a compatible 4K Ultra HD Blu-ray player and a 4K Ultra HD television with HDR (High Dynamic Range) support are required.
- **Blu-Ray Playback:** The standard Blu-ray disc requires a Blu-ray player and a high-definition television.

- **Audio System:** For optimal audio experience, a home theater system with surround sound capabilities is recommended.

2.2 Connecting Your Player

Ensure your 4K UHD or Blu-ray player is correctly connected to your television or audio receiver using a high-speed HDMI cable. For 4K UHD content, use an HDMI 2.0a/b or higher cable to support HDR and higher bandwidth.



Image 2.1: Back cover of the disc set, detailing technical specifications and system requirements for playback.

3. OPERATING YOUR DISC

3.1 Inserting the Disc

1. Gently remove the desired disc (4K UHD or Blu-ray) from its case, holding it by the edges to avoid fingerprints.
2. Insert the disc into your compatible player with the label side facing up.
3. Close the disc tray or slot. The player should automatically begin reading the disc.

3.2 Menu Navigation

Once the disc loads, the main menu will appear. Use your player's remote control to navigate through options such as:

- **Play Movie:** Starts the main feature.
- **Scene Selection:** Allows you to jump to specific chapters.
- **Audio:** Select preferred audio tracks (e.g., English DTS-HD Master Audio).
- **Subtitles:** Choose subtitle languages (e.g., English SDH, Spanish).
- **Special Features:** Access bonus content, if available.

3.3 Playback Controls

Standard remote control functions apply during playback, including Play, Pause, Stop, Fast Forward, Rewind, and Chapter Skip.

4. DISC CARE AND MAINTENANCE

4.1 Handling

Always handle discs by their outer edges or the center hole. Avoid touching the playing surface to prevent fingerprints, smudges, and scratches.

4.2 Cleaning

If a disc becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line. Do not use abrasive cleaners, solvents, or circular motions, as these can damage the disc surface.

4.3 Storage

Store discs in their original cases, away from direct sunlight, extreme temperatures, and high humidity. Proper storage helps prevent warping and degradation of the disc material.



Image 4.1: Elvis Presley performing, representing the content on the disc. Proper disc care ensures continued enjoyment of such performances.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or load.	Incorrect disc type for player, disc inserted incorrectly, dirty/damaged disc.	Ensure you are using a 4K UHD disc in a 4K UHD player or a Blu-ray disc in a Blu-ray player. Reinsert the disc correctly. Clean the disc as per Section 4.2. Check for visible damage.
No audio or poor audio quality.	Incorrect audio settings on player/TV/receiver, loose audio cables.	Check audio output settings on your player and TV/receiver. Ensure all audio cables are securely connected. Select the desired audio track from the disc menu.
No video or poor video quality.	Incorrect video settings, loose HDMI cable, incompatible display.	Verify video output settings on your player and TV. Ensure HDMI cables are securely connected. Confirm your TV supports the disc's resolution (e.g., 4K for 4K UHD disc).
Disc skips or freezes.	Dirty or scratched disc, player malfunction.	Clean the disc carefully. If the problem persists, try the disc in another compatible player to rule out player issues.

6. SPECIFICATIONS

- **Title:** EPiC: Elvis Presley in Concert
- **Format:** 4K Ultra HD Blu-ray, Blu-ray
- **ASIN:** B0GWLSKL7K
- **Director:** Baz Luhrmann
- **Actor:** Elvis Presley
- **MPAA Rating:** PG-13 (Parents Strongly Cautioned)
- **Run Time:** 1 hour and 36 minutes
- **Language:** English
- **Studio:** Decal - Neon
- **Release Date:** August 11, 2026
- **Genre:** Documentary, Music, Video & Concert

7. SUPPORT AND WARRANTY

7.1 Product Support

For technical support regarding your disc player or television, please refer to the respective manufacturer's instruction manuals or support channels. For inquiries related to the content of this disc, please contact the distributor or studio.

7.2 Limited Warranty

This product is typically covered by a limited warranty against manufacturing defects. If you receive a defective disc, please contact your retailer for a replacement within their specified return period. Keep your proof of purchase for warranty claims.

