

uwant Y200

uwant Y200 Spot Cleaner User Manual

Model: Y200

INTRODUCTION

The uwant Y200 Spot Cleaner is a portable and powerful cleaning device designed for deep cleaning various fabric surfaces. It effectively removes stains, liquids, and embedded dirt from carpets, upholstery, mattresses, and car seats. The extraction system combines controlled spraying, mechanical brush action, and powerful cyclonic suction to wash, vacuum, and dry in a single pass, preventing waterlogging and residue.

With its 600W motor and up to 99.9% cleaning efficiency, the Y200 lifts stubborn dirt from fibers and immediately deposits it into the dirty water tank. This device is ideal for non-removable fabric sofas, carpets, rugs, mattresses, and car interiors, reducing odors, residues, and moisture, leaving surfaces clean, fresh, and ready for use.



Image: The uwant Y200 Spot Cleaner demonstrating its cleaning capability on a carpet stain.

SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the uwant Y200 Spot Cleaner to prevent injury or damage to the appliance.

- Always disconnect the appliance from the power supply before cleaning or performing maintenance.
- Do not immerse the main unit in water or other liquids.

- Keep the appliance away from children and pets.
- Use only uwant-approved cleaning solutions or mild, non-foaming detergents.
- Do not use the appliance to pick up flammable or combustible liquids, or anything that is burning or smoking.
- Ensure all connections are secure before operation.
- Do not operate the appliance with a damaged cord or plug.

PRODUCT OVERVIEW

Components Included:

- uwant Y200 Main Unit
- Cleaning Head with Hose
- Flannel Brush
- Handle Support
- Attachment Support
- Cleaning Solution (sample)

Key Features:

- **Dual Tank System:** Separate tanks for clean water (1.2L) and dirty water (1.4L) for continuous cleaning without frequent refills or emptying.
- **Powerful Suction:** 18,000 Pa suction power for effective dirt and stain removal.
- **Compact Design:** Lightweight (3.76 kg) and space-saving for easy transport and storage.
- **Self-Cleaning Function:** Automatic cleaning of the hose and nozzle after use to prevent mold and odors.
- **Low Noise Operation:** Advanced noise reduction technology keeps operation below 70 dB.



Image: The uwant Y200 Spot Cleaner showcasing its dual clean and dirty water tanks.



Punto chiave 2

Serbatoio deodorante all-in-one

Serbatoio capiente per acqua pulita e sporca:
niente rabbocchi o svuotamenti continui.

1200_{ML}

Serbatoio acqua pulita

1400_{ML}

Serbatoio acqua sporca

Image: The compact design of the uwant Y200 Spot Cleaner, demonstrating its space-saving storage.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Clean Water Tank:** Open the clean water tank (usually marked or transparent blue) and fill it with clean water. You may add a small amount of uwant cleaning solution as per instructions on the solution bottle. Do not overfill.
3. **Connect Hose and Nozzle:** Attach the cleaning hose securely to the main unit. Ensure the cleaning nozzle is firmly attached to the end of the hose.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for effective cleaning:

1. **Pre-treatment (Optional):** For heavily soiled areas, you may pre-spray the stain with cleaning solution and let it sit for a few minutes.
2. **Power On:** Turn on the uwant Y200 Spot Cleaner.
3. **Spray and Scrub:** Press the spray trigger on the cleaning nozzle to apply water and cleaning solution to the stained area. Move the nozzle back and forth over the stain, allowing the brush to agitate the dirt.
4. **Extract:** Release the spray trigger and continue moving the nozzle over the wet area to vacuum up the dirty water. The powerful 18,000 Pa suction will extract the liquid and dirt, leaving the surface damp but not saturated.
5. **Repeat:** Repeat steps 3 and 4 until the stain is removed and the extracted water appears clean.
6. **Drying:** Make several dry passes over the cleaned area to remove as much moisture as possible. The surface should dry quickly.

UWANT

Il pulito di UWANT è nei dettagli.

UWANT nasce dalla passione per la vera pulizia. Unendo una tecnologia innovativa al calore umano, perfezioniamo ogni prodotto e ogni singolo dettaglio per rendere la pulizia quotidiana più semplice, efficace e confortevole.

Image: Visual guide to the cleaning process: Spray and Clean, Deep Cleaning, Scrape and Remove, Suction and Dry.

18.000 Pa di aspirazione potente

Aspirazione rapida e potente, con elevata capacità pulente per rimuovere efficacemente sporco e macchie.



Image: The uwant Y200 Spot Cleaner highlighting its 18,000 Pa powerful suction for effective cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your uwant Y200 Spot Cleaner.

1. **Empty Dirty Water Tank:** After each use, empty the dirty water tank. Rinse it thoroughly with clean water and allow it to air dry to prevent odors and mold growth.
2. **Self-Cleaning Function:** Utilize the automatic self-cleaning function for the hose and nozzle. This feature flushes out residues, keeping the system fresh and clean.
3. **Clean Nozzle and Brush:** Detach the cleaning nozzle and brush. Rinse them under running water to remove any trapped debris or hair. The flannel brush can be replaced if worn.
4. **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth.
5. **Store Properly:** Store the appliance in a cool, dry place, ensuring the hose is neatly coiled and tanks are empty and dry.

Panni spazzola sostituibili

Facili da sostituire, freschi a ogni cambio!



Image: The uwant Y200 Spot Cleaner's self-cleaning system for the hose, showing water flow.



Image: Replaceable brush cloths for the uwant Y200 Spot Cleaner, ensuring fresh cleaning with every change.

TROUBLESHOOTING

If you encounter issues with your uwant Y200 Spot Cleaner, refer to the following common problems and solutions:

- **No Power:**

- Check if the power cord is securely plugged into the outlet and the unit.
- Ensure the power switch on the unit is in the 'ON' position.

- **No Spray:**

- Check if the clean water tank is filled and properly seated.
- Ensure the spray nozzle is not clogged. Clean if necessary.
- Verify the spray trigger is being pressed correctly.

- **Low Suction:**

- Check if the dirty water tank is full and needs emptying.
- Ensure the hose and nozzle are securely connected and free from blockages.
- Clean the filter if applicable (refer to product diagram for filter location).

- **Leaking:**

- Ensure both clean and dirty water tanks are properly sealed and seated.
- Check all hose connections for tightness.

- **Unpleasant Odor:**

- Thoroughly clean both water tanks and the hose using the self-cleaning function.
- Allow all components to air dry completely before storage.

If problems persist, please contact uwant customer support.

SPECIFICATIONS

Brand	uwant
Model Name	Y200
Power Source	Corded Electric
Motor Power	600W
Suction Power	18,000 Pa
Clean Water Tank Volume	1.2 Liters
Dirty Water Tank Volume	1.4 Liters
Dimensions (L x W x H)	31 cm x 29.5 cm x 16 cm
Noise Level	< 70 dB
Recommended Surfaces	Non-removable fabric sofas, carpets, rugs, mattresses, car seats, upholstery, fabrics

WARRANTY AND SUPPORT

The uwant Y200 Spot Cleaner comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use conditions.

For warranty claims, technical support, or any questions regarding your product, please contact uwant customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and product model number (Y200) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question