

Volorful V68

Volorful V68 Digital Voice Recorder 16GB User Manual

Model: V68 | Brand: Volorful

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Volorful V68 Digital Voice Recorder. Please read this manual carefully before using the device to ensure proper functionality and to maximize its features.

Package Contents

- 1 x Volorful V68 Digital Voice Recorder
- 1 x USB-C Data Cable
- 1 x 3.5mm Transcription Cable
- 1 x USB-C Charging Cable
- 1 x Lanyard
- 1 x User Manual

Grabación de Entrada de Línea

Puede conectar la grabadora de voz al reproductor MP3/teléfono/ordenador y grabar directamente en la salida de audio del dispositivo conectado



Reproductor
MP3



Teléfono



Ordenador



Image: Contents of the Volorful V68 package, including the digital voice recorder, various cables, a lanyard, and the manual.

1. Charging the Device

Before first use, fully charge the voice recorder. Connect the provided USB-C charging cable to the device and a power source (e.g., computer USB port or a USB wall adapter). The device features a built-in 580 mAh battery that fully charges in approximately 2 hours and provides up to 70 hours of continuous recording at 512Kbps.



Image: The voice recorder connected to a laptop via a USB-C cable, indicating charging and file transfer capabilities.

2. Powering On/Off

- To power on: Press and hold the **PLAY/PAUSE/OK** button until the screen illuminates.
- To power off: Press and hold the **PLAY/PAUSE/OK** button until the screen turns off.

3. Inserting a Memory Card (Optional)

The device comes with 16GB of internal storage. If more storage is needed, you can insert a microSD card (8GB to 512GB, not included). Locate the memory card slot on the side of the device. Gently insert the card until it clicks into place. After insertion, format the memory card through the device's settings to ensure compatibility.

16GB Internal Memory



16GB

16GB Internal Memory & Expandable Card Slot



1200 Hours

Store 1200 Hours 32kbps Recording



4000 Songs

Store 4000 MP3 Songs



1.44 Inch

Large Display

Image: The voice recorder highlighting its 16GB internal memory and the option for an expandable card slot, capable of storing up to 1200 hours of recording or 4000 MP3 songs.

OPERATING INSTRUCTIONS

1. Basic Recording

- To start recording: Press the **REC** button. The recording indicator will light up.
- To save and stop recording: Press the **SAVE** button. The recording will be saved as a file.
- The device supports recording quality up to 1536Kbps and offers MP3 (32-160Kbps) and WAV (256-1536Kbps) formats.

Simple Operation



- REC**
Start Recording
- SAVE**
Save Recording/Back
- MENU**
Setup Menu
- PLAY**
Play/Pause/OK, Power
- LOCK**
Lock All Buttons

Image: A hand interacting with the voice recorder, illustrating the functions of the REC, SAVE, MENU, PLAY, and LOCK buttons for simple operation.

Grabación PCM de 1536 Kbps

Micrófonos estéreo de alta sensibilidad y chip de grabación profesional capturan sonido de calidad de 1536 kbps



Chip de grabación
2159 Pro

7 niveles
Reducción de ruido

7 niveles
Ganancia de
grabación

Claro
Sonido estéreo

MP3	32kbps	64kbps	128kbps	160kbps	
WAV	256kbps	512kbps	768kbps	1024kbps	1536kbps

Image: The voice recorder displaying its 1536 Kbps PCM recording capability, powered by a 2159 Pro chip, featuring 7 levels of noise reduction and recording gain for clear stereo sound.

2. Playback

- To play a recording: Navigate to the file list using the **PREV/NEXT** buttons and press **PLAY/PAUSE/OK** to start playback.
- To adjust volume: Use the **VOL+** and **VOL-** buttons.
- To fast forward/rewind: During playback, press and hold **NEXT** or **PREV**.
- The device supports variable speed playback and functions as an MP3 player.

3. Menu Navigation

Press the **MENU** button to access settings. Use **PREV/NEXT** to navigate options and **PLAY/PAUSE/OK** to confirm selections. The 1.44-inch color screen provides an intuitive user interface.

4. Voice Activated Recording (VOR)

Enable Voice Activated Recording in the menu. The device will automatically start recording when sound is detected and pause when silence occurs. There are 6 adjustable sensitivity levels (e.g., Level 1 for 60dB, Level 6 for 85dB) to suit different environments.



Image: The voice recorder illustrating its voice-activated recording feature, showing different decibel levels for sensitivity adjustment.

5. Password Protection

Set a 6-digit password to protect your recordings. This feature offers up to 9260 password combinations to secure your audio files.



Image: The voice recorder's screen showing a password input interface, emphasizing the 6-digit password protection feature.

6. A-B Repeat Function

During playback, use the A-B repeat function to loop a specific segment of an audio file. This is useful for studying or transcribing important sections.



Image: The voice recorder demonstrating the A-B repeat feature, useful for repeating important content for better learning and memorization.

7. Line-in Recording

The device supports line-in recording. You can connect the voice recorder to an MP3 player, smartphone, or computer via the 3.5mm audio jack to record audio directly from the connected device's output. Note: Only 3.5mm 4-pole plug (TRRS) external microphones are supported; Bluetooth microphones are not compatible.

External microphone/Line input Recording

Plug the external microphone/transcription cable into the 3.5mm jack on the left side of the recorder to record



Image: The voice recorder connected to an external microphone and a smartphone, demonstrating its line-in recording capability via the 3.5mm jack.

8. File Management

Recorded files are automatically named with the format YYYY-MM-DD-HH-MM-SS. You can connect the device to a computer via USB-C to transfer, organize, or delete files. The device supports segmented recording, automatically splitting long recordings into smaller files.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Impact:** The device has a durable metal casing, but avoid dropping or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect the device to a power source using the USB-C cable and try again.
Cannot record.	Check if there is sufficient storage space (internal or external memory card). Ensure the device is not in playback mode.
Poor recording quality.	Check recording settings (bitrate, noise reduction, recording gain). Ensure the microphone is not obstructed. Record in a quieter environment.
Device is unresponsive.	Try resetting the device. Locate the small reset hole (often on the side or back) and gently press it with a thin object (e.g., a paperclip).
Cannot transfer files to computer.	Ensure the USB-C cable is securely connected to both the device and the computer. Try a different USB port or cable. The device should appear as a removable disk.
External microphone not working.	Ensure the external microphone is a 3.5mm 4-pole (TRRS) type. Bluetooth microphones are not supported. Check the connection.

SPECIFICATIONS

Feature	Detail
Model Number	V68
Internal Storage	16 GB
Expandable Memory	Supports 8GB to 512GB microSD card (not included)
Recording Formats	MP3 (32~160Kbps), WAV (256~1536Kbps)
Battery Capacity	580 mAh
Battery Life (Recording)	Up to 70 hours (at 512Kbps)
Charging Time	Approximately 2 hours
Display	1.44-inch Color Screen
Interface	USB-C
Headphone Jack	3.5 mm
Microphone	Built-in stereo microphone
Dimensions (L x W x H)	99 x 33 x 12 mm (3.9 x 1.3 x 0.5 inches)
Weight	65 grams

Feature	Detail
Compatible Devices	Personal Computer, MP3 Player, Smartphone

WARRANTY AND SUPPORT

Warranty Information

The Volorful V68 Digital Voice Recorder comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Volorful customer support. You can find contact information and additional resources by visiting the official Volorful store page:

[Visit the Volorful Store](#)

Please have your product model number (V68) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GWM538NV>

More documents and user manuals: <https://manuals.plus/>