



[Manuals.plus](#) /

> [OLIXIS](#) /

> [OLIXIS Air Fryer Toaster Oven Combo 16.9QT \(Model AH-KKX1226-16SR\) Instruction Manual](#)

OLIXIS AH-KKX1226-16SR

OLIXIS Air Fryer Toaster Oven Combo 16.9QT (Model AH-KKX1226-16SR) Instruction Manual

Comprehensive guide for setup, operation, and maintenance.

[Safety](#)

[Instructions](#)

[Product Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Support](#)

[Specifications](#)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and

the like, when in operation.

- Do not place any non-food items in the appliance.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT COMPONENTS

The OLIXIS Air Fryer Toaster Oven Combo comes with several components designed for versatile cooking. Familiarize yourself with each part before use.



Main Unit: The primary appliance with control dials and oven cavity.



Included Accessories: Tray handle (Clip), Fry Basket (Air Fry Basket), Baking Pan, and Wire Rack.

Control Panel Overview

SIMPLE LAYOUT

Clear and easy
to control



ALL METAL INNER CAVITY

High temperature
heating without odor



NON-SLIP BASE

stable and secure



The control panel features three main dials: Temperature, Mode, and Timer. A power indicator light is also present.

- **Temperature Dial:** Adjusts cooking temperature from 180°F to 450°F.
- **Mode Dial:** Selects cooking functions: Toast, Grill, Pizza, Air Fry, Dry Fruit.
- **Timer Dial:** Sets cooking time up to 60 minutes.
- **Power Indicator Light:** Illuminates when the appliance is powered on.

SETUP GUIDE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or shipping.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 4 inches (10 cm) of clearance on all sides for proper ventilation. Do not place near flammable materials.
3. **First Use Cleaning:** Before first use, wipe the exterior of the oven with a damp cloth. Wash all accessories (baking pan, air fry basket, wire rack, tray handle) in warm, soapy water. Rinse thoroughly and dry completely.

4. **Initial Burn-Off:** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at 400°F (200°C) on the "Air Fry" mode. Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during initial use.
5. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.



Ensure adequate space for the oven (12.8"D x 13.6"W x 13.4"H) for proper ventilation.

OPERATING INSTRUCTIONS

The OLIXIS Air Fryer Toaster Oven Combo offers five primary cooking functions. Follow these steps for general operation:

General Cooking Steps:

1. **Prepare Food:** Place your food on the appropriate accessory (baking pan, air fry basket, or wire rack).
2. **Insert Accessory:** Slide the accessory with food into the desired rack position within the oven.
3. **Select Temperature:** Turn the **Temperature Dial** to the desired cooking temperature (180°F - 450°F).

4. **Select Mode:** Turn the **Mode Dial** to the desired cooking function (Toast, Grill, Pizza, Air Fry, Dry Fruit).
5. **Set Timer:** Turn the **Timer Dial** to the desired cooking time (up to 60 minutes). The power indicator light will illuminate.
6. **Cooking:** The oven will begin cooking. The light inside the oven will turn on automatically during operation.
7. **Completion:** Once the timer reaches zero, a bell will sound, and the oven will automatically turn off.
8. **Remove Food:** Carefully remove the cooked food using oven mitts and the tray handle (if applicable).

Specific Function Guidelines:



The oven supports multiple cooking functions for diverse meal preparation.

- **Air Fry:** Use the air fry basket for crispy results with minimal oil. This mode utilizes convection for faster, crispier cooking.

Convection Bake & Convection Broil

Cooks faster but crispier



Convection technology ensures even and crispy cooking.

- **Toast:** Place bread on the wire rack. Adjust temperature and time based on desired browning.
- **Grill:** Use the wire rack or baking pan. Ideal for grilling meats or vegetables.
- **Pizza:** Place pizza on the baking pan or wire rack. Follow pizza cooking instructions for temperature and time.
- **Dry Fruit:** This low-temperature setting is suitable for dehydrating fruits. Ensure thin, even slices for best results.

Video Demonstration:

Your browser does not support the video tag.

This short video provides a visual overview of the OLIXIS Air Fryer Toaster Oven Combo's features and functions.

CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your OLIXIS Air Fryer Toaster Oven Combo.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Cleaning the Interior:**

- Wipe the interior walls with a damp cloth and mild liquid soap. Avoid abrasive cleaners or scouring pads.
- For stubborn stains, a non-abrasive liquid cleanser can be used. Apply to a sponge, not directly to the oven.
- The inner cavity is made of all-metal for high temperature heating without odor.

3. **Cleaning the Exterior:** Wipe the exterior with a damp cloth and dry thoroughly. Do not immerse the oven in water.

4. **Cleaning Accessories:**

- The baking pan, air fry basket, and wire rack are dishwasher safe.
- Alternatively, wash them in warm, soapy water, rinse, and dry completely.



All included accessories are dishwasher safe for easy cleaning.

5. **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards.
6. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.

TROUBLESHOOTING GUIDE

If you encounter any issues with your OLIXIS Air Fryer Toaster Oven Combo, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the timer dial to the desired cooking time.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; food placement.	Do not overcrowd the basket/pan. Adjust temperature and time as needed. Ensure food is placed in a single layer for air frying. Rotate food halfway through cooking.
Smoke or burning smell during operation.	Food residue; excessive oil; initial burn-off.	Unplug and allow to cool. Clean the interior and accessories thoroughly. Use less oil if air frying. A slight odor is normal during first use. If smoke persists, contact customer support.
Timer does not work.	Timer dial not engaged.	Ensure the timer dial is turned past the 10-minute mark to engage the timer mechanism, then set to desired time.
Appliance is noisy.	Normal fan operation for convection.	The convection fan will produce some noise during operation, which is normal. If the noise is unusually loud or grinding, contact customer support.

PRODUCT SPECIFICATIONS

- **Brand:** OLIXIS
- **Model Name:** AH-KKX1226-16SR
- **Capacity:** 16.9 Quarts (17 Liters)
- **Product Dimensions (D x W x H):** 12.8" x 13.6" x 13.4"
- **Item Weight:** 13 Pounds
- **Material:** Stainless Steel
- **Color:** Silver
- **Wattage:** 1600 Watts
- **Control Type:** Knob Control
- **Temperature Range:** 180°F - 450°F
- **Timer:** Up to 60 minutes
- **Special Features:** Temperature Control, Timer, 5-in-1 Functions (Pizza, Toast, Grill, Air Fryer, Dry Fruit)
- **Included Components:** Air Fryer Toaster Oven Combo, Tray Handle, Fry Basket, Baking Pan, Wire Rack

WARRANTY AND CUSTOMER SUPPORT

OLIXIS products are manufactured to the highest quality standards. For warranty information, product support, or to inquire about replacement parts, please contact OLIXIS customer service.

- **Customer Service:** Refer to the contact information provided with your purchase or visit the official OLIXIS website.
- **Proof of Purchase:** Please retain your proof of purchase for warranty claims.

