

[Manuals.plus](#) /

› [Nakamichi](#) /

› Nakamichi OP-TW211 Ear Cuff Earphones User Manual

Nakamichi OP-TW211

Nakamichi OP-TW211 Ear Cuff Earphones User Manual

Model: OP-TW211

INTRODUCTION

Thank you for purchasing the Nakamichi OP-TW211 Ear Cuff Earphones. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earphones. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.



イヤークフ型設計

快適な装着感



二つモード

音楽モード、ゲームモード



Bluetooth6.0搭載

通信速度と安定性が向上



マルチポイント

二台同時接続可能



ENCノイズリダクション

クリアな通話を実現



音漏れ防止

指向性技術による音漏れを抑制



最大18時間再生

イヤホン本体のみ4.5時間



ライチレザーの質感

贅沢で個性的な外観

PRODUCT OVERVIEW

The Nakamichi OP-TW211 earphones are designed for comfort and high-quality audio, featuring an open-ear design that allows you to stay aware of your surroundings. Key features include:

- **Comfortable Open-Ear Design:** Each earbud weighs only 4.3g, providing a lightweight and stable fit without pressure or stuffiness, even during extended use. The 0.6mm shape-memory titanium wire adapts to various ear shapes.
- **Dual Sound Modes:** Equipped with a 10mm dynamic driver, these earphones offer a Music Mode for powerful bass and rich mid-high tones, and a Game Mode with a Bluetooth 6.0 chip to significantly reduce audio transmission delay for a seamless gaming experience.
- **Clear Call Technology:** Built-in dual high-performance microphones with ENC (Environmental Noise Cancellation) technology effectively reduce ambient noise like wind, crowds, and car sounds, ensuring clear voice transmission during calls.
- **Multipoint Connectivity:** Connect simultaneously to two devices, such as a smartphone and a PC, allowing for smooth switching between music, calls, and online meetings.
- **Extended Battery Life:** Enjoy approximately 4.5 hours of playback from the earbuds, extending up to 18 hours with the charging case. An LED indicator displays battery level and charging status.

快適なつけ心地

人間工学に基づいたイヤークフ型と超軽量デザインにより、
どんな耳の形にもフィットし、長時間使用でもストレスフ
リーな装着体験を提供します。



0.6mmの
形状記憶チタンワイヤー



片耳わずか4.3g



Image: Close-up of the ear cuff design highlighting the comfortable and lightweight fit.

SETUP

Initial Pairing

1. Before first use, ensure you remove any protective film from the charging contacts on both earphones.
2. Place both earphones into the charging case and close the lid.
3. Open the charging case lid. The earphones will automatically power on and enter pairing mode.
4. On your device (smartphone, PC, etc.), enable Bluetooth and search for "Nakamichi OP-TW211" in the list of available devices.
5. Select the earphones to connect. Once connected, you will hear an audible confirmation.

Wearing Instructions

1. Identify the left and right earphones. The smaller part of the earphone faces forward, and the larger part faces backward.
2. Gently hook the earphone over your ear, as shown in the illustration.
3. Adjust the position of the earphone to ensure the speaker part is aligned with your ear canal for optimal sound delivery.

装着方法



01

まず、イヤホンの左右側を確認します。イヤホンの小さい方が前、大きい方が後ろです。前後を間違えないようにしてください。

02

図のように耳に挟むように装着してください。



03

イヤホンの位置を調整し、スピーカー部分が耳道と一致していることを確認してください。

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case lid, or press and hold the touch control area on both earphones for 3 seconds.
- **Power Off:** Place the earphones back into the charging case and close the lid, or press and hold the touch control area on both earphones for 5 seconds.

Touch Controls

The Nakamichi OP-TW211 earphones feature intuitive touch controls. Refer to the table below for common operations:

Function	Action	Earphone
Play/Pause Music	Tap 2 times	Left or Right
Previous Track	Tap 1 time	Left
Next Track	Tap 1 time	Right
Answer/End Call	Tap 2 times	Left or Right
Volume Up	Press and hold for 3 seconds	Right
Volume Down	Press and hold for 3 seconds	Left
Activate Voice Assistant	Press and hold for 3 seconds	Left

Switching Modes (Music/Game)

The earphones support two distinct modes. The method to switch between Music Mode and Game Mode is typically done via a specific touch gesture or automatically detected by the device. Please refer to the product's quick start guide or manufacturer's website for the exact switching method if not detailed here.

音楽モード 🎵

10mmダイナミックドライバーを搭載して、音楽モードでより豊かな中高音域のサウンドを保ち、より自然感あるボーカルや楽器の質感を実現します。



ゲームモード 🎮

Bluetooth6.0技術とゲームモードの起動により、映像と音声のズレを最小限に抑えられ、アクションやリズムゲームでもリアルタイムで反応しやすくなります。



Image: Illustration of the earphones' Music Mode and Game Mode capabilities.

Multipoint Connection

To use multipoint connectivity, first pair the earphones with your primary device (e.g., smartphone). Then, disconnect the earphones from the primary device's Bluetooth settings (do not unpair). Next, pair the earphones with your secondary device (e.g., PC). Finally, reconnect the earphones to your primary device from its Bluetooth settings. The earphones should now be connected to both devices simultaneously, allowing seamless switching between audio sources.

マルチポイント接続

スマホやパソコン、タブレットなど2台のBluetooth機器を同時に接続可能です。両方もスムーズな切り替え可能です。



Image: The earphones and charging case shown with a smartphone and tablet, demonstrating multipoint connection.

MAINTENANCE

- **Cleaning:** Regularly wipe the earphones and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Charging Contacts:** Ensure the charging contacts on both the earphones and the case are clean and free of dust or debris to maintain proper charging.
- **Storage:** When not in use, store the earphones in their charging case to protect them and keep them charged. Avoid extreme temperatures and humidity.
- **Water Resistance:** While designed for daily use, avoid submerging the earphones in water. Dry them thoroughly if they get wet.

TROUBLESHOOTING

- **Earphones not pairing/Only one earphone has sound:**
Ensure both earphones are fully charged. Place both earphones back into the charging case, close the lid, wait a few seconds, then reopen. Re-attempt pairing with your device. If the issue persists, try unpairing the earphones from your device's Bluetooth list and then re-pairing them.
- **No sound or low volume:**
Check the volume levels on both your earphones and your connected device. Ensure the earphones are properly seated in your ears and the speaker is aligned with your ear canal.
- **Charging issues:**
Verify that the charging cable is securely connected to both the case and a power source. Clean the charging contacts on the earphones and inside the case. Check the LED indicator on the case for charging status.
- **Call quality issues (e.g., static, muffled sound):**
Ensure the microphones are not obstructed. Move to an environment with less background noise. Check your device's call settings.
- **Connection drops frequently:**
Ensure your device is within the effective Bluetooth range (typically 10 meters/33 feet) and there are no significant obstacles between the earphones and your device. Avoid strong electromagnetic interference.

SPECIFICATIONS

Brand	Nakamichi
Model Number	OP-TW211
Color	Black
Ear Placement	Open-ear
Headphone Style	Ear Cuff Type
Item Weight	42.6 grams
Impedance	16 ohms
Sensitivity	118 dB
Audio Driver Type	Dynamic Driver

Noise Control	None (ENC for calls only)
Wireless Type	Bluetooth
Bluetooth Version	6.0
Control Type	Touch Control
Compatible Devices	Gaming consoles, Tablets, Desktop PCs, Laptops, Mobile Phones
Included Items	Instruction Manual
Country of Origin	China

WARRANTY AND SUPPORT

Your Nakamichi OP-TW211 Ear Cuff Earphones come with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Nakamichi customer service through the retailer where you purchased the product or visit the official Nakamichi website for support contact information. Please retain your proof of purchase for warranty validation.

© 2026 Nakamichi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question