

[Manuals.plus](#) /

› [Jadfezy](#) /

› Jadfezy Dual Action Cam J-09 User Manual

Jadfezy J-09 Camera Sport

Jadfezy Dual Action Cam J-09 User Manual

Model: J-09 Camera Sport | Brand: Jadfezy

1. INTRODUCTION

Thank you for choosing the Jadfezy Dual Action Cam J-09. This compact and versatile action camera is designed to capture your adventures with ease. Featuring dual screens, IP68 water resistance for everyday use, and multiple shooting modes, it is ideal for beginners and outdoor enthusiasts. Please read this manual carefully to ensure proper use and optimal performance of your device.

2. PACKAGE CONTENTS

Before using your Jadfezy Dual Action Cam J-09, please check the package contents to ensure all items are present:

- Jadfezy Dual Action Cam J-09
- 2 x 1350 mAh Rechargeable Batteries
- 32GB Micro SD Card
- USB Charging Cables
- Various Mounting Accessories (for bicycles, helmets, skateboards, selfie sticks)



Figure 2.1: Included Accessories

3. PRODUCT OVERVIEW

3.1 Key Features

- **Dual Screens:** 2.0-inch rear screen and 1.3-inch front screen for easy framing.
- **High-Resolution Capture:** 1080p video recording at 30 frames per second and 16 MP still images.
- **Extended Battery Life:** Two 1350 mAh rechargeable batteries provide ample recording time.
- **IP68 Water Resistance:** Designed to withstand rain, splashes, and shallow water environments. *Note: Not suitable for underwater diving.*
- **Versatile Shooting Modes:** Supports continuous shooting, loop recording, and automatic modes.
- **Wide-Angle Lens:** Captures a broad field of view for immersive footage.
- **Expandable Storage:** Supports Micro SD cards, with a 32GB card included.

ACCESSORI INCLUSI:

The accessories shown include:

- A black GoPro camera body.
- Two AA batteries (labeled "3.7V Lithium Battery 1500mAh, 4.95Wh").
- A black SD card.
- A black mounting bracket.
- A red square adhesive mount.
- A black strap mount.
- A black strap.
- A black USB cable.
- A white USB cable.

Figure 3.1: Key Features of the Jadfezy Dual Action Cam J-09



Figure 3.2: Dual Screen Display

4. SETUP

4.1 Battery Installation and Charging

1. Open the battery compartment cover located on the side or bottom of the camera.
2. Insert a 1350 mAh rechargeable battery, ensuring the contacts align correctly.
3. Close the battery compartment cover securely.
4. To charge, connect the camera to a USB power source using the provided USB cable. The charging indicator light will illuminate.
5. A full charge typically takes approximately 2-3 hours. The indicator light will change or turn off once charging is complete.



Figure 4.1: Battery Compartment and Battery Life

4.2 Micro SD Card Installation

1. Locate the Micro SD card slot on the camera.
2. Insert the provided 32GB Micro SD card (or another compatible card, up to 64GB, Class 10 or higher recommended) with the gold contacts facing the correct direction.
3. Push the card gently until it clicks into place. To remove, push it again until it springs out.

4.3 Mounting Accessories

The Jadfezy Dual Action Cam J-09 comes with a variety of mounting accessories to suit different activities. Follow the instructions provided with each accessory for secure attachment.

- **Helmet Mount:** Attach the camera to your helmet for point-of-view footage.
- **Bicycle Mount:** Secure the camera to your bike handlebars.
- **Skateboard Mount:** Mount the camera to your skateboard for unique angles.
- **Selfie Stick Mount:** Use with a selfie stick for extended reach.

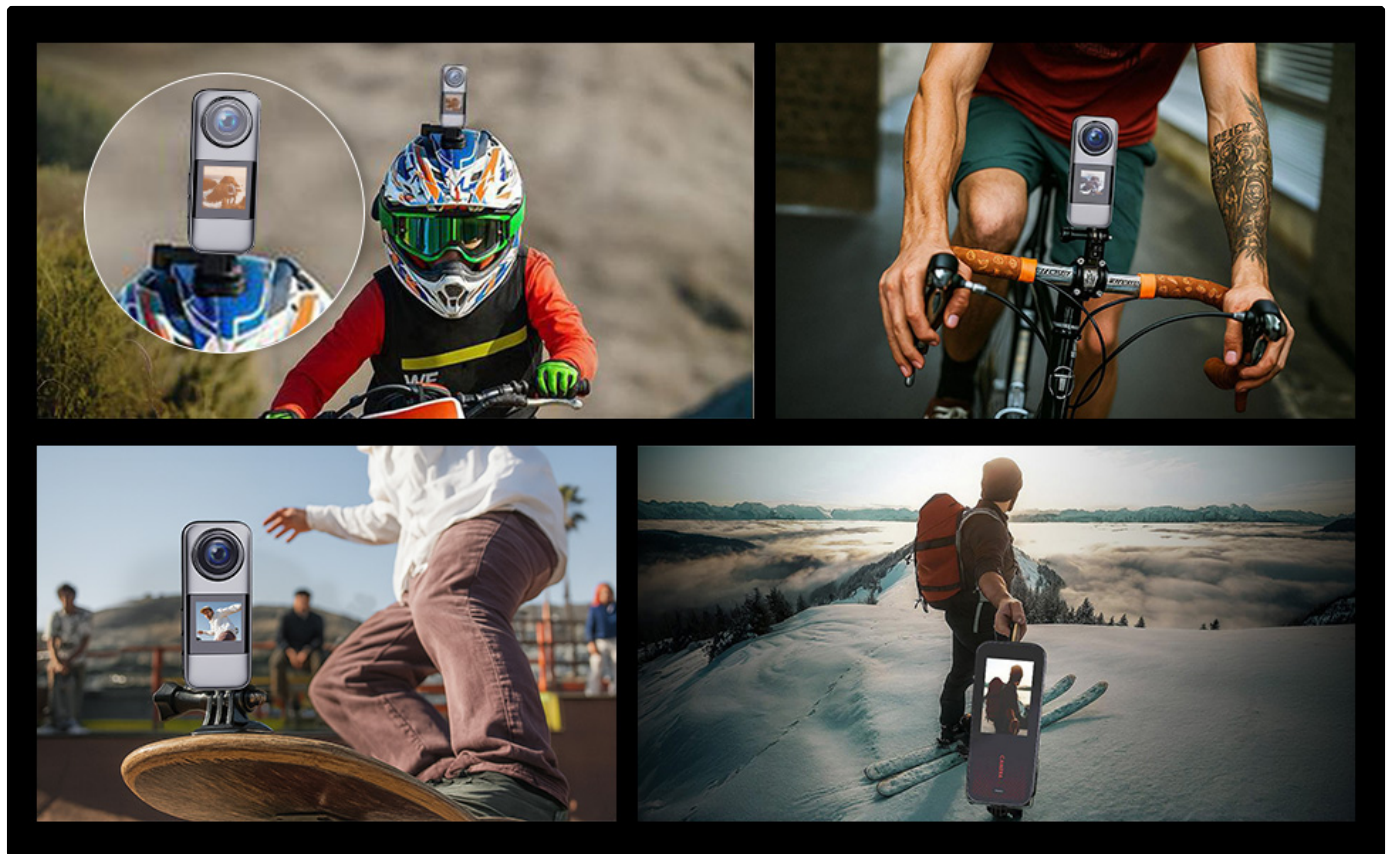


Figure 4.2: Mounting Examples

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Power button (usually located on the top or side) for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the Power button again until the screen turns off.

5.2 Screen Switching

The camera features both a rear (2.0-inch) and a front (1.3-inch) screen. To switch between screens, locate the screen switch button (refer to the camera's physical layout for exact placement) and press it. This allows for easy self-recording or traditional framing.

5.3 Basic Photo/Video Capture

- **Switch Modes:** Use the Mode button to cycle through video recording, photo capture, and playback modes.
- **Start Recording/Take Photo:** In video mode, press the Shutter/OK button to start recording; press again to stop. In photo mode, press the Shutter/OK button to take a picture.

5.4 Changing Shooting Modes

The camera supports various shooting modes to enhance your capture experience:

- **Continuous Shooting:** Captures a series of photos in quick succession.
- **Loop Recording:** Records video in segments, overwriting the oldest files when the memory card is full (useful for dashcam functionality).
- **Automatic Mode:** Standard photo or video capture.

Access these modes through the camera's menu settings. Navigate using the Up/Down buttons and confirm with the

Shutter/OK button.



Figure 5.1: Multiple Shooting Modes

5.5 Menu Navigation

Press the Menu button to access settings. Use the Up/Down buttons to scroll through options and the Shutter/OK button to select. Press the Menu button again to exit the menu.

6. WATER RESISTANCE GUIDELINES

The Jadfezy Dual Action Cam J-09 features an IP68 water resistance rating, meaning it is protected against dust ingress and immersion in water up to 1.5 meters for 30 minutes. This makes it suitable for:

- Rainy conditions
- Splashes
- Shallow water activities (e.g., poolside, light snorkeling)

Important Warning: The IP68 rating is for everyday use and shallow water exposure. Do not use this camera for deep underwater photography or diving. Ensure all ports and covers are securely closed before exposing the camera to water.



Figure 6.1: IP68 Water Resistance

7. MAINTENANCE

7.1 Cleaning

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

7.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods, remove the batteries.

7.3 Battery Care

- Charge batteries fully before first use.
- Avoid completely draining the batteries regularly to prolong their lifespan.
- If batteries are not used for a long time, charge them every 3-6 months to maintain their capacity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is drained or not installed correctly.	Charge the battery or re-install it correctly.

Problem	Possible Cause	Solution
Cannot record video/take photos.	Micro SD card is full, not inserted, or corrupted.	Check SD card, format it (backup data first), or replace it. Ensure enough space is available.
Poor image/video quality.	Lens is dirty; lighting conditions are poor.	Clean the lens. Ensure adequate lighting.
Camera freezes or becomes unresponsive.	Software glitch or low battery.	Press and hold the Power button to force a shutdown, then restart. Ensure battery is charged.

9. SPECIFICATIONS

Feature	Detail
Model Name	J-09 Camera Sport / J-09 Action kamera
Brand	Jadfezy
Video Capture Resolution	1080p
Effective Still Image Resolution	16 MP
Photo Sensor Technology	CMOS
Screen Size	2.0 Inches (Rear), 1.3 Inches (Front)
Connectivity Technology	USB
Flash Memory Type	Micro SD (32GB included)
Water Resistance Level	IP68 (Waterproof for daily use, not for diving)
Number of Batteries	2 x 1350 mAh (included)
Lens Type	Wide-angle
Focus Type	Manual Focus
Digital Zoom	Yes
Supported Image Format	JPEG
Supported Video Format	AVI
Supported Audio Format	AAC
Shooting Modes	Automatic, Continuous, Loop Recording
UPC	728161905582
ASIN	B0GWN67SXW

10. WARRANTY AND SUPPORT

Jadfezy products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official Jadfezy website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0GWN67SXW>

More documents and user manuals: <https://manuals.plus/>