

KBS MBF-012

KBS 2.2LB Smart Bread Maker MBF-012 Instruction Manual

Model: MBF-012 | Brand: KBS

1. INTRODUCTION

Thank you for choosing the KBS 2.2LB Smart Bread Maker, Model MBF-012. This automatic bread machine is designed to simplify homemade bread baking with its advanced features, including a color touchscreen, dual heating elements, a true ceramic pan, and an automatic nut dispenser. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and delicious results.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot parts or bread.
- To protect against electric shock, do not immerse the cord, plugs, or housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Avoid contact with moving parts.
- Ensure the bread maker is placed on a stable, heat-resistant surface.

3. PRODUCT OVERVIEW

The KBS MBF-012 Smart Bread Maker is equipped with features designed for convenient and versatile bread baking.

3.1 Key Features

- **Smart Color Touchscreen:** Intuitive interface for easy program selection and setting adjustments.
- **20 Automatic Programs + 2 Custom Programs:** Offers a wide range of baking options, including Gluten-Free, Sourdough, Dough, Cake, Jam, and Yogurt, plus customizable settings for personalized recipes.
- **Premium Ceramic Pan:** Non-toxic, BPA-free, and PTFE-free for healthy baking and easy cleaning.
- **Dual Heaters & 360° Convection System:** Ensures even baking, superior crust, color, and texture.
- **Automatic Nut Dispenser:** Automatically adds nuts, fruits, or other mix-ins at the optimal time during the baking cycle.
- **Adjustable Loaf Capacity:** Bakes 1LB, 1.5LB, or 2.2LB loaves.
- **3 Crust Colors:** Select from Light, Medium, or Dark crusts.
- **15-Hour Delay Timer:** Allows for delayed baking to enjoy fresh bread at a desired time.
- **60-Minute Keep Warm Function:** Maintains bread temperature after baking.
- **15-Minute Power Failure Recovery:** Resumes baking cycle after short power interruptions.
- **Whisper-Quiet Performance:** Operates below 40dB during kneading.

3.2 Included Components

The bread maker comes with the following accessories:

- 1* KBS Bread Machine
- 1* Ceramic Bread Pan
- 1* Auto Fruit Nut Dispenser
- 1* Measuring Cup
- 1* Measuring Spoon
- 1* Hook (for paddle removal)
- 2* Stirring Rod (Kneading Paddles)
- 1* Heat-resistant Gloves (Oven Mitt)
- 1* Quick Guide Book
- 1* User Manual
- 1* Recipe Book

Complete Baking Kit Included

12 Essential Accessories to Start Baking



Figure 1: Included Accessories for the KBS Bread Maker.

4. SETUP

4.1 Unpacking and Initial Cleaning

1. Carefully remove the bread maker and all accessories from the packaging.
2. Wash the bread pan, kneading paddles, measuring cup, and measuring spoon with warm, soapy water. Rinse thoroughly

and dry completely.

3. Wipe the exterior of the bread maker with a damp cloth. Do not immerse the main unit in water.
4. Before first use, it is recommended to run a 10-minute bake cycle empty to eliminate any manufacturing odors.

4.2 Component Assembly

1. Place the bread maker on a stable, flat, and heat-resistant surface, ensuring adequate ventilation around the unit.
2. Insert the kneading paddle(s) onto the shaft(s) at the bottom of the bread pan.
3. Place the bread pan into the baking chamber, pressing down firmly until it clicks into place.
4. If using, attach the automatic nut dispenser to its designated slot on the lid.
5. Close the lid securely.

5. OPERATING INSTRUCTIONS

The KBS Smart Bread Maker features a user-friendly color touchscreen for easy operation.

Smart Color Touchscreen

Intuitive Color Display for Effortless Baking



2 Simple Steps to Perfect Baking



1 Add Put Ingredients



2 Select Choose Menu



3 Enjoy Fresh Bread

Figure 2: Smart Color Touchscreen Interface.

5.1 Basic Operation Steps

- 1. Add Ingredients:** Follow your recipe and add ingredients to the bread pan in the specified order (typically liquids first, then dry ingredients, with yeast last). Ensure the kneading paddle is in place.
- 2. Select Menu:** Plug in the bread maker. The display will light up. Use the touchscreen to navigate through the 20 automatic programs or select one of the 2 custom programs.

3. Adjust Settings (Optional):

- **Loaf Size:** Press the 'Weight' button (often indicated by 'LB' icon) to cycle through 1.0LB, 1.5LB, or 2.2LB options.
 - **Crust Color:** Press the 'Color' button (often indicated by a bread icon) to select Light, Medium, or Dark crust.
 - **Delay Timer:** To delay the start of the baking process, press the 'Time+' or 'Time-' buttons to set the desired delay time. The total time displayed includes the delay time and the program's baking time.
4. **Start Baking:** Press the 'Start/Pause' button to begin the selected program. The machine will automatically perform kneading, rising, and baking cycles.
 5. **Automatic Nut Dispenser:** If your recipe includes nuts or fruits, add them to the automatic nut dispenser before starting the program. The dispenser will release them into the dough at the appropriate time.
 6. **End of Cycle:** Once the program is complete, the bread maker will beep and automatically switch to a 60-minute 'Keep Warm' mode.
 7. **Remove Bread:** Unplug the appliance. Using oven mitts, carefully remove the bread pan from the machine. Invert the pan to release the bread onto a cooling rack. Use the provided hook to remove the kneading paddle if it remains in the bread.

Auto Nut Dispenser

Hands-free Ingredients Adding



Figure 3: Using the Automatic Nut Dispenser.

Bake Bread Just The Way You Like

3 Loaf Sizes & 3 Crust Colors



1.0 LB

 Solo
Breakfast



1.5 LB

 Couple &
Family



2.2LB

 Weekend
Gathering



Light



Medium



Dark



KBS



Figure 4: Loaf Size and Crust Color Options.

Set Night, Enjoy Morning

Fresh Bread Waiting When You Wake Up



Figure 5: Delay Timer and Keep Warm Functions.

5.2 Custom Programs

The MBF-012 offers two custom programs, allowing you to define specific cycle times and temperatures for kneading, rising, and baking. Your custom settings are saved for future one-press use.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bread maker.

6.1 Cleaning the Bread Pan and Kneading Paddles

- The ceramic bread pan and kneading paddles are dishwasher safe.
- Alternatively, wash them with warm, soapy water using a soft sponge. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- If a kneading paddle is stuck in the bread, soak the pan in warm water for about 15-20 minutes to loosen it before removal.
- Ensure all parts are completely dry before reassembling or storing.



Figure 6: Cleaning the Ceramic Bread Pan.

6.2 Cleaning the Main Unit

- Unplug the bread maker and allow it to cool completely.
- Wipe the exterior housing, lid, and viewing window with a soft, damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or steel wool, as these can damage the finish.
- Clean the automatic nut dispenser with a damp cloth and ensure it is dry before reattaching.
- Never immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar, incorrect flour type.	Check yeast expiration date. Use warm water (100-110°F / 38-43°C). Ensure correct ingredient measurements.
Bread is too dense	Too much flour, not enough liquid, insufficient kneading.	Measure ingredients precisely. Ensure proper liquid-to-flour ratio. Select appropriate program.
Bread is too sticky/wet	Too much liquid, not enough flour.	Adjust liquid or flour slightly in future recipes. Ensure correct measurements.

Problem	Possible Cause	Solution
Uneven crust color	Lid not fully closed, uneven heat distribution.	Ensure lid is securely closed. The dual heating system should provide even baking; if issues persist, contact support.
Unusual noise during operation (e.g., scraping)	Kneading paddle not properly seated, foreign object in pan, motor issue.	Ensure kneading paddle is firmly attached. Check for any debris in the pan. If noise persists and affects performance, contact customer support.
Automatic nut dispenser not working	Dispenser clogged, not properly installed, or program does not include a dispense cycle.	Clean the dispenser thoroughly. Ensure it is correctly attached. Verify the selected program supports automatic dispensing.

For issues not covered here, please refer to the comprehensive troubleshooting section in your recipe book or contact KBS customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	MBF-012
Brand	KBS
Voltage	120 volts AC
Wattage	710 watts
Item Weight	16.5 pounds
Product Dimensions (D x W x H)	9.8" x 13.6" x 12.2"
Capacity	Up to 2.2 pounds
Number of Programs	20 (plus 2 custom programs)
Material	Stainless Steel Body, Ceramic Non-Stick Pan
Display	Smart Color Touchscreen
Special Features	Auto Nut Dispenser, 15H Delay Timer, 15-Minute Power Recovery, 60-Minute Keep Warm, 3 Loaf Sizes & 3 Crust Colors

9. WARRANTY AND SUPPORT

9.1 Product Warranty

The KBS 2.2LB Smart Bread Maker (Model MBF-012) comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty inquiries, or any questions regarding your KBS bread maker, please contact KBS customer support. Refer to the contact information provided in your quick guide book or visit the official KBS website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question