

[Manuals.plus](#) /

› [Genérico](#) /

› Genérico X9 Wireless Gaming Controller User Manual

Genérico X9

Genérico X9 Wireless Gaming Controller User Manual

Model: X9

INTRODUCTION

Thank you for purchasing the Genérico X9 Wireless Gaming Controller. This controller is designed to provide a precise and comfortable gaming experience across multiple platforms. It features stable connectivity via Bluetooth and 2.4GHz wireless technology, a 6-axis gyroscope for motion control, and dual shock vibration for immersive feedback. This manual will guide you through the setup, operation, and maintenance of your new controller.

PACKAGE CONTENTS

- 1 x Genérico X9 Wireless Gaming Controller
- 1 x USB-C Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the buttons and features of your X9 Wireless Gaming Controller.



Figure 1: Front view of the Genérico X9 Wireless Gaming Controller (Blue variant).

One Button For The WIN

Using all skills in one key, additional programmable mouse keys to assign buttons' function to release fingers.



Figure 2: Back view of the controller highlighting the programmable M1 and M2 buttons.

Button Layout:

- **Left/Right Analog Sticks:** For precise movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R/ZL/ZR Buttons:** Shoulder and trigger buttons.
- **HOME Button:** Returns to the system home screen.
- **TURBO Button:** Activates turbo function for rapid input.
- **Screenshot Button:** Captures screenshots.
- **+/- Buttons:** System menu navigation.
- **M1/M2 Buttons:** Programmable back buttons.

SETUP AND CONNECTION

Connecting to Nintendo Switch:

1. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. On the controller, press and hold the **HOME** button for 3-5 seconds until the indicator lights flash rapidly.
3. Once connected, the indicator light(s) on the controller will remain solid.

The controller is compatible with Nintendo Switch V1, V2, OLED, and Lite models.

Connecting to PC (Steam):

The X9 controller supports native connection to PC via Steam using Bluetooth or 2.4GHz wireless.

1. Bluetooth Connection:

- Ensure your PC has Bluetooth enabled.
- Go to your PC's Bluetooth settings and search for new devices.
- On the controller, press and hold the **HOME** button until the indicator lights flash.
- Select "X9 Controller" from the list of available devices on your PC to pair.

2. 2.4GHz Wireless Connection (if applicable, typically requires a USB dongle):

- Insert the 2.4GHz USB receiver (if included) into an available USB port on your PC.
- Turn on the controller. It should automatically connect to the receiver.



Figure 3: The X9 controller offers broad compatibility with multiple gaming platforms.

OPERATING INSTRUCTIONS

6-Axis Gyroscope:

The integrated 6-axis gyroscope provides precise motion sensing for games that utilize tilt and movement controls. This feature is automatically active when supported by the game.

Dual Shock Vibration:

The controller features dual motors for immersive haptic feedback. You can adjust the vibration intensity to your preference.

3 Levels Adjustable Virbration

Built-in dual motor with three adjustable virbration,give you the most shocking and realistic experience.



Figure 4: The controller offers three adjustable vibration levels for a customized gaming experience.

Refer to your game's settings or controller's specific button combinations (if any) to adjust vibration levels.

Programmable Buttons (M1/M2):

The M1 and M2 buttons on the back of the controller can be programmed to perform complex actions or map frequently used button combinations, enhancing your gameplay efficiency.

One Button For The WIN

Using all skills in one key, additional programmable mouse keys to assign buttons' function to release fingers.



Figure 5: Programmable M1/M2 buttons allow for custom button assignments, up to 16 buttons can be mapped.

Programming Steps: (Note: Specific programming steps may vary. Consult the included physical manual for detailed instructions if this feature is not intuitive.)

1. Press and hold the **Program Button** (often a small button near M1/M2 or a combination like TURBO + M1).
2. Press the button(s) you wish to map (e.g., A+B+X+Y).
3. Press the **M1** or **M2** button to assign the sequence.
4. Release the **Program Button** to save.

CHARGING THE CONTROLLER

The X9 controller is equipped with an 800mAh rechargeable battery, providing extended gameplay sessions.

Enlarged 800mAh, Battery Life

Better durability with Ternary Lithium Battery



Ternary Lithium Battery

- **Longer** Life
- **Larger** Battery capacity
- **More** Charge/Discharge times

VS

Lithium Polymer Battery

- General Life
- General Battery capacity
- General Charge/Discharge times

Figure 6: The controller features an 800mAh Ternary Lithium Battery for longer life and better durability.

1. Connect the included USB-C charging cable to the USB-C port on the controller.
2. Connect the other end of the cable to a USB power source (e.g., PC, USB wall adapter, Nintendo Switch dock).
3. The indicator lights on the controller will show charging status (e.g., blinking while charging, solid when fully charged).
4. A full charge typically takes approximately 2-3 hours.

MAINTENANCE

- Keep the controller dry and away from extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid dropping the controller or subjecting it to strong impacts.
- When not in use for extended periods, store the controller in a safe place and charge it periodically to maintain battery health.

TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the controller is charged.
 - Verify Bluetooth is enabled on your device (Switch/PC).
 - Try re-pairing the controller by following the "Setup and Connection" steps.
 - Restart your console/PC and the controller.
- **Input lag or disconnection:**
 - Ensure you are within the 8-meter wireless range.
 - Minimize interference from other wireless devices.
 - Ensure the controller is fully charged.
- **Buttons not responding:**
 - Check if the controller is properly connected.
 - Restart the controller and the game.
 - Ensure no physical obstruction is preventing button presses.
- **Vibration not working:**
 - Check in-game settings to ensure vibration is enabled.
 - Verify the vibration intensity is not set to "Weak" or off.

SPECIFICATIONS

Model	X9
Connectivity	Bluetooth, 2.4GHz Wireless
Compatibility	Nintendo Switch (V1, V2, OLED, Lite), PC (Steam)
Special Features	6-Axis Gyroscope, Dual Shock Vibration, Programmable Buttons (M1/M2)
Wireless Range	Up to 8 meters
Battery Capacity	800mAh (Rechargeable via USB-C)
Product Dimensions	18.5 x 18.5 x 18 cm
Product Weight	300 g
Certification	Anatel Homologation: 01831-22-12242

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included in your product packaging or contact your retailer.

For technical support, troubleshooting assistance, or warranty claims, please contact the seller or manufacturer directly.

Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question