

[Manuals.plus](#) /

› [AQUA](#) /

› AQUA AQW-SD12A-L Drum Type Washing Machine Dryer Instruction Manual

AQUA AQW-SD12A-L

AQUA AQW-SD12A-L Drum Type Washing Machine Dryer Instruction Manual

Model: AQW-SD12A-L

1. INTRODUCTION

Thank you for purchasing the AQUA AQW-SD12A-L Drum Type Washing Machine Dryer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before use and keep it for future reference.

京都市
ふるさと納税

ドラム式 洗濯乾燥機 まっ直ぐドラム

洗濯・脱水

12kg

乾燥

6kg

AQUA

AQW-SD12A-L

台無し

左開き・ホワイト



Image: Front view of the AQUA AQW-SD12A-L drum type washing machine dryer, showing its sleek white design and black drum door.
The display panel is visible at the top right.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Keep this manual accessible for quick reference.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash or dry items that have been soiled with flammable substances.
- Refer to the installation section for proper setup to prevent vibration and ensure stability.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine dryer. Please ensure the installation location meets the following requirements.

3.1 Confirm Installation Space and Dimensions

Verify that the installation space provides adequate clearance around the unit. Refer to the table below for required clearances and the diagram for overall dimensions.

設置場所の確認

AQW-SD12A-L

左開き・ホワイト

- 1
- 設置に十分なスペースが確保できるか、本体寸法(本体幅・奥行など)を確認してください。
*本体寸法図は裏表紙をご確認ください。
- 2
- A 前方を開放して、壁から下記の寸法以上離すことができるか確認してください。
*異常な振動や音を防ぐためです
- 離隔距離(消防法 基準適合 組込形)
- | 場所 | 上方 | 左方 | 右方 | 後方 | 下方 |
|----|------|-------|-------|-------|-----|
| 距離 | 20cm | 1cm※1 | 1cm※1 | 2cm※2 | 0cm |
- ※1:排水口側は壁から8cm以上 ※2:天板からの距離
- B 設置面から水栓までの高さをご確認ください。
- 右記寸法未満の場合は、洗濯機を前や横に移動して、水栓から離して設置いただくか、別売部品壁ピタ水栓CB-L6が必要となります。
- 各寸法のほかに、床面の強度にもご注意ください。振動音が大きくなる場合があります。床が弱いときは、別売の補強板*を使用するか、お買い上げの販売店にご相談ください。
*防水パンの大きさが幅640mmのときや防水パンがないときにご使用ください。
- 付属の排水ホースは長さ約100cmです。長さが足りない場合は、別売の排水ホース補修キットで延長してください。
- 付属の給水ホースは長さ約150cmです。長さが足りない場合は、別売の給水延長ホースをご使用ください。
- ※商品によって各ホースの長さは異なります。



Image: Diagram showing the required clearances for installation. Front clearance: 20cm, Left/Right clearance: 1cm, Rear clearance: 2cm, Top/Bottom clearance: 0cm. Also shows the height from the floor to the drain hose connection point.

Required Clearances (Minimum)

Direction	Clearance
Front	20 cm
Left	1 cm

Direction	Clearance
Right	1 cm
Rear	2 cm
Top	0 cm

Note: Ensure the drain hose is positioned correctly. If the drain hose is not long enough, use an extension hose (sold separately). The standard drain hose length is approximately 100cm. The water supply hose length is approximately 150cm. Hose lengths may vary. If the floor is uneven or prone to vibration, use a separate reinforcing board (sold separately) to ensure stability. Do not use a waterproof pan if its width is less than 640mm.

3.2 Water Supply and Drain Connections

Connect the water supply hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks.

- The drain hose can be routed to the left or right side of the unit.
- Ensure the drain hose is not kinked or blocked.

4. OPERATING INSTRUCTIONS

This section details the basic operation of your AQUA washing machine dryer, including loading laundry, selecting wash and dry cycles, and using special features.

4.1 Loading Laundry and Detergent

Open the drum door and load laundry. Do not overload the machine. Add appropriate detergent and fabric softener to their respective dispensers.

ドラムが「まっ直ぐ」になると洗濯が変わる



【イメージ図】



 
【イメージ図】

コインランドリー用
機器シェアNo.1*の
技術力を家庭用に

*コインランドリー機器 出荷台数(2024年1月~12月)に
おいて、当社調べ。

ドラムがまっ直ぐの場合

まっ直ぐドラム

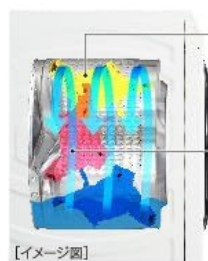

【イメージ図】

ドラムが
水平なので、
衣類が絡みにくい!

 
洗濯槽の手前から
奥まで、水が
行き渡りやすく、
洗いムラを抑える!



運転が止まると

衣類の絡みなく
取り出しやすい!

ドラムがななめの場合 当社従来機種 AQW-DJ7000 (2013年発売)

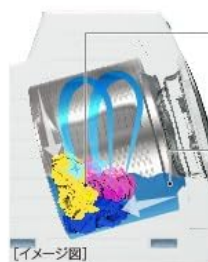

【イメージ図】

傾きにより
衣類が絡みやすく、
シワになりやすい

水の浸透が
不均等になり、
洗いムラが
起こりやすい...



運転が止まると

衣類が絡まって
取り出しにくい...

Image: Illustration of the "Straight Drum" feature. When the drum stops, laundry is positioned horizontally, making it easier to remove and preventing tangling.

4.2 Selecting a Wash Cycle: All-Round Penetration Wash

The All-Round Penetration Wash feature ensures thorough cleaning by effectively removing stubborn stains and wrinkles.

オールラウンド《浸透洗浄》

シワを抑えて、素早くキレイな仕上がりに

ワイシャツ
(ポリエステル65%、綿35%)

ガンコな汚れも
キレイに



★AQW-SD12A、洗濯2kg時「標準コース」において。当社実験による。衣類の量・素材、汚れの量・種類、洗剤の種類、水温等によって汚れ落ちは異なります。


Image: Demonstrates the effectiveness of the All-Round Penetration Wash on common stains like spilled food (soy sauce) and collar sebum, showing "before" and "after" results on a white shirt.

オールラウンド《浸透洗浄》

シワを抑えて、素早くキレイな仕上がりに

STEP 1

 オールラウンド浸透

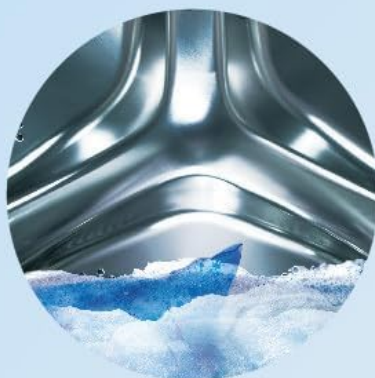

[イメージ図]

STEP 2

たたき洗い



[イメージ図]

STEP 3

もみ洗い



[イメージ図]

たくさんの洗濯物を
スピーディーに〔スピード洗濯〕

AQW-SD12A 洗濯・脱水容量 12kg

標準コース運転目安時間

約 **29** 分 (洗濯時)



[12kg衣類イメージ]


Image: Visual representation of the three steps of the All-Round Penetration Wash: Step 1 (All-round penetration), Step 2 (Beating wash), and Step 3 (Rubbing wash). Also highlights the 29-minute standard course for 12kg wash capacity.

4.3 Hot Water Wash Mode

The Hot Water Wash Mode activates detergent enzymes to effectively remove stubborn yellowing and deep-seated dirt from fabrics. This mode offers various temperature settings for different needs:

お湯洗いモード※1

 落ちにくい黄ばみも
繊維の奥からキレイに

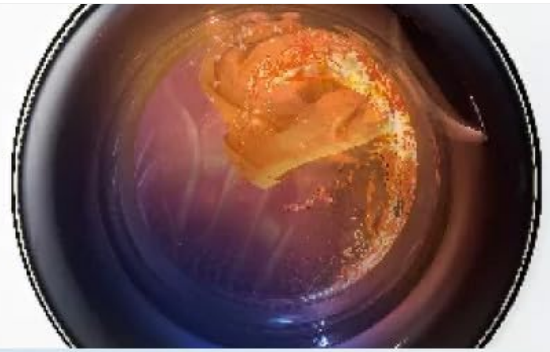

洗剤液を温めることで酵素の力を活性化させ、
あきらめていた繊維の奥にしみついた汚れや黄ばみまでキレイに落とします。

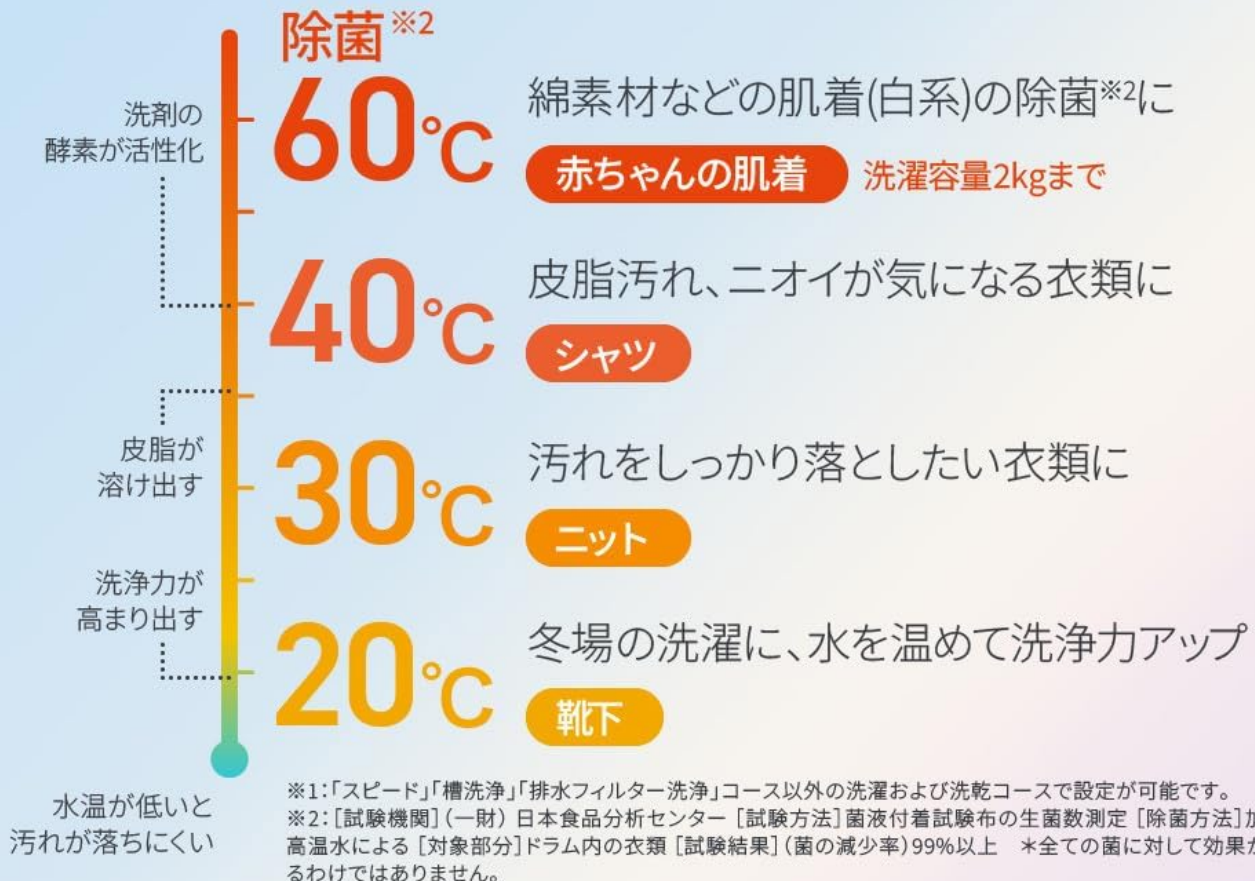 


Image: Diagram illustrating the Hot Water Wash Mode with temperature options: 60°C for sterilization of cotton materials (up to 2kg for baby clothes), 40°C for sebum stains and odors (shirts), 30°C for general dirt removal (knits), and 20°C for enhanced washing power in winter by warming the water (socks).

- **60°C:** Sterilization for cotton materials (e.g., baby clothes, up to 2kg).
- **40°C:** For sebum stains and odors (e.g., shirts).
- **30°C:** For general dirt removal (e.g., knits).
- **20°C:** For enhanced washing power in winter by warming the water (e.g., socks).

4.4 Drying with Heat Pump Technology

The heat pump drying system minimizes shrinkage and gently dries clothes at low temperatures, while also being energy efficient. The "Straight Drum" design helps spread clothes out and reduces wrinkles during drying, resulting in fluffy towels.

ヒートポンプ乾燥

縮みを抑えて、低温でやさしく乾燥、
しかも省エネ



まっ直ぐドラムで衣類をふわっと広げ、
シワを伸ばしながら乾燥します。
また、「水平＝まっ直ぐドラム」で絡みを防止しながら
タンブリングするので、タオルもふんわり仕上がります。

※AQW-SD12A、洗濯3kg時「標準コース」後の天日干し乾燥と、洗濯～乾燥3kg時「標準コース」において。当社実験による。衣類の量・素材、一緒に乾燥するものの種類によって仕上がりは異なります。

Image: Comparison showing the difference in fluffiness between air-dried towels and heat pump-dried towels, highlighting the superior fluffiness of heat pump drying.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance. Perform these tasks regularly.

5.1 Automatic Tub Cleaning and Easy Tub Drying

The machine features automatic tub cleaning to suppress mold growth on the back of the washing tub and easy tub drying to prevent black mold.

日常のお手入れの手間を軽減
カビケア槽自動おそうじ^{※3}
&らくらく槽乾燥

洗濯のたびに洗濯槽の裏側も除菌^{※1}&
黒カビを抑制^{※2}
[カビケア槽自動おそうじ^{※3}]

洗濯槽を乾燥させて黒カビを抑制^{※2}
[らくらく槽乾燥]

[イメージ図]



[イメージ図]

[イメージ図]



週1回
程度
^{※4}

ドアパッキン自動おそうじ
糸くずが気になるパッキンも自動でキレイ

排水フィルター
普段のお手入れは溜まったゴミを捨てるだけ

※1: [試験機関] (一財)日本食品分析センター [試験方法] ドラムおよび外槽に取り付けた菌液付着プレートの生菌数測定 [除菌方法] [カビケア槽 自動おそうじ] による [対象部分] ドラム内および外槽 [試験結果] (菌の減少率) 99%以上。 ※2: [試験機関] (一財)日本食品分析センター [試験方法] ドラム外側に取り付けけた培地付着布によるカビ発育確認 [カビ抑制方法] 「カビケア槽自動おそうじ」「らくらく槽乾燥」による [対象部分] ドラム内 [試験結果] カビの発育なし。 *全ての菌に対して効果があるわけではありません。 ※3: ご購入時はオフ設定です。設定時は使用水量が増えます。(SD12Aは約4L, SD8Aは約3L) 「乾燥」「脱水-乾燥」および「おしゃれ着」コースでは、カビケア槽自動おそうじは行いません。 ※4: 洗濯運転の場合、乾燥運転後は毎回お手入れしてください。

Image: Shows the automatic tub cleaning process, where water flows through the door gasket to clean it. Also illustrates the simple removal of accumulated debris from the drain filter for daily maintenance.

5.2 Door Gasket Automatic Cleaning

The door gasket is automatically cleaned to prevent dirt and mold buildup, which can be a common concern.

5.3 Drain Filter Cleaning

Regularly clean the drain filter by simply removing accumulated lint and debris. This should be done approximately once a week.

6. TROUBLESHOOTING

If you encounter any issues with your washing machine dryer, refer to the following common problems and solutions before contacting service.

Common Issues and Solutions

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, power outage.	Check power connection, ensure door is securely latched, check household circuit breaker.
Excessive vibration or noise	Uneven installation, shipping bolts not removed, overloaded drum.	Adjust leveling feet, remove all shipping bolts (if applicable), redistribute laundry evenly.
Water leakage	Loose hose connections, clogged drain filter, excessive detergent.	Tighten hose connections, clean drain filter, use recommended amount of detergent.
Clothes not drying properly	Overloaded dryer, clogged lint filter, incorrect drying program.	Reduce load size, clean lint filter, select appropriate drying cycle.

7. SPECIFICATIONS

Key technical specifications for the AQUA AQW-SD12A-L washing machine dryer.

Model: AQW-SD12A-L

Brand: AQUA

Type: Drum Type Washing Machine Dryer

Washing Capacity: 12 kg

Drying Capacity: 6 kg

Door Opening: Left-opening

Drying Method: Heat Pump Drying

Special Features: Straight Drum, All-Round Penetration Wash, Hot Water Wash Mode, Automatic Tub Cleaning, Door Gasket Automatic Cleaning

ASIN: B0GX6CBN77

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a **one-year warranty from the date of purchase**. Please retain your purchase receipt or proof of purchase, as it serves as your warranty certificate. The warranty covers defects in materials and workmanship under normal use.

For warranty claims or repairs, please contact the retailer or the manufacturer's customer service as indicated in the warranty card included with your product. The warranty period is not affected by whether the product is unopened or unused.

8.2 Customer Support

For further assistance, technical support, or inquiries regarding your AQUA AQW-SD12A-L washing machine dryer, please refer to the contact information provided in your product documentation or visit the official AQUA website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GX6CBN77>

More documents and user manuals: <https://manuals.plus/>