

[Manuals.plus](#) /

> [Acer](#) /

> Acer Pro Golf Rangefinder SW-1000E-Camo Instruction Manual

Acer SW-1000E-Camo

Acer Pro Golf Rangefinder SW-1000E-Camo Instruction Manual

Model: SW-1000E-Camo

INTRODUCTION

The Acer Pro Golf Rangefinder is a versatile laser device designed for accurate distance measurement in golf, hunting, and outdoor surveying. It features a slope switch, pin lock vibration, 7X magnification, and a rechargeable battery for extended use.

This manual provides detailed instructions for setting up, operating, and maintaining your rangefinder to ensure optimal performance and longevity.

PRODUCT FEATURES

- **1200 Yards Range:** Measures distances up to 1200 yards with $\pm 0.5\text{yd}$ accuracy.
- **Slope Switch:** Provides compensated distance for inclines and declines, essential for golf.
- **Pin Lock Vibration:** Confirms target acquisition with a short vibration.
- **7X Magnification:** Offers clear and magnified views for precise targeting.
- **Rechargeable Battery:** Built-in USB-C rechargeable Lithium-Ion battery.
- **Magnetic Stripe:** Allows convenient attachment to metal surfaces like a golf cart.
- **IP54 Waterproof:** Designed to withstand splashes and light rain.
- **6-in-1 Modes:** Includes modes for distance, speed, angle, height, and horizontal distance.

SETUP

1. Charging the Device

Before first use, fully charge the rangefinder. Connect the provided USB Type-C cable to the charging port on the device and to a compatible USB power source. The charging indicator light will show the charging status (e.g., red for charging, green for fully charged).



Image: The Acer Pro Golf Rangefinder showing its USB-C charging port, indicating the device is ready for charging.

2. Adjusting the Eyepiece

Rotate the focusing rotary knob on the eyepiece to adjust the focus until the display and target appear clear and sharp.

Clear 6X Magnified Display

Rotate to clear view

6x 



Image: A close-up of the rangefinder's eyepiece, illustrating how to rotate it for clear focus.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the Power/Measure button to turn on the device. The device will automatically power off after a period of inactivity

to conserve battery.

2. Switching Measurement Units (Meters/Yards)

To switch between meters and yards, press and hold the Mode/Set button until the unit changes on the display.

3. Mode Selection

Press the Mode/Set button repeatedly to cycle through the available measurement modes:

- **Standard Distance Mode:** Measures direct line-of-sight distance.
- **Golf Mode (Slope Compensation):** Provides adjusted distance based on incline/decline. Activate/deactivate slope compensation using the dedicated slide switch on the side of the device.
- **Pin Lock with Vibration:** Identifies and locks onto the nearest target (e.g., flagpole) and vibrates upon successful lock.
- **Speed Mode:** Measures the speed of a moving object.
- **Height and Level Mode:** Measures the height and horizontal distance to a target.
- **Scanning Mode:** Continuously scans and displays distances to multiple targets.
- **Azimuth Mode:** Provides angular measurements.



**Scan Once,
Track All, 0.5s Dynamic Lock**

Image: The rangefinder displaying different measurement modes including speed, height, azimuth, and scanning.

4. Measuring Distance

Look through the eyepiece and align the crosshairs with your target. Press the Power/Measure button once to get a reading. For continuous scanning, press and hold the Power/Measure button.

Designed for Hunting

97% Glare Reduction

0.5s Fast Target Lock

3-1200 Yards Range



Image: A person using the Acer Pro Golf Rangefinder to measure distance on a golf course.

5. Using the Magnetic Stripe

The integrated magnetic stripe on the side of the rangefinder allows for convenient attachment to metal surfaces, such as a golf cart frame, for easy access during play.

IP54 – Water & Drop Protection

Durable in Every Situation



Image: The rangefinder magnetically attached to a golf cart, demonstrating the convenience of the magnetic stripe.

MAINTENANCE

- **Cleaning:** Use the provided lens cleaning cloth to gently wipe the lenses. Do not use abrasive materials or chemical cleaners.

- **Storage:** Store the rangefinder in its portable soft case when not in use. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Recharge the battery regularly, even if not in frequent use, to maintain battery health. Avoid fully depleting the battery for extended periods.

TROUBLESHOOTING

- **No Power:** Ensure the battery is charged. Connect the USB-C cable and charge the device.
- **Inaccurate Readings:**
 - Check if the eyepiece is properly focused.
 - Ensure the target is within the effective range (3-1200 yards).
 - Verify that the correct measurement unit (yards/meters) is selected.
 - Environmental factors like heavy fog or rain can affect accuracy.
- **Unit Not Switching (Meters/Yards):** Press and hold the Mode/Set button for a few seconds until the unit changes. A quick press might only cycle through modes.

SPECIFICATIONS

Brand	Acer
Model Number	SW-1000E-Camo
Measuring Range	1200 yards
Magnification	6X
Battery Type	Rechargeable, USB-C, Lithium-Ion
Water Resistance	IP54
Item Weight	7.26 Ounces
Material	Polycarbonate (PC)

WHAT'S IN THE BOX

- Laser Rangefinder
- Gift box
- Portable soft case
- USB Type-C Cable
- Lens Cleaning Cloth

- User Manual
- Hand Strap

WARRANTY AND SUPPORT

This product comes with a 1-year warranty. For support, please refer to the contact information provided in the product packaging or visit the official Acer support website.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official seller video demonstrating the Acer Pro Golf Rangefinder's features and how to get precise readings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GXFDT8Z3>

More documents and user manuals: <https://manuals.plus/>