

Kavey KFW-45D

Kavey Digital Metal Keypad Safe Box User Manual

Model: KFW-45D

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Kavey Digital Metal Keypad Safe Box, Model KFW-45D. Please read this manual thoroughly before installation and use, and retain it for future reference. This safe is designed to secure valuables such as cash, jewelry, documents, and other personal items.

2. SAFETY INFORMATION

- Do not store the emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is mounted securely to a floor or wall to prevent unauthorized removal.
- Replace batteries promptly when the low battery warning is indicated to avoid lockout.
- Keep the safe away from excessive moisture or direct heat sources.
- This safe is not fireproof, despite the inclusion of a fireproof bag. The bag offers limited protection for documents against fire.
- Avoid using abrasive cleaners or solvents on the safe's surface.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Kavey Digital Metal Keypad Safe Box (1 unit)
- Emergency Keys (2 units)
- Anti-slip Foot Pads (4 units)
- Expansion Screws (2 units)
- Fireproof Bag (1 unit)
- User Manual (1 unit)



Figure 1: Package Contents and Dimensions

4. SETUP INSTRUCTIONS

4.1. Initial Unpacking and Access

1. Carefully remove the safe from its packaging.
2. Locate the emergency keys, which are typically attached to the outside of the safe or within a small bag. Store them in a safe place, separate from the safe.
3. To open the safe for the first time, rotate the digital keypad panel counter-clockwise to reveal the emergency keyhole.
4. Insert one of the emergency keys into the keyhole and turn it clockwise while simultaneously turning the handle to open the door.

HIDDEN EMERGENCY KEYHOLE

Enhanced anti-theft performance with invisible keyhole protection.



Figure 2: Hidden Emergency Keyhole Access

4.2. Battery Installation

The safe requires four (4) AAA batteries (not included) for the digital keypad. The external battery design allows for easy replacement without needing to open the safe.

1. With the safe door open, locate the battery compartment behind the digital keypad panel.
2. Rotate the digital keypad panel counter-clockwise to expose the battery compartment.
3. Insert four new AAA batteries, ensuring correct polarity (+/-).
4. Rotate the digital keypad panel clockwise to secure it back in place.



Figure 3: External Battery Installation

4.3. Programming User Codes

You can program up to two user codes (primary and secondary).

1. With the safe door open, locate the reset/set button on the hinge side of the door (usually a small red button).
2. **To set the Primary Code:** Press the reset/set button once (do not hold). The keypad will beep, and the display will show "----". Enter your desired 3-8 digit code, then press "#". The display will show "GOOD" if successful.
3. **To set the Secondary Code:** Double-press the reset/set button. The keypad will beep, and the display will show "---". Enter "00#" then your desired 3-8 digit code, and press "#". The display will show "GOOD" if successful.
4. Test your new code(s) with the door open before closing it.

4.4. Mounting the Safe

For enhanced security, it is highly recommended to anchor the safe to a floor or wall using the provided expansion screws.

1. Choose a suitable location for the safe.
2. Mark the drilling points through the pre-drilled holes at the bottom or back of the safe.
3. Drill pilot holes into the floor or wall using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the expansion screws.
5. Attach the anti-slip foot pads to the bottom of the safe if not already installed.



Figure 4: Floor Mounting for Security

4.5. Installing Removable Shelves

The safe includes two removable shelves, allowing you to customize the interior space. The shelves are lined with soft felt to protect your valuables.

1. Position the shelf support clips at your desired height within the safe.
2. Slide the shelves onto the support clips.
3. Ensure shelves are stable before placing items on them.



Figure 5: Removable Shelves for Customizable Storage

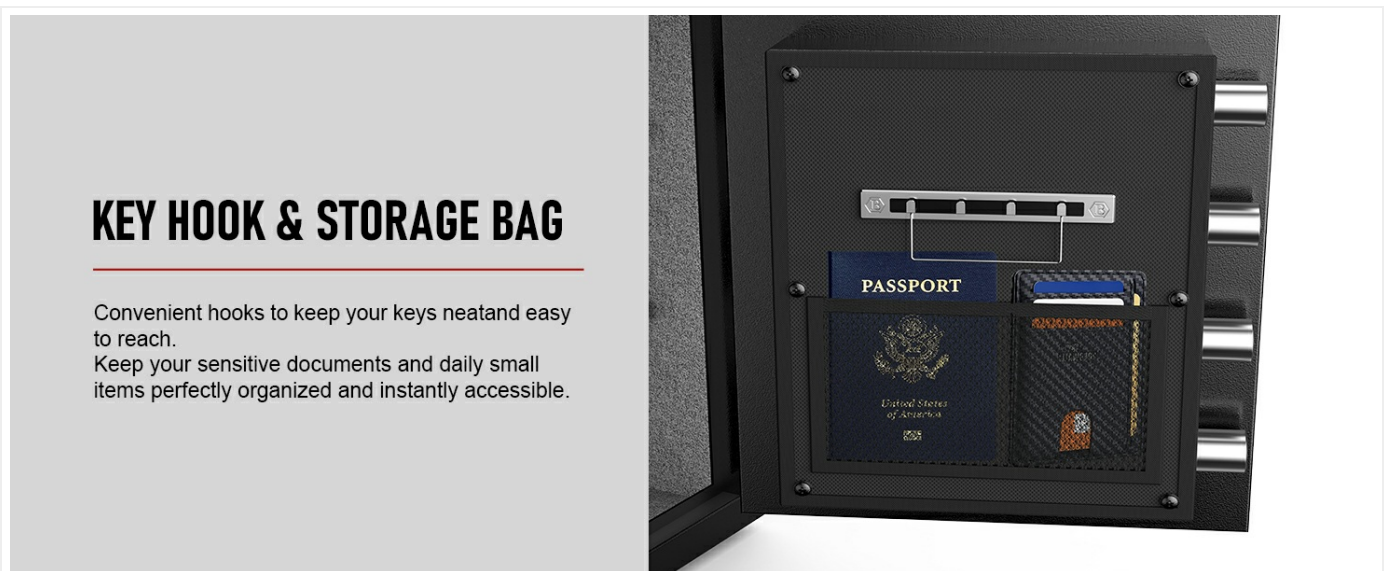


Figure 6: Key Hooks and Storage Bag on Door

5. OPERATING INSTRUCTIONS

5.1. Opening the Safe

1. Enter your programmed 3-8 digit code on the digital keypad.
2. Press "#". The display will show "OPEN".
3. Within 5 seconds, turn the handle clockwise to open the safe door.
4. The door can open to a full 180 degrees for unobstructed access.



Figure 7: 180-Degree Door Opening and Interior Features

5.2. Closing and Locking the Safe

1. Close the safe door firmly.
2. Turn the handle counter-clockwise to engage the locking bolts.

3. Ensure the door is fully secured.

5.3. Alarm System

The safe features an intelligent deterrent alarm system.

- **Incorrect Code Alarm:** If an incorrect code is entered three consecutive times, the alarm will sound for approximately 30 seconds. To stop the alarm, enter the correct code.
- **Vibration Alarm:** The safe is equipped with a sensitive sensor that triggers an alarm upon detecting violent vibrations or impacts. This feature must be manually re-enabled each time the safe is opened and closed.
- **Low Battery Warning:** The keypad will beep multiple times when batteries are low, indicating they need replacement.



Figure 8: Solid Alloy Steel Construction and Security Features

5.4. Mute Mode

To operate the safe silently, you can enable mute mode. This setting remains active until manually changed.

1. While the safe is unlocked and open, press the "*" button on the keypad.
2. The keypad sounds will now be muted.
3. To re-enable sounds, repeat the process.



Figure 9: Silent Mode for Quiet Access

5.5. Internal LED Light

The safe is equipped with an internal LED light that automatically illuminates when the door is opened. The light will turn off after approximately 30 seconds to conserve battery power. There is no manual switch to keep the light on longer.

6. MAINTENANCE

6.1. Battery Replacement

Replace the four (4) AAA batteries when the low battery warning is displayed or when the keypad becomes unresponsive. Refer to Section 4.2 for detailed instructions on battery installation.

6.2. Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.

6.3. Key Matching Service

In case of lost emergency keys, Kavey provides a lifetime key matching service. To utilize this service, you will need the serial number of your safe. The serial number is located near the emergency keyhole, visible when the digital keypad panel is rotated open. Contact Kavey customer support with this serial number to request replacement keys.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; low batteries; keypad malfunction.	Re-enter code carefully. Replace batteries (Section 4.2). Use emergency key (Section 4.1).
Keypad is unresponsive.	Dead or low batteries.	Replace batteries immediately (Section 4.2).

Problem	Possible Cause	Solution
Alarm sounds unexpectedly.	Incorrect code attempts; vibration sensor triggered.	Enter correct code to stop. Ensure safe is not being disturbed if vibration alarm is active.
Internal LED light turns off too quickly.	Designed behavior to conserve battery.	This is normal operation. The light cannot be manually extended.
Safe door does not close properly.	Obstruction; locking bolts not retracting fully.	Check for obstructions. Ensure handle is turned fully to retract bolts before closing.
Forgotten user code.	Code forgotten.	Use emergency key to open the safe (Section 4.1). Reset code (Section 4.3).

8. SPECIFICATIONS

Feature	Detail
Brand	Kavey
Model Number	KFW-45D
Capacity	2.0 Cubic Feet
External Dimensions (D x W x H)	31D x 38W x 45H centimetres (12.20D x 14.96W x 17.72H inches)
Internal Dimensions (D x W x H)	Approx. 29.3D x 37.3W x 44H centimetres (11.54D x 14.69W x 17.32H inches)
Item Weight	13.06 kg (28.79 lbs)
Material Type	Alloy Steel
Lock Type	Electronic Combination Lock
Power Source	4 x AAA Batteries (not included)
Additional Features	Alarm System, Anti-Theft, Removable Shelf, External Battery Access, 180° Door Opening, Internal LED Light
Mounting Type	Floor Mount (hardware included)

9. WARRANTY AND SUPPORT

Kavey is committed to providing high-quality products and customer satisfaction.

- **Return Policy:** This product is eligible for a 30-day refund/replacement policy. Please refer to your purchase platform for specific return instructions.
- **Key Matching Service:** Kavey offers a lifetime key matching service for lost emergency keys. Ensure you have your safe's serial number (located near the emergency keyhole) when contacting support.
- **Manufacturer Contact:** For any inquiries, technical support, or warranty claims, please contact Kavey customer service through the retailer's platform or refer to the contact information provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question