

[Manuals.plus](#) /

› [Sinbo](#) /

› Sinbo SVC-8636 Cordless Stick Vacuum Cleaner User Manual

Sinbo SVC-8636

Sinbo SVC-8636 Cordless Stick Vacuum Cleaner User Manual

Model: SVC-8636

INTRODUCTION

Thank you for choosing the Sinbo SVC-8636 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

PRODUCT OVERVIEW

The Sinbo SVC-8636 is a versatile 2-in-1 cordless stick vacuum cleaner designed for efficient daily cleaning. It features a powerful BLDC motor, strong suction, and a long-lasting battery.

Key Features:

- **Cordless Freedom:** Offers practical use without the limitations of power outlets and cables for daily cleaning.
- **BLDC Motor & 20 kPa Suction Power:** The BLDC motor technology provides a maximum suction power of 20 kPa, aiding in more effective collection of daily dust and dirt.
- **Up to 42 Minutes Continuous Use:** Equipped with a 22.2V 2200 mAh Li-ion battery, it provides up to 42 minutes of continuous use on a single charge.
- **2-in-1 Design (Stick & Handheld):** Can be used as a stick vacuum for floors and as a handheld vacuum for upholstery, corners, shelves, and narrow spaces.
- **1 Liter Dustbin & HEPA Filtration:** A large 1-liter dustbin reduces the frequency of emptying, while the HEPA filter and multi-cyclone structure ensure more regular and controlled dust collection.
- **LED Lighting:** Special LED lights make even the finest dust on the floor visible.

Components:

Sinbo SVC-8636 Kablosuz Dikey Şarjlı Süpürge

sinbo.
Kablosuz Dikey Şarjlı Süpürge

42 Dakika
Kullanım

22.2V
Li-ion Batarya

LED
Aydınlatma

42 min

Li-ion

LED

BLDC Motor
Teknolojisi

Multi Cyclone
Teknolojisi

LED XL Turbo
Süpürme Aparatı

1L Toz Haznesi

LED Hız Ve
Şarj Göstergesi

Yeşil LED Aydınlatma ile
Gizli Tozları Görün

Turbo
BLDC
Motor



Figure 1: Overview of the Sinbo SVC-8636 Cordless Stick Vacuum Cleaner, showing its main body, extension wand, and floor brush. The image above displays the complete Sinbo SVC-8636 vacuum cleaner, highlighting its ergonomic design and key parts such as the motor unit, dustbin, extension tube, and motorized floor brush with LED lights.

BLDC Motor Teknolojisi

Uzun ömürlü yapısı ve düşük enerji tüketimi sayesinde hem tasarruf edin hem de maksimum verim elde edin



Figure 2: Illustration of the BLDC motor technology within the Sinbo SVC-8636, emphasizing its efficiency and power. This image illustrates the advanced BLDC motor technology, which contributes to the vacuum's long lifespan and low energy consumption, ensuring maximum efficiency.

LED Aydınlatmalı Temizlik Deneyimi

Özel LED ışıklar, zemindeki en ince tozları bile görünür hale getirir



Figure 3: The floor brush of the Sinbo SVC-8636 with its LED lights illuminated, making hidden dust visible on the floor. The special LED lights on the floor brush enhance the cleaning experience by making even the finest dust particles on the floor visible, ensuring a thorough clean.

Fırça Başlığı

Evcil hayvan tüylerini ve kiri derinlemesine temizlemek için fırça başlığı kullanılır



Figure 4: The brush attachment being used with the handheld vacuum to clean pet hair and dirt from upholstery.

This image demonstrates the brush attachment, ideal for deep cleaning pet hair and dirt from surfaces like sofas and other upholstery when the vacuum is configured as a handheld unit.

Duvar Askı Aparatı

Kolayca monte edilen askı aparatı sayesinde
süpürgenizi duvarda güvenli saklayın, yerden tasarruf edin



Figure 5: The wall mount accessory for the Sinbo SVC-8636, allowing for secure and space-saving storage.
The easily mountable wall hanger accessory allows you to safely store your vacuum on the wall, saving floor space.

22.2V 2200 mAh Güçlü Li-ion Batarya

Tek şarjla 42 dakikaya varan kesintisiz kullanım sunar.
düşük güç kullanımında



Figure 6: The Sinbo SVC-8636 in use, demonstrating its powerful 22.2V 2200 mAh Li-ion battery for extended cleaning sessions. This image highlights the vacuum's powerful 22.2V 2200 mAh Li-ion battery, providing up to 42 minutes of uninterrupted use on a single charge, even in low power mode.

SETUP

Assembly:

1. **Unpack:** Carefully remove all components from the packaging. Check for any damage.
2. **Attach Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
3. **Attach Floor Brush:** Connect the motorized floor brush to the other end of the extension wand, ensuring it locks firmly.
4. **Handheld Configuration:** For handheld use, attach desired accessories (e.g., brush attachment, crevice tool) directly to the main motor unit.

Initial Charging:

Before first use, fully charge the vacuum cleaner's battery. This typically takes several hours. Refer to the charging indicator lights for status.

- Connect the charger to the charging port on the main unit.
- Plug the charger into a suitable power outlet.
- The LED indicator will show charging status. Once fully charged, disconnect the charger.

OPERATING INSTRUCTIONS

Starting the Vacuum:

1. Ensure the battery is sufficiently charged.
2. Press the power button (push button control) located on the main unit to turn on the vacuum.
3. The vacuum will start in a standard suction mode.

Adjusting Suction Power:

The Sinbo SVC-8636 offers 3 gear speeds. Press the speed control button (if separate from power, or repeatedly press power button if it cycles modes) to cycle through the available suction levels (e.g., Eco, Standard, Max). Select the appropriate power for your cleaning task.

Using as a Stick Vacuum:

With the extension wand and floor brush attached, use the vacuum for cleaning various floor types, including carpets and hard floors. The LED lights on the brush head will illuminate the cleaning path.

Using as a Handheld Vacuum:

Detach the extension wand and floor brush. Attach a suitable accessory (e.g., brush attachment for upholstery, crevice tool for tight spaces) directly to the main motor unit. This configuration is ideal for cleaning furniture, car interiors, and elevated surfaces.

Stopping the Vacuum:

Press the power button again to turn off the vacuum cleaner.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin:

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button/latch on the main unit.
3. Press the button to detach the dustbin.
4. Hold the dustbin over a trash can and open its bottom flap to empty the contents.
5. Close the flap and reattach the dustbin to the main unit until it clicks.

Cleaning the HEPA Filter:

The HEPA filter should be cleaned regularly, ideally after every few uses, or when suction power decreases.

1. Remove the dustbin as described above.
2. Carefully remove the HEPA filter from the dustbin.
3. Tap the filter gently over a trash can to remove loose dust.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reinserting **Do not use hot water or detergents.**
5. Reinsert the dry HEPA filter and reattach the dustbin.

Cleaning the Brush Roll:

Periodically check the brush roll in the floor brush for tangled hair or debris.

1. Turn off the vacuum and disconnect it from any charging.
2. Detach the floor brush from the extension wand.
3. Locate the brush roll access cover (refer to product diagrams if available).
4. Remove any tangled hair or fibers using scissors or a brush.
5. Reassemble the brush roll and cover.

TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged. Power button not pressed correctly.	Charge the battery fully. Press the power button firmly.
Low suction power.	Dustbin is full. Filter is clogged. Brush roll is tangled. Obstruction in nozzle/hose.	Empty the dustbin. Clean the HEPA filter. Clean the brush roll. Check for and remove any blockages.
Battery life is short.	Battery not fully charged. Using high power mode continuously. Battery degradation.	Ensure battery is fully charged before use. Use lower power modes for lighter cleaning. Contact customer support if battery life significantly degrades over time.
Brush roll not spinning.	Tangled debris in brush roll. Obstruction in floor brush.	Clean the brush roll of tangled hair/fibers. Check for and remove any blockages in the floor brush mechanism.

SPECIFICATIONS

Feature	Detail
Brand	Sinbo

Feature	Detail
Model Number	SVC-8636
Key Features	HEPA, Lightweight, Cordless, Bagless
Filter Type	HEPA Filter
Recommended Surface	Carpet, Hard Floors
Power Source	Battery Powered (22.2V 2200 mAh Li-ion)
Capacity	1 Liter (Dustbin)
Color	Navy Blue
Number of Gears	3
Portable	Yes
Electric Power	180 watts
Battery Life	Up to 42 minutes
Form Factor	Stick (2-in-1 Handheld)
Product Weight	3 Kilograms
Product Dimensions (L x W x H)	22 x 15 x 73 centimeters
Control Method	Push Button
Origin Country	China

WARRANTY AND SUPPORT

Warranty Information:

This Sinbo SVC-8636 Cordless Stick Vacuum Cleaner is covered by a **2-year distributor warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions. It does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

Customer Support:

For technical assistance, warranty claims, or to inquire about replacement parts, please contact your local Sinbo distributor or authorized service center. Refer to the product packaging or the Sinbo official website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GXFJ4ZS>

More documents and user manuals: <https://manuals.plus/>