

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-690 Hypercar Portable Bluetooth Speaker Instruction Manual

WSTER WS-690

WSTER WS-690 Hypercar Portable Bluetooth Speaker Instruction Manual

INTRODUCTION

Thank you for choosing the WSTER WS-690 Hypercar Portable Bluetooth Speaker. This device combines a unique hypercar design with advanced audio features, including HD sound, TWS pairing, FM radio, TF card playback, and LED wheel lights. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your speaker.

WHAT'S IN THE BOX

- WSTER WS-690 Hypercar Portable Bluetooth Speaker
- Power Cable (Type-C)
- Quick Start Guide

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your WS-690 speaker.

Colorful LED Wheel Lights

The glowing LED wheel lights create a vibrant atmosphere, turning every listening moment into a mini light show.



Top view of the WSTER WS-690 Hypercar Portable Bluetooth Speaker, highlighting the control panel, display screen, USB port, TF card slot, and Type-C charging port.

- **Display Screen:** Located on the top, shows current mode, battery level, and playback information.
- **Control Buttons:** Includes Power/Mode, Play/Pause, Volume Up/Next Track, Volume Down/Previous Track, and LED Light Control.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For MicroSD card playback.
- **Type-C Charging Port:** For charging the speaker.
- **LED Wheel Lights:** Integrated into the wheels, offering multiple lighting modes.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C power cable to the charging port on the speaker and to a compatible USB power adapter (not included). The display screen will indicate charging status. A full charge

typically takes a few hours.

2. Power On/Off

- To power on: Press and hold the Power/Mode button until the display screen illuminates.
- To power off: Press and hold the Power/Mode button again until the display screen turns off.

3. Bluetooth Pairing

After powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display. If not, press the Mode button to switch to Bluetooth mode.

1. Enable Bluetooth on your smartphone, tablet, or other device.
2. Search for available Bluetooth devices and select "WS-690" from the list.
3. Once connected, the speaker will emit an audible confirmation, and the Bluetooth icon on the display will become solid.



The WS-690 speaker connected to a smartphone via Bluetooth.

4. TWS (True Wireless Stereo) Pairing

To achieve a wider stereo sound experience, you can pair two WS-690 speakers together.

1. Ensure both WS-690 speakers are powered on and in Bluetooth mode, but not connected to any other device.
2. On one of the speakers (this will be the primary speaker), double-press the Play/Pause button. The speaker will search for another WS-690.
3. Once successfully paired, both speakers will emit an audible confirmation.
4. Now, connect your device to the primary WS-690 speaker via Bluetooth as described in step 3. Audio will play through both speakers in stereo.



Two WS-690 speakers paired for True Wireless Stereo (TWS) playback.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the **Mode** button to cycle through available playback modes: Bluetooth, FM Radio, and TF Card/USB (if a card/drive is inserted).

2. Bluetooth Mode

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Short press the Volume Up/Next Track button.
- **Previous Track:** Short press the Volume Down/Previous Track button.
- **Volume Up:** Long press the Volume Up/Next Track button.
- **Volume Down:** Long press the Volume Down/Previous Track button.

3. FM Radio Mode

In FM mode, the speaker can automatically scan and save radio stations.

1. Switch to FM mode using the Mode button.
2. To auto-scan and save stations: Press and hold the Play/Pause button. The speaker will scan for stations and save them automatically.
3. To change stations: Short press the Volume Up/Next Track or Volume Down/Previous Track buttons.
4. To adjust volume: Long press the Volume Up/Next Track or Volume Down/Previous Track buttons.

4. TF Card / USB Playback

Insert a TF card (MicroSD) or USB drive into the respective slot. The speaker will automatically switch to TF/USB mode and begin playing audio files.

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Short press the Volume Up/Next Track button.
- **Previous Track:** Short press the Volume Down/Previous Track button.
- **Volume Up:** Long press the Volume Up/Next Track button.
- **Volume Down:** Long press the Volume Down/Previous Track button.

5. Hands-Free Calling

When connected to a smartphone via Bluetooth, the built-in microphone allows for hands-free calls.



HANDS-FREE CALLING

Enjoy clear call quality without holding your phone. Perfect for work, driving, or relaxing at home.

The WS-690 speaker facilitates hands-free calling.

- **Answer Call:** Short press the Play/Pause button when a call comes in.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button when a call comes in.

6. LED Wheel Light Control

The speaker features LED lights in its wheels with three selectable modes.



USB

TF card

Type-C

Handsfree

Multiple Playback Options

Supports Bluetooth, TF card, and other playback modes so you can enjoy music the way you prefer.

The LED wheel lights of the WS-690 speaker.

- Press the dedicated LED Light Control button (refer to Product Overview for location) to cycle through the three different lighting modes.
- Pressing the button a fourth time will turn the LED lights off.

7. Remote Selfie Control

When connected to your smartphone via Bluetooth, the speaker can act as a remote shutter for your phone's camera.

REMOTE SELFIE CONTROL

Use the speaker button as a remote shutter to capture photos from a distance. Perfect for group photos, travel memories, and outdoor adventures.



Using the WS-690 speaker as a remote control for taking selfies.

- Open your phone's camera application.
- Press the Play/Pause button on the speaker to remotely trigger your phone's camera shutter.

MAINTENANCE

- Keep the speaker dry. Avoid exposure to water or excessive humidity.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect to a power source and try again.
No sound.	Check the volume level on both the speaker and your connected device. Ensure the speaker is in the correct mode (Bluetooth, FM, TF/USB).
Bluetooth pairing fails.	Ensure the speaker is in Bluetooth pairing mode. Turn off and on Bluetooth on your device. Move the speaker closer to your device. Disconnect from other Bluetooth devices.
FM radio reception is poor.	Move the speaker to a location with better signal. Extend any integrated antenna if available.
TWS pairing fails.	Ensure both speakers are not connected to any other Bluetooth device. Try repeating the TWS pairing steps.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	WSTER
Model Number	WS-690
Speaker Maximum Output Power	15 watts
Frequency Response	18 KHz
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Speaker Type	Portable Speaker
Additional Features	Display Screen, FM Radio, LED Party Light, Remote Selfie Control, TF Playback
Control Method	Touch
Specific Uses For Product	Home, Portable, Gaming, Outdoor, Desktop
Number of Batteries	2 Nonstandard Battery batteries required (included)
Item Dimensions (D x W x H)	13.58"D x 5.79"W x 3.58"H
Item Weight	876 g
Compatible Devices	Desktop, Laptop, Smartphone, Tablet

WARRANTY

Warranty information for this product is not provided in the available documentation. Please refer to your point of purchase or contact the manufacturer directly for any warranty inquiries.

SUPPORT

For further assistance, technical support, or inquiries regarding your WSTER WS-690 Hypercar Portable Bluetooth Speaker, please visit the official WSTER website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

Official Product Video

Your browser does not support the video tag.

Official product video from WSTER Audio showcasing the WS-690 Hypercar Portable Bluetooth Speaker and its features.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question