

FUNYET NY-13

FUNYET NY-13 15.6-inch Laptop User Manual

Model: NY-13

1. INTRODUCTION

Thank you for choosing the FUNYET NY-13 15.6-inch Laptop. This manual provides comprehensive instructions to help you set up, operate, and maintain your device. Please read this manual carefully before using the laptop to ensure optimal performance and longevity.

2. SAFETY INFORMATION

To prevent damage to your laptop or injury to yourself and others, please observe the following safety precautions:

- Do not expose the laptop to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing heavy objects on the laptop.
- Use only the original power adapter and accessories provided by FUNYET.
- Keep the laptop away from liquids and strong magnetic fields.
- Do not attempt to disassemble or repair the laptop yourself. Contact customer support for assistance.
- Ensure proper ventilation to prevent overheating.

3. PACKAGE CONTENTS

Please check the package for the following items:

- FUNYET NY-13 15.6-inch Laptop
- Power Adapter
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and ports of your FUNYET NY-13 laptop.



Figure 4.1: FUNYET NY-13 15.6-inch Laptop, showcasing its sleek design.

4.1 Ports and Connectors

The FUNYET NY-13 laptop features a variety of ports for connectivity. Refer to the image below for port locations.



Figure 4.2: A diagram illustrating the various connection ports available on the FUNYET NY-13 laptop, such as USB 3.0, Type-C, Mini HDMI, and headphone jack.

- **USB 3.0 Ports:** For connecting USB devices like external hard drives, mice, and keyboards.
- **Type-C Port:** A versatile port for data transfer and potentially charging (check specifications for power delivery).
- **Mini HDMI Port:** For connecting to external displays or projectors.
- **Headphone Jack:** For connecting headphones or external speakers.
- **DC Power Port (19V/3.42A):** For connecting the power adapter to charge the laptop.
- **TF Card Slot:** For inserting a TF (MicroSD) memory card.

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the laptop battery. Connect the power adapter to the DC power port on the laptop and then plug it into a power outlet. The charging indicator light will illuminate.

5.2 First Power-On

Press the power button located on the keyboard to turn on the laptop. Follow the on-screen instructions to complete the initial Windows 11 setup, including language selection, network connection, and user account creation.

5.3 Connecting to Wi-Fi and Bluetooth

The laptop supports WiFi 5 and Bluetooth 5.0 for wireless connectivity.

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your desired network, enter the password, and click Connect.
- **Bluetooth:** Go to Windows Settings > Bluetooth & devices, turn on Bluetooth, and pair with your wireless headphones, keyboards, or other compatible devices.

6. OPERATING INSTRUCTIONS

6.1 Using the Backlit Keyboard

The FUNYET NY-13 features a backlit keyboard, allowing for comfortable typing in low-light conditions. To activate or adjust the backlight, press the **Fn + F5** key combination.



Figure 6.1: The FUNYET NY-13 laptop with its screen displaying key features, including the backlit keyboard.

6.2 Using the Touchpad

The integrated touchpad supports multi-touch gestures for navigation. Refer to Windows settings for customizing touchpad gestures.

6.3 Display Features

The 15.6-inch IPS FHD (1920x1080) display offers clear and vibrant visuals. You can adjust display settings such as brightness, resolution, and scaling through Windows Display Settings.



Figure 6.2: The laptop's IPS display showing vibrant fantasy character illustrations, highlighting its color accuracy and resolution.

6.4 Multitasking and Performance

Equipped with an Intel Core i7-7600U processor and 16GB of RAM, the laptop is designed for smooth multitasking. You can run multiple applications simultaneously without significant performance degradation.

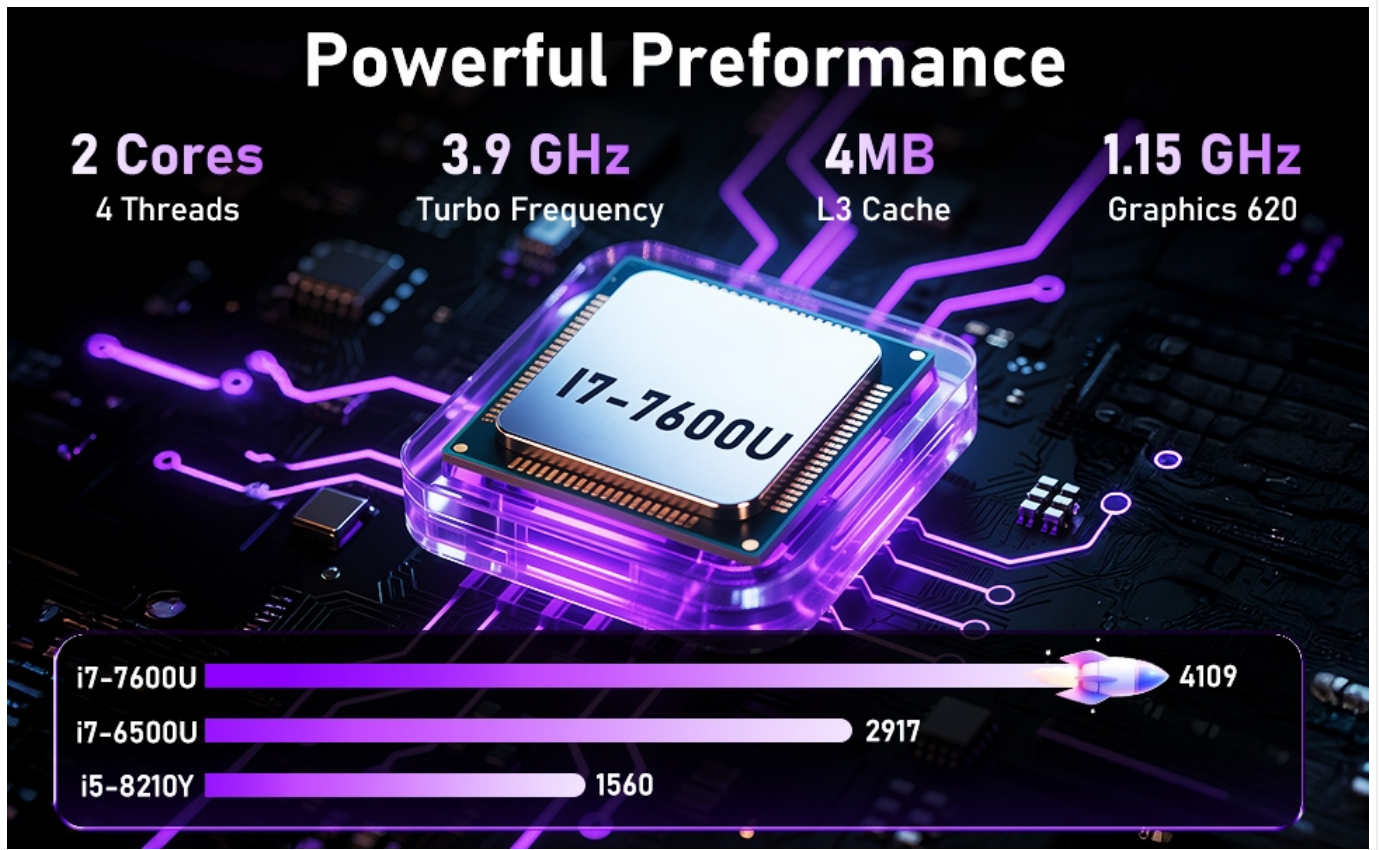


Figure 6.3: The FUNYET NY-13 laptop demonstrating its ability to handle multiple applications for efficient multitasking.

6.5 Collaboration Features

The laptop's 180-degree foldable screen and integrated microphone and speakers facilitate collaborative work and online meetings.



Figure 6.4: Individuals collaborating around the FUNYET NY-13 laptop, highlighting its versatile design for teamwork.

7. MAINTENANCE

7.1 Cleaning the Laptop

To clean your laptop, use a soft, lint-free cloth. For the screen, use a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials.

7.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the laptop in a cool, dry place if not used for extended periods.

7.3 Software Updates

Regularly update your Windows operating system and drivers to ensure optimal performance and security.

8. TROUBLESHOOTING

If you encounter issues with your FUNYET NY-13 laptop, try the following basic troubleshooting steps:

- **Laptop does not power on:** Ensure the power adapter is securely connected and the battery is charged. Try pressing and holding the power button for 10-15 seconds.
- **No display:** Connect an external monitor to check if the issue is with the laptop's screen. Ensure brightness is not set to minimum.
- **Wi-Fi/Bluetooth connectivity issues:** Check if Wi-Fi/Bluetooth is enabled in Windows settings. Restart the laptop and your router/Bluetooth device.
- **Slow performance:** Close unnecessary applications, check for background processes, and ensure sufficient free space on the SSD.
- **Keyboard backlight not working:** Ensure you are using the correct key combination (Fn + F5) to activate it.

For more complex issues, please refer to the warranty and support section for assistance.

9. SPECIFICATIONS

Below are the detailed technical specifications for the FUNYET NY-13 laptop.



Figure 9.1: An image detailing the technical specifications of the FUNYET NY-13 laptop, including CPU, RAM, SSD, display, and battery.

Feature	Specification
Model Name	NY-13
Screen Size	15.6 Inches
Screen Resolution	1920 x 1080 (FHD)
Display Type	IPS LCD
Processor	Intel Core i7-7600U (2 Cores, 4 Threads, up to 3.9 GHz)
RAM	16 GB DDR3 (2666 MHz)
Storage	1 TB SSD (M.2)
Graphics Card	Integrated
Operating System	Windows 11
Battery Type	Lithium Polymer
Battery Capacity	5000 mAh (46.2 Wh)
Wireless Connectivity	WiFi 5 (802.11ac), Bluetooth 5.0
Ports	USB 3.0, Type-C, Mini HDMI, 3.5mm Audio Jack, TF Card Slot, DC Power Port
Special Features	HD Audio, Numeric Keypad, Backlit Keyboard

Feature	Specification
Dimensions (L x W x H)	35.7 x 22 x 2 cm
Weight	1.6 kg

10. WARRANTY AND SUPPORT

FUNYET is committed to providing high-quality products and customer satisfaction. Your FUNYET NY-13 laptop comes with a comprehensive warranty and dedicated customer support.

10.1 Warranty Information

The laptop includes a **one-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact our customer support team. We offer 24-hour online support to address your inquiries promptly.

- **Email:** funyetstore@outlook.com
- **Phone:** +49 800-000-7147 (Available per business day, 4 AM - 10 PM PT)

You can also visit the official FUNYET store on Amazon for more information and product updates:[FUNYET Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question