

[Manuals.plus](#) /

› [Momcozy](#) /

› Momcozy Portable Bottle Warmer MW05-1 User Manual

Momcozy MW05-1

Momcozy Portable Bottle Warmer MW05-1 User Manual

1. INTRODUCTION

Thank you for choosing the Momcozy Portable Bottle Warmer MW05-1. This device is designed to safely and efficiently warm milk or water for your baby, offering convenience for use at home or while traveling. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. SAFETY INFORMATION

- Always keep the device out of reach of children.
- Do not immerse the main unit in water or other liquids.
- Ensure the charging port is dry before connecting the charger.
- Use only the provided charging cable and adapter.
- Do not operate the device if it is damaged or malfunctioning.
- Always check the temperature of the liquid before feeding your baby.
- This product is not a toy. Adult supervision is required during use.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Momcozy Portable Milk and Water Warmer
- 1 x 36W Fast Charger
- 1 x USB Cable



Image: Package contents showing the portable warmer, fast charger, and USB cable, along with product dimensions.

4. PRODUCT OVERVIEW AND FEATURES

The Momcozy Portable Bottle Warmer MW05-1 is designed for convenience and efficiency. It features a compact design, making it ideal for travel. The warmer is constructed from durable plastic and includes an integrated rechargeable battery.

Key Features:

- **Portable Design:** Compact and lightweight for easy transport.
- **Fast Charging:** Supports 36W fast charging for quick power replenishment.
- **Temperature Control:** Allows precise temperature setting for milk or water.
- **Secure Lid:** Features a lockable lid to prevent spills.
- **Sustainable Materials:** Made with at least 50% recycled material, GRS certified.

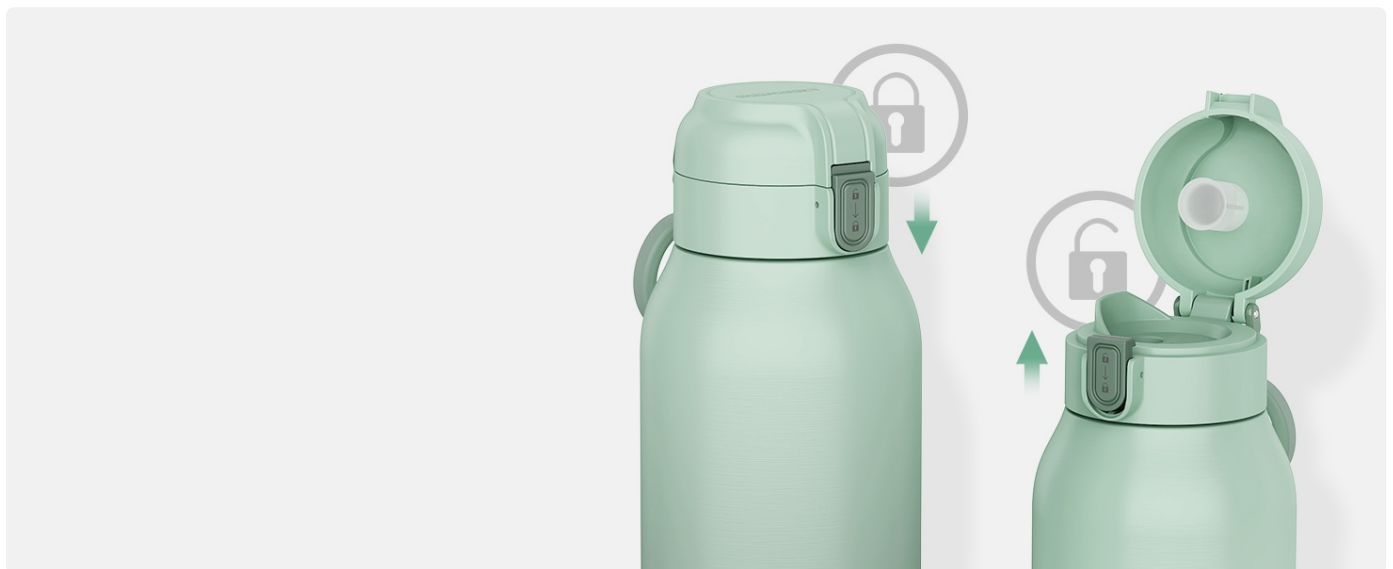


Image: The Momcozy Portable Bottle Warmer in green, showcasing its design.

5. SETUP

Initial Charging:

1. Before first use, fully charge the bottle warmer.
2. Connect the USB cable to the warmer's charging port and the 36W fast charger.
3. Plug the charger into a power outlet. The indicator light will show charging status.
4. Charging typically takes approximately 1 hour to reach 80% capacity with the 36W fast charger.



Image: The portable bottle warmer connected to a power source for fast charging.

Preparing for Use:

- Ensure the warmer is clean before adding liquid. Refer to the 'Maintenance and Cleaning' section.
- Open the lid by sliding the lock mechanism and flipping it open.



Image: Illustration of the lid's lock and unlock function.

6. OPERATING INSTRUCTIONS

Adding Liquid:

1. Open the lid.
2. Carefully pour milk or water into the warmer. Do not overfill.
3. Close the lid securely and engage the lock mechanism.



Image: The portable warmer alongside various baby bottles and milk storage bags.

Warming Process:

1. Press the power button to turn on the device. The current temperature will be displayed.
2. Use the temperature control buttons (usually '+' and '-') to set your desired temperature. Common temperatures for baby milk are around 37°C (98.6°F).
3. The warmer will begin heating the liquid to the set temperature. The display will show the real-time temperature.
4. Once the desired temperature is reached, the warmer will maintain it.
5. Before feeding, always pour a small amount of liquid onto your wrist to check the temperature.
6. To turn off the device, press and hold the power button.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your bottle warmer.

1. **Disassemble:** Open the lid and carefully remove the silicone ring from the warmer.
2. **Clean Interior:** Add warm water and a mild detergent to the warmer. Use a bottle brush to thoroughly clean the interior surfaces.
3. **Clean Silicone Parts:** Wash the silicone ring and lid components thoroughly with warm, soapy water.
4. **Rinse and Dry:** Rinse all parts with clean water. Place them on a drying rack to air dry completely to prevent mold growth.

Important: Do not use abrasive cleaners or solvents. Do not immerse the main electronic unit in water. Wipe the exterior with a damp cloth only.



Image: Step-by-step guide for cleaning the portable bottle warmer.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device fully using the provided charger.
Liquid not heating.	Incorrect temperature setting or device not powered on.	Ensure the device is on and the desired temperature is set. Check battery level.
Leakage from the lid.	Lid not properly closed or silicone ring misplaced.	Ensure the lid is securely closed and locked. Check that the silicone ring is correctly seated.
Slow heating.	Initial liquid temperature is very low or battery is not fully charged.	Start with room temperature liquid if possible. Ensure the device is fully charged for optimal performance.

9. SPECIFICATIONS

Feature	Detail
Model Number	MW05-1
Material	Plastic
Item Weight	1 Kilogram
Package Dimensions	30.1 x 11.7 x 11.6 cm
Battery	Integrated Rechargeable Battery (e.g., 3200 mAh, typical for portable warmers)
Charging Input	36W Fast Charging (USB)

10. WARRANTY AND SUPPORT

Momcozy products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Momcozy website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question