

[Manuals.plus](#) /

› [Huuger](#) /

› Huuger Adjustable Sofa Table with Power Outlets (Model: 86.6-110.2 Inch)

Huuger 86.6-110.2 Inch Adjustable Sofa Table

Huuger Adjustable Sofa Table with Power Outlets

Model: 86.6-110.2 Inch Adjustable Length

Brand: Huuger

INTRODUCTION

Thank you for choosing the Huuger Adjustable Sofa Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

SAFETY INFORMATION

- Always follow the assembly instructions precisely. Incorrect assembly can lead to instability and potential injury.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Install the provided anti-tip kit to prevent the table from toppling over, especially in households with children or pets.
- Do not overload the table. Refer to the specifications for weight limits.
- Keep liquids away from the power outlets to prevent electrical hazards.
- Use only the provided power cord and ensure it is not pinched or damaged.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact Huuger customer support.

- Tabletop panels (Engineered Wood)
- Metal frame components
- 2 x Power Strips (each with 2 AC outlets, 1 USB-A, 1 USB-C port)
- Anti-tip Kit
- Adjustable feet
- Assembly hardware (screws, wrench, etc.)

ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the step-by-step diagrams provided in your physical manual. The general process involves:

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Identify each part using the provided parts list.
2. **Assemble the Metal Frame:** Connect the metal frame sections using the designated screws. Ensure all connections are firm.
3. **Attach Tabletop Panels:** Secure the engineered wood tabletop panels to the assembled metal frame.
4. **Install Power Outlets:** Place the power strips into the designated cutouts on the tabletop. The outlets offer 4 installation positions for flexibility. Connect the power cords.
5. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the table legs. These help level the table on uneven surfaces.
6. **Install Anti-Tip Kit:** Secure the anti-tip kit to the table and the wall according to the instructions to prevent accidental tipping.

Adjust to Your Perfect Length

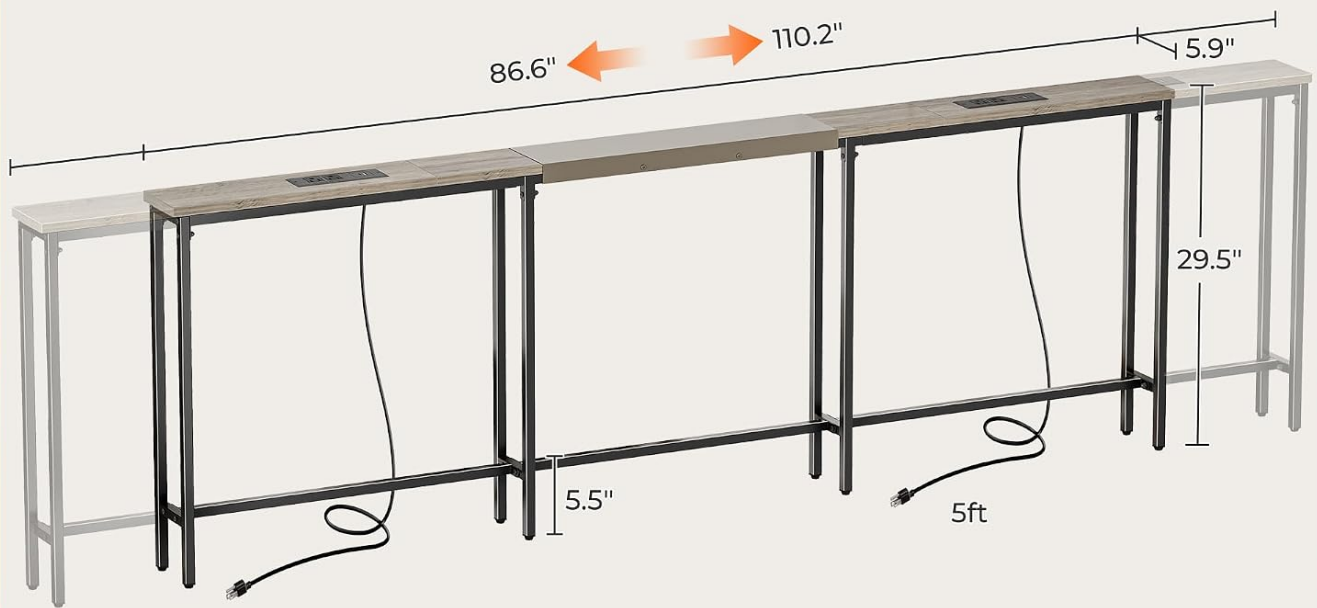


Figure 1: Table dimensions and adjustable length.

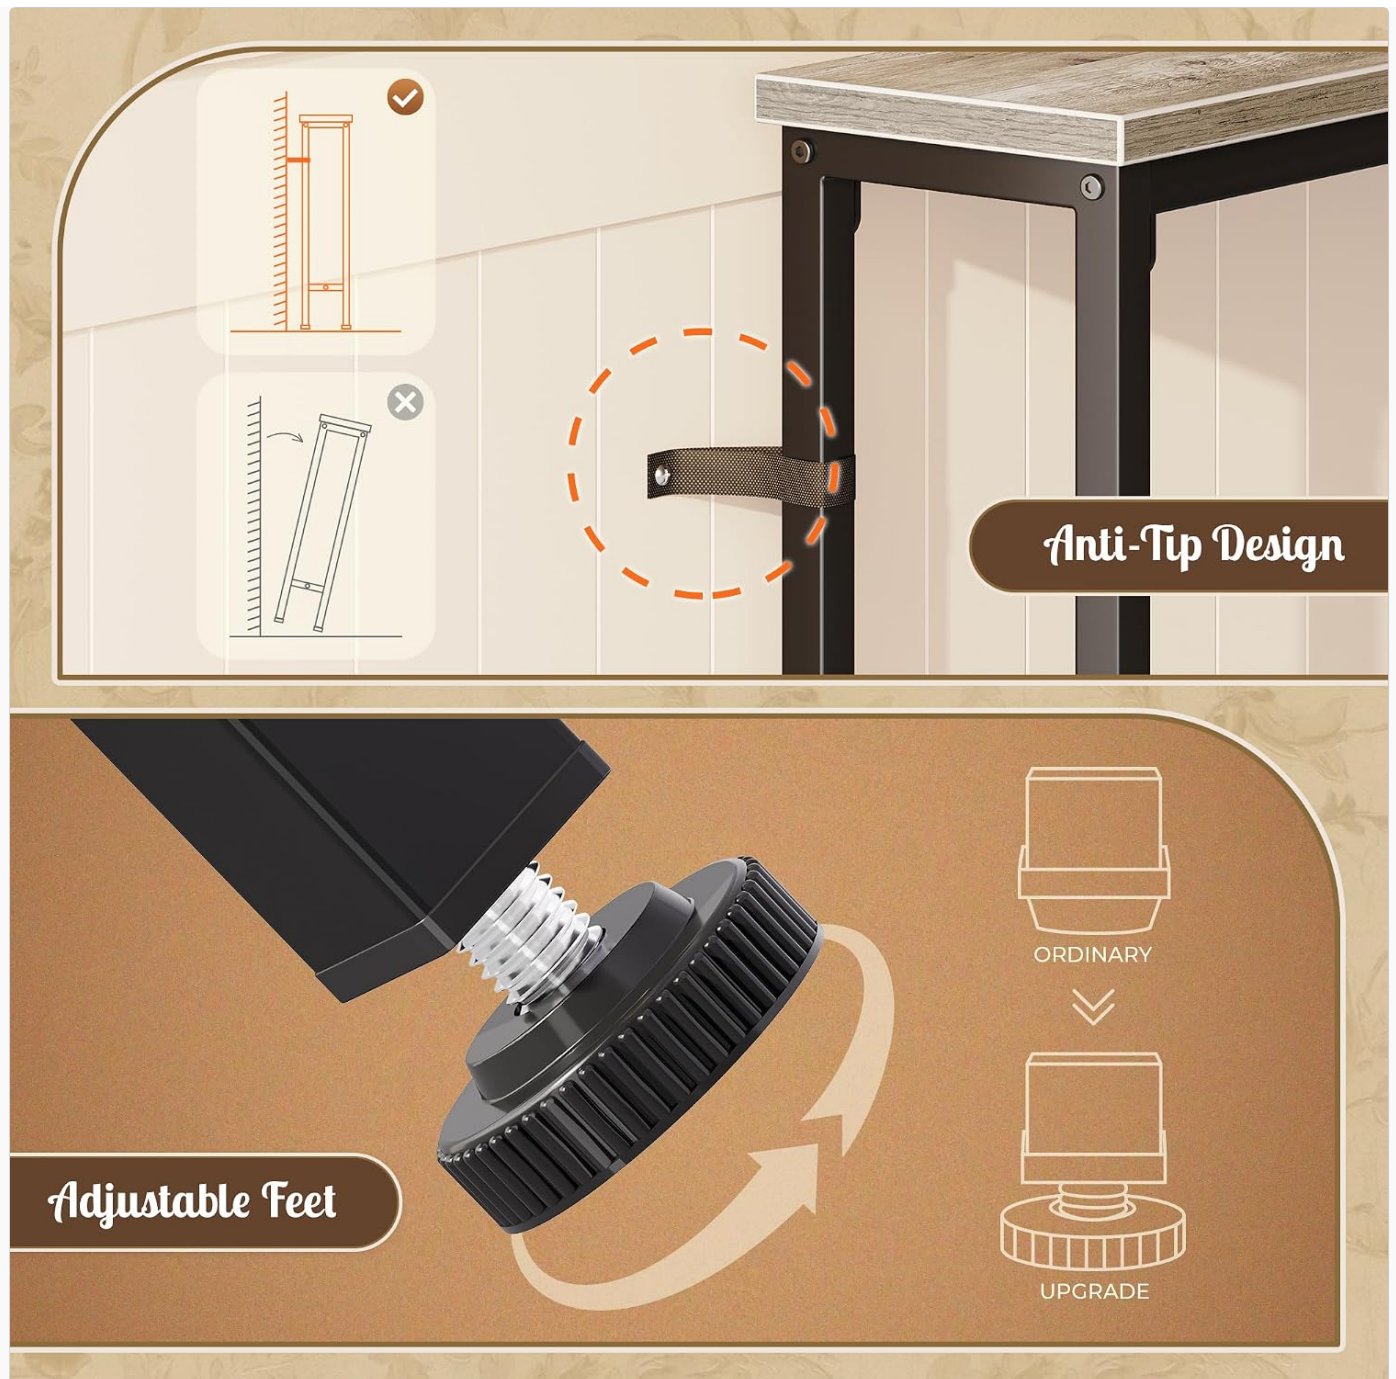


Figure 2: Anti-tip kit installation and adjustable feet.

OPERATING INSTRUCTIONS

Adjusting Table Length

The Huuger Sofa Table features a stepless adjustable length mechanism. To adjust the length:

1. Gently slide the two main sections of the table apart or together.
2. Adjust until the desired length is achieved, between 86.6 inches (minimum) and 110.2 inches (maximum).
3. Ensure the table is stable at the chosen length before placing items on it.

Stepless Length Adjustment

Perfectly Fits Your Sofa



Figure 3: Stepless length adjustment for a perfect fit.

Using the Built-in Power Outlets

Your sofa table is equipped with two power strips, each providing:

- 2 x AC Outlets (125V / 12A)
- 1 x USB-A Port (5V / 2A)
- 1 x USB-C Port (5V / 2A)

To use:

1. Plug the table's main power cord into a standard wall outlet.
2. Connect your devices to the available AC, USB-A, or USB-C ports.
3. The power strips can be positioned in 4 different locations on the tabletop during assembly to best suit your needs.

2 Built-in Power Outlets



Figure 4: Built-in power outlets for convenient charging.

MAINTENANCE

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the table with a dry, soft cloth.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood finish.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Power Outlets:** Ensure the power outlets are free from dust and debris. Do not attempt to disassemble or repair the power strips yourself.

TROUBLESHOOTING

- **Table is wobbly:** Check that all screws are tightened. Adjust the leveling feet on the bottom of the legs to stabilize

the table on uneven floors.

- **Power outlets not working:** Ensure the table's main power cord is securely plugged into a functioning wall outlet. Check if the wall outlet itself is working by plugging in another device. If issues persist, contact customer support.
- **Table does not extend/retract smoothly:** Ensure there are no obstructions in the sliding mechanism. Clean any debris from the tracks.

SPECIFICATIONS

Feature	Detail
Brand	Huuger
Model	Adjustable Sofa Table
Adjustable Length	86.6 inches to 110.2 inches
Product Dimensions (Max)	5.9"D x 110.2"W x 29.6"H
Frame Material	Metal
Top Material Type	Engineered Wood
Color	Oak
Power Outlets	2 x AC (125V/12A), 1 x USB-A (5V/2A), 1 x USB-C (5V/2A) per strip (2 strips total)
Special Features	Charging Station, Anti-tip Kit, Adjustable Length, Adjustable Feet
Room Type	Living Room

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Huuger customer support directly. If you encounter any issues or have questions regarding your product, please reach out to the Huuger Store for assistance.

Contact Information: Please refer to your purchase receipt or the Huuger official website for the most current customer support contact details.

© 2026 Huuger. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question