



[Manuals.plus](#) /

> [MAHOMICO](#) /

> MAHOMICO Swivel Rocker Recliner Chair User Manual

MAHOMICO B0GY1CSXXD

MAHOMICO Swivel Rocker Recliner Chair User Manual

Model: B0GY1CSXXD

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling and using this recliner chair. Retain this manual for future reference.

- Ensure all components are securely fastened before use.
- Do not allow children to play on or around the recliner without adult supervision.
- Keep hands and feet clear of the reclining mechanism to prevent injury.
- Avoid placing heavy objects on the footrest when it is extended.
- Do not stand on the chair or use it as a step stool.
- Unplug the power cord for the massage and heating functions when not in use or before cleaning.
- Do not expose the electrical components to water or excessive moisture.
- Maximum weight capacity for this chair is **350 pounds**. Do not exceed this limit.

2. PRODUCT OVERVIEW

The MAHOMICO Swivel Rocker Recliner Chair is designed for comfort and relaxation, featuring vibration massage, lumbar heating, a 360-degree swivel, and a gentle rocking function. It includes convenient amenities such as a USB charging port, cup holders, and side pockets.



Overall view of the MAHOMICO Swivel Rocker Recliner Chair, showcasing its black PU leather upholstery and robust design.

PRODUCT DETAIL



Close-up view highlighting the practical features of the recliner: a side pocket for storage, a front pocket, integrated cup holders in the armrests, and the comfortable, overstuffed armrests.

3. PACKAGE CONTENTS

Before assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Recliner Backrest
- Recliner Seat Base with Armrests
- Power Adapter
- Remote Control for Massage/Heat
- Assembly Hardware Kit
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the detailed instructions provided in the paper manual included in your package. A general overview of the steps is provided below:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Slide the backrest onto the metal posts located on the seat base until it clicks securely into place.
3. **Connect Wires:** Connect any electrical wires from the backrest to the corresponding wires on the seat base. Ensure connections are firm.
4. **Connect Power Adapter:** Plug the power adapter into the chair's power input and then into a wall outlet.
5. **Final Check:** Verify all connections are secure and the chair is stable before use.

Note: After unfolding the chair, allow a few hours for the cotton filling to fully expand and regain its plush comfort.

5. OPERATING INSTRUCTIONS

5.1 Reclining Function

To recline the chair, locate the handle on the side of the chair (typically on the right). Pull this handle to release the footrest and lean back to your desired reclining angle, up to 150 degrees. To return to the upright position, push the footrest down with your legs while leaning forward.



The recliner chair shown in various positions, illustrating its adjustable recline from upright to a relaxed angle, and its rocking capability.

5.2 Swivel and Rocking Functions

The chair features a full 360-degree swivel base, allowing you to rotate freely in any direction. It also offers a gentle rocking function with approximately 30 degrees of motion, providing a soothing experience.



An image of the recliner chair with graphic overlays demonstrating its 360-degree swivel and 30-degree rocking capabilities.

5.3 Vibration Massage and Lumbar Heating

The recliner is equipped with 8 vibration massage points and a built-in lumbar heating function. These features are controlled by the included remote control.

Your browser does not support the video tag.

Video demonstrating the swivel, massage, and heat functions of the recliner chair, highlighting its various comfort features.

MASSAGE & HEATING



Visual representation of the recliner's 8 vibration massage points and lumbar heating zone, with the remote control for these functions displayed.

- **Massage Modes:** Use the remote to select from 5 massage modes and 3 intensity options.
- **Heating Function:** Activate lumbar heating via the remote for added comfort and to promote blood circulation.
- **Timer Function:** Set a timer for your massage and heating sessions using the remote control.

5.4 USB Charging Port

A built-in USB charging port is located on the side of the chair, allowing you to conveniently charge your electronic devices while relaxing.

5.5 Cup Holders and Side Pockets

The armrests are equipped with two cup holders for beverages. Additionally, side pockets provide storage for remote controls, books, or other small items.

6. CARE AND MAINTENANCE

To ensure the longevity and appearance of your MAHOMICO recliner, follow these care instructions:

- **Cleaning:** The PU leather upholstery is designed for easy cleaning. Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Dusting:** Regularly dust the chair with a soft, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Tighten if necessary.



keep your essentials in touch



high-density fill sponge



soft and skin-friendly



sturdy structure

Detailed views illustrating the quality materials: soft and skin-friendly PU leather, high-density fill sponge for comfort, and the sturdy metal structure supporting the chair.

7. TROUBLESHOOTING

If you encounter any issues with your recliner, refer to the following common problems and solutions:

- **Chair Does Not Recline:**
 - Ensure the reclining handle is fully pulled.
 - Check for any obstructions around the reclining mechanism.
- **Massage/Heat Not Working:**

- Verify the power adapter is securely plugged into both the chair and a working wall outlet.
- Check if the remote control batteries need replacement (if applicable).
- Ensure all internal electrical connections are firm.

- **Chair Feels Unstable:**

- Check all assembly bolts and screws to ensure they are tightened.
- Ensure the chair is placed on a flat, even surface.

- **USB Port Not Charging:**

- Confirm the chair is powered on and connected to a working electrical outlet.
- Try a different USB cable or device to rule out device-specific issues.

If the problem persists, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	MAHOMICO
Model Number	B0GY1CSXXD
Color	Black
Material	PU Leather, Metal Frame, Cotton Fill
Product Dimensions (D x W x H)	27.6"D x 23.2"W x 23.6"H (Upright)
Seat Height	19.7 Inches
Seat Depth	22.4 Inches
Seat Back Interior Height	27.6 Inches
Maximum Weight Capacity	350 Pounds
Recline Angle	Up to 150 degrees
Swivel Function	360 degrees
Rocking Function	Approx. 30 degrees
Massage Points	8 Vibration Points
Heating Function	Lumbar Heating
Additional Features	USB Charge Port, 2 Cup Holders, Side Pocket

Oversize Seat Product Dimension



Diagram illustrating the precise dimensions of the recliner chair in both upright and reclined positions, including seat width, depth, and overall height.

9. WARRANTY AND SUPPORT

MAHOMICO is committed to providing quality products and customer satisfaction.

- **Return Policy:** This product is eligible for a 30-day easy return policy from the date of purchase. Please refer to your retailer's specific return guidelines.
- **Customer Service:** For any questions, concerns, or assistance with assembly or operation, please contact our customer service team. We aim to provide a satisfactory response within 24 hours.