

[Manuals.plus](#) /

› [WACASA](#) /

› WACASA 10x8 FT Outdoor Bar Gazebo with Entertainment Center Instruction Manual

WACASA US30810WD

WACASA 10x8 FT Outdoor Bar Gazebo with Entertainment Center Instruction Manual

Model: US30810WD | Brand: WACASA

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your WACASA 10x8 FT Outdoor Bar Gazebo with Entertainment Center. Please read this manual thoroughly before beginning assembly or use to ensure safe and correct operation and to maximize the lifespan of your product. Keep this manual for future reference.



Image 1.1: The WACASA 10x8 FT Outdoor Bar Gazebo with Entertainment Center.

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:

- Always follow the assembly instructions carefully and completely.
- Ensure the gazebo is properly anchored to a stable surface to withstand intended weight and wind conditions. Failure to do so may result in structural damage or injury.
- Be cautious when handling the multiple boxes and components during assembly to avoid injury. It is recommended to have 3-4 people for safe assembly.
- Regularly inspect all connections and anchoring points for tightness and wear.
- Do not hang excessive weight from the roof structure or any components not designed for such loads.
- Clear snow accumulation from the roof to prevent exceeding the 50 PSF (4,000 lbs total) snow load capacity.
- In extreme weather conditions (e.g., high winds exceeding 100 mph, heavy snowfall), consider additional temporary

bracing or removal of roof panels if possible, and avoid occupying the gazebo.

- Keep children and pets away from the assembly area.

3. PRODUCT FEATURES

The WACASA Outdoor Bar Gazebo is designed for durability and entertainment. Key features include:

- **Premium Cedar Wood Construction:** Crafted from ethically sourced natural Cedar wood with a low-VOC water-based finish for color retention and structural integrity. Features 4.7" (120mm) solid wood posts and moisture-blocking black base guards.
- **Durable Steel Roof:** A 26-Gauge (0.5mm) galvanized steel hardtop roof designed to withstand 50 PSF (4,000 lbs total weight) snow load and winds up to 100 mph. The sloped design aids water runoff.
- **Integrated Entertainment Center:** Includes a heavy-duty TV Mount suitable for 55"-100" TVs, a paper towel holder, and a bottle opener.
- **Spacious Bar & Storage:** A wide serving bar counter with 8 crossbars for stability, a 2-tier storage rack for drinks and snacks, and 20 heavy-duty hanging hooks for grilling tools and accessories.



Ultimate Entertainment Hub

Built-in TV mount and spacious bar counter designed to host 8-10 guests for the perfect backyard party.

4. SETUP AND ASSEMBLY

The WACASA Outdoor Bar Gazebo is shipped in 4 separate boxes. It is crucial to ensure all 4 boxes have arrived before commencing assembly. Assembly typically requires 3-4 people and can take approximately 24 hours to complete.

4.1 Pre-Assembly Checklist

- Verify all 4 shipping boxes have been received.
- Unpack all components and compare them against the parts list provided in the separate assembly guide (not included in this manual).
- Ensure you have the necessary tools (e.g., wrenches, screwdrivers, level, measuring tape).
- Choose a level and stable location for installation.

4.2 Assembly Steps Overview

Refer to the detailed assembly guide included with your product for step-by-step instructions. A general overview of the process includes:

1. Assemble the main wooden frame structure, ensuring all posts are securely connected.
2. Install the galvanized steel roof panels, following the instructions for proper alignment and sealing.
3. Attach the bar counter, storage shelves, TV mount, paper towel holder, and bottle opener.
4. Securely anchor the gazebo to the ground using the provided expansion bolts and anchoring stakes. This step is critical for stability and weather resistance.



Image 4.1: Detail of expansion bolts and anchoring stakes for secure installation.

4.3 Assembly Video Guide

For a visual aid during assembly, please watch the official 3D assembly guide video:

Your browser does not support the video tag.

Video 4.1: WACASA 8x10 FT Gazebo 3D Assembly Guide. This video provides a detailed visual walkthrough of the assembly process.

5. OPERATING INSTRUCTIONS

Your WACASA Outdoor Bar Gazebo is designed to enhance your outdoor entertainment. Here's how to utilize its features:

5.1 Using the Bar Counter and Storage

- The wide serving bar counter is reinforced for stability. Place drinks, food, and other items on it for easy access.
- Utilize the 2-tier storage rack for bottles, snacks, and bar essentials.
- Hang grilling tools, bar towels, and other accessories on the 20 heavy-duty hooks for organization.



Image 5.1: The bar counter and storage shelves, designed to keep items within reach.

5.2 TV Mount Usage

- The built-in TV mount supports TVs from 55" to 100". Ensure your TV is securely attached according to the TV mount's specific instructions.
- The mount features a flexible sliding system for horizontal adjustment, allowing you to achieve the optimal viewing angle.
- The mount also offers adjustable tilt for further viewing customization.

Flexible Viewing TV Mount with Universal sliding systemt

Allows for effortless horizontal adjustment to achieve the perfect viewing angle

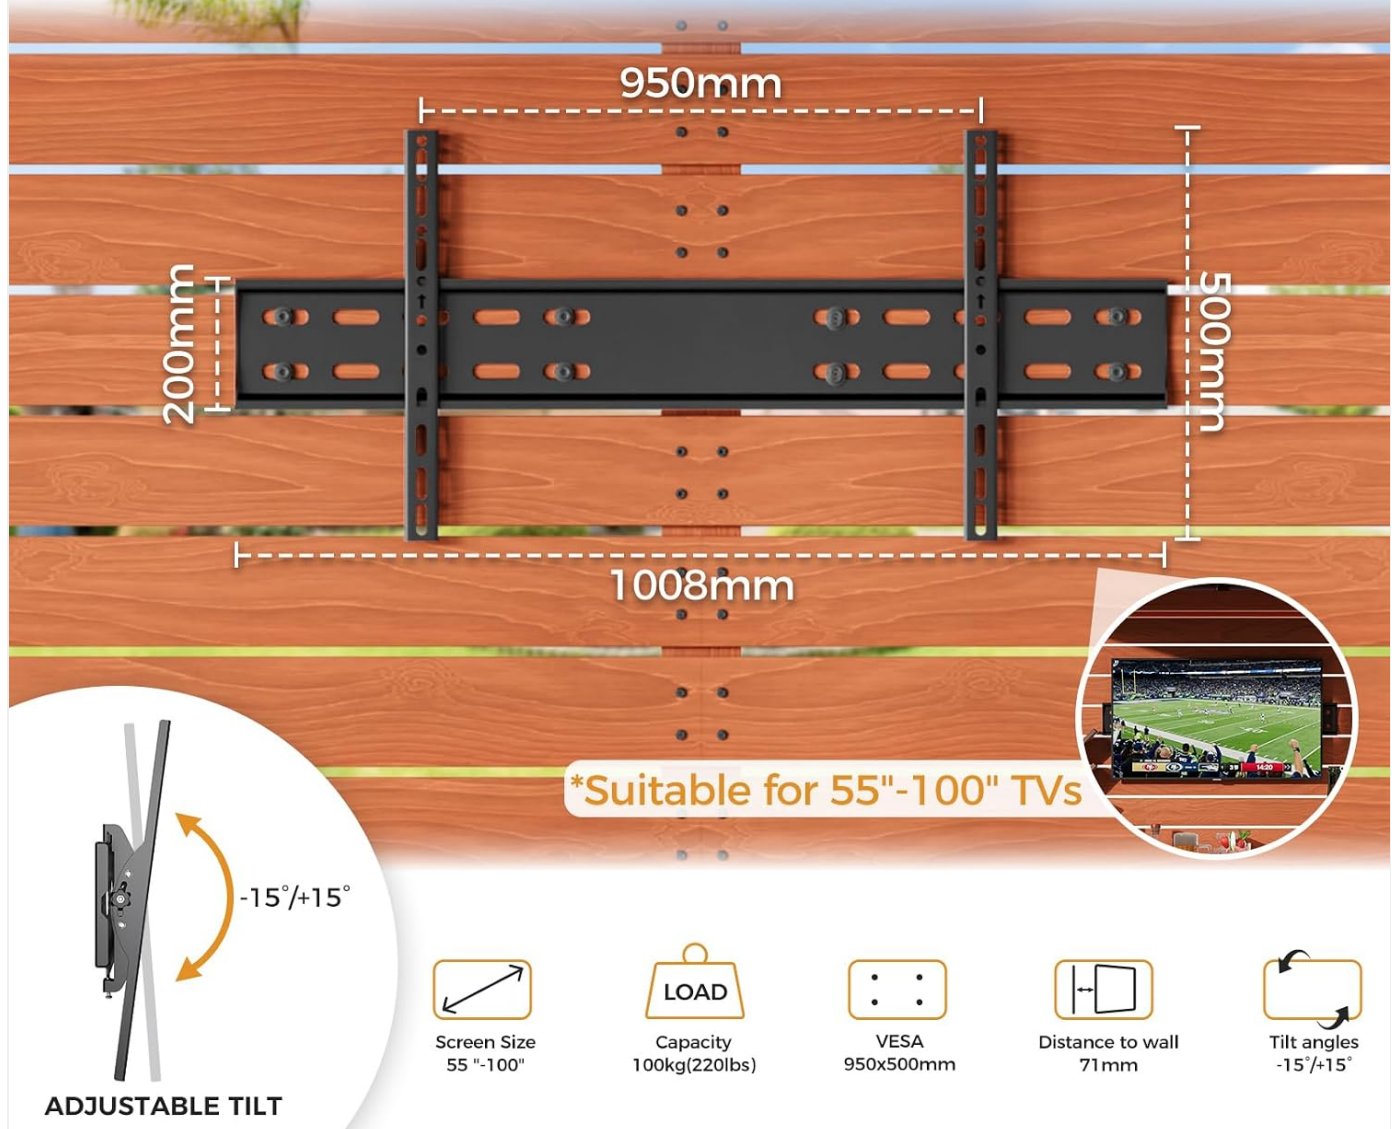 


Image 5.2: Details of the flexible TV mount, including dimensions and tilt capabilities.

5.3 Additional Conveniences

- **Paper Towel Holder:** Conveniently located for quick clean-ups of spills.
- **Bottle Opener:** Permanently installed for easy access to beverages.




Convenient Paper Towel Holder

Makes for an easy clean when the inevitable spill happens.



Never lose your bottle opener again

With a built-in bottle opener, you won't have to worry about someone walking off with yours.

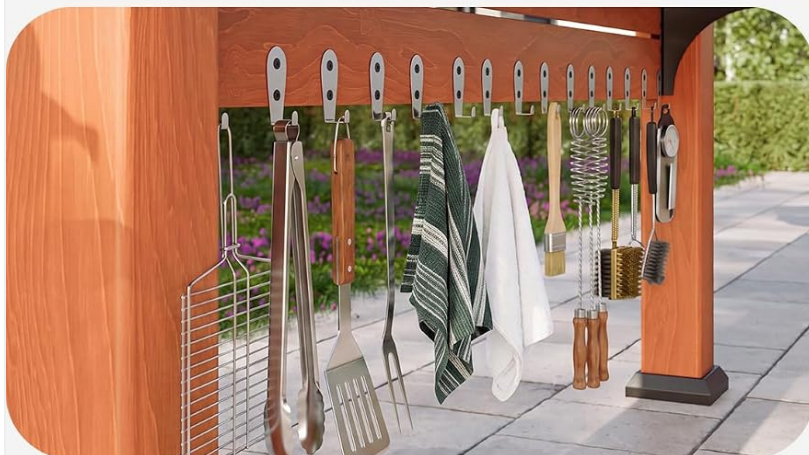

Heavy-Duty Hooks

Provides massive storage for all your BBQ tools, grilling accessories, and bar towels, keeping everything neatly organized.

Image 5.3: Features like the paper towel holder, bottle opener, and heavy-duty hooks for convenience.

5.4 Product in Use Videos

Observe the gazebo in various entertainment settings:

Your browser does not support the video tag.

Video 5.4: Unforgettable Game Night. Demonstrates the gazebo as a social hub for watching sports.

Your browser does not support the video tag.

Video 5.5: Sunset, Pool & PlayStation. Shows the gazebo used for gaming and relaxation by a pool.

Your browser does not support the video tag.

Video 5.6: Summer, Soccer & Sunshine. Illustrates the gazebo as a versatile outdoor gathering space.

6. MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your WACASA Gazebo.

- **Wood Care:** The cedar wood is treated with a low-VOC water-based finish. To maintain its rich color and protect against weathering, it is recommended to apply a wood sealer periodically, especially in harsh climates. Clean wood surfaces with a mild soap and water solution, then rinse thoroughly.
- **Roof Maintenance:** Regularly inspect the galvanized steel roof for any debris, leaves, or excessive snow accumulation. Clear snow promptly to prevent exceeding the load capacity. Clean the roof with water and a soft brush if needed.
- **Hardware Inspection:** Periodically check all bolts, screws, and anchoring stakes for tightness. Re-tighten as necessary to maintain structural integrity.
- **Base Guards:** Ensure the moisture-blocking black base guards are intact and functioning to protect the wooden pillars from ground moisture.



All-Season Protection

Heavy-Duty 26-Gauge Steel Hardtop Roof



50

(LBS/SQ FT)

SNOW LOAD CAPACITY

Tested for 4,000 lbs Snow Load.



100

MPH

WIND RESISTANCE

Heavy-Duty Weather Protection.

Image 6.1: The heavy-duty steel hardtop roof is designed for all-season protection, but requires snow removal.

7. TROUBLESHOOTING

This section addresses common issues you might encounter during assembly or use.



Problem	Possible Cause	Solution
Pre-drilled holes do not align.	Minor manufacturing variation or incorrect part orientation.	Double-check part numbers and orientation. If misalignment is minor, gently adjust or use clamps to bring parts into alignment before tightening. For significant misalignment, contact customer support.
Missing components (boards, hardware).	Packaging error or lost during transit.	Verify all boxes have arrived and check the parts list thoroughly. Contact WACASA customer support immediately with details of the missing items.
Gazebo feels unstable after assembly.	Anchoring not secure, loose connections, or uneven ground.	Ensure all bolts and screws are tightened. Verify that the gazebo is securely anchored to a level surface using all provided stakes and bolts. If the ground is uneven, consider shims or a more level installation site.
TV mount boards seem flimsy.	Perceived flexibility or heavy TV.	Ensure the TV mount is installed correctly and all fasteners are tight. If concerns persist, consider adding additional support or reinforcement to the TV mounting area, or use a lighter TV within the specified weight limits.

8. SPECIFICATIONS


Detailed specifications for the WACASA 10x8 FT Outdoor Bar Gazebo (Model US30810WD):

Feature	Detail
Brand	WACASA
Model Number	US30810WD
Size	10' x 8' (89 x 117 x 70 inches)
Item Weight	300 pounds
Material Type	Cedar Wood
Roof Material	26-Gauge Galvanized Steel
Snow Load Capacity	50 PSF (4,000 lbs total)
Wind Resistance	Up to 100 mph (when properly anchored)
TV Mount Compatibility	55"-100" TVs, 100kg (220lbs) capacity, VESA 950x500mm
Included Components	Gazebo structure, TV mount, bar top, storage shelves, hooks, paper towel holder, bottle opener, anchoring hardware.

Product Dimensions

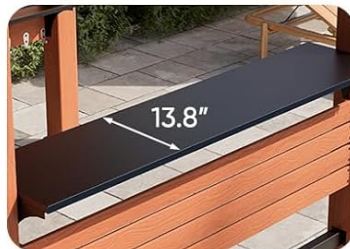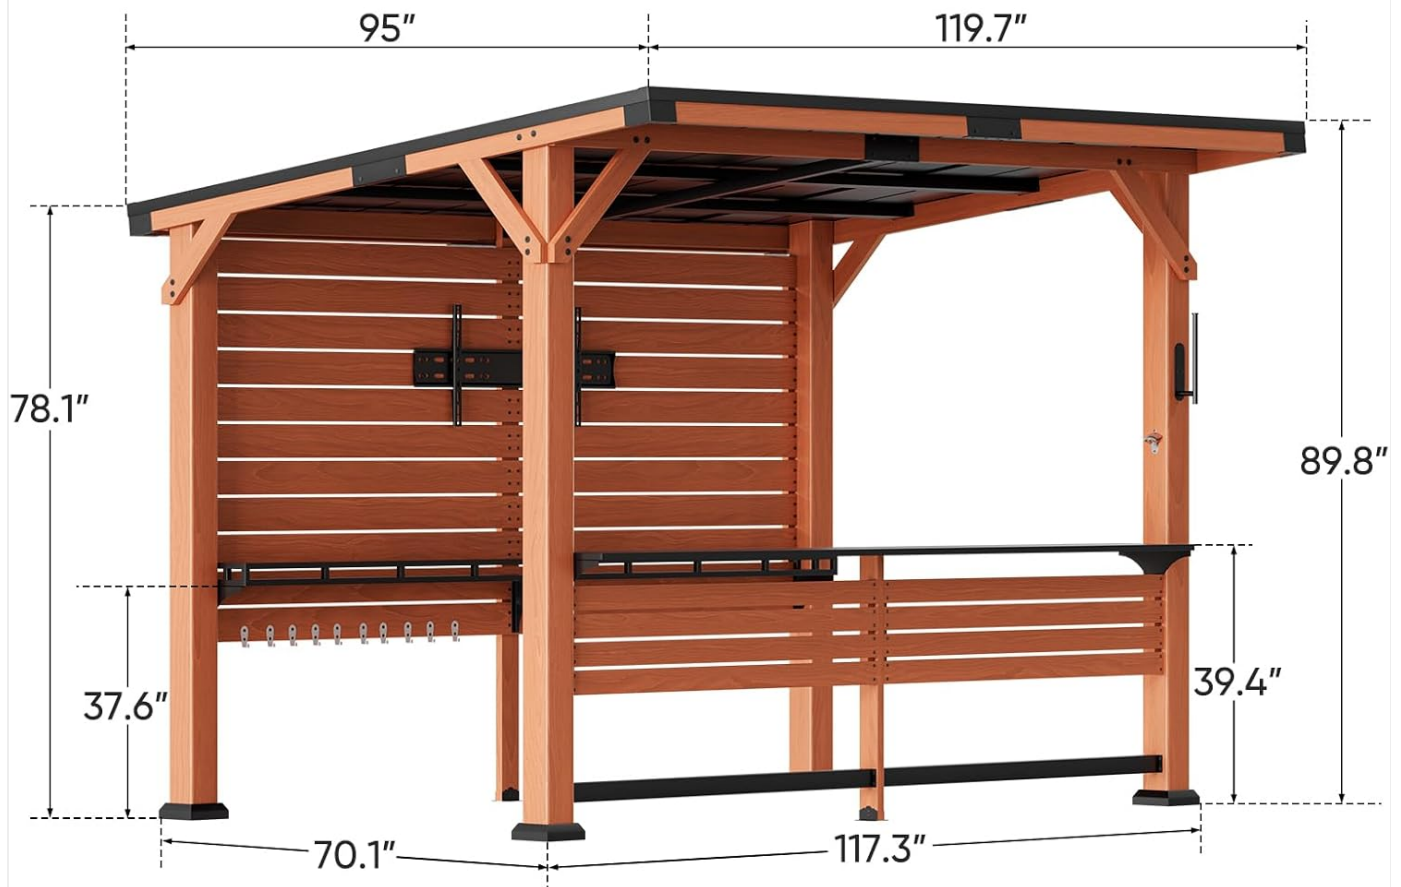

Spacious Counter
Serve and entertain effortlessly

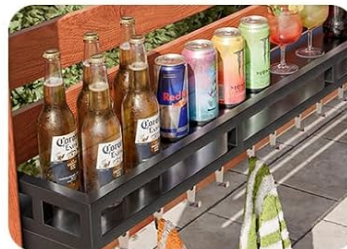

Extra Storage
Perfect for bottles & spices

Image 8.1: Product dimensions diagram.

9. WARRANTY AND SUPPORT

WACASA is committed to customer satisfaction. While specific warranty details are not provided in this manual, the manufacturer offers dedicated after-sales support.

For any questions regarding assembly, missing parts, product defects, or warranty claims, please contact WACASA customer service directly. Refer to the contact information provided in your product packaging or on the official WACASA website.

Important: Keep your purchase receipt and model number (US30810WD) handy when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question