

6725327991438

Generic High-Pressure Car Wash Water Gun with Booster Nozzle

Model: 6725327991438

PRODUCT OVERVIEW

The Generic High-Pressure Car Wash Water Gun with Booster Nozzle is designed for versatile outdoor cleaning and watering tasks. It features a high-pressure booster nozzle for concentrated water streams and adjustable spray settings to suit various applications.

- **High-Pressure Booster Nozzle:** Delivers a powerful, concentrated water stream for effective cleaning.
- **Adjustable Spray Settings:** Easily switch between jet, mist, and shower spray patterns by twisting the nozzle.
- **Versatile Use:** Suitable for car washing, garden watering, patio cleaning, and rinsing vegetables.
- **Secure Hose Connection:** Includes stainless steel hose clamps with easy-grip handles for a tight, leak-free connection.
- **Durable Construction:** Built with a solid connector and robust housing for long-lasting use.

SETUP INSTRUCTIONS

1. **Prepare Your Hose:** Ensure your garden hose is free from kinks and debris.
2. **Attach the Nozzle:** Screw the brass connector of the water gun onto the end of your garden hose. Hand-tighten until secure.
3. **Secure with Clamps (if needed):** If your hose connection feels loose or leaks, use the provided stainless steel hose clamps. Place a clamp over the hose connection point and tighten it using the yellow handle until the connection is firm and leak-free.
4. **Check for Leaks:** Turn on the water supply slowly and check for any leaks at the connection point. Tighten further if necessary.

Black king kong high-pressure washer



Strong water pressure



Rotary adjustment



Waterproof



Image: Two high-pressure water gun nozzles are shown, highlighting the included stainless steel hose clamps with yellow easy-grip handles for secure attachment to a garden hose.

OPERATING INSTRUCTIONS

Adjusting Spray Patterns

The nozzle features a 360-degree rotating head to adjust the spray pattern. Simply twist the black nozzle head to cycle through different spray types:

- **Jet Stream (Straight Line):** Provides a powerful, concentrated stream for heavy-duty cleaning, such as removing stubborn dirt from vehicles or patios.
- **Wide Fan (Umbrella Shape):** Offers a broader, fan-shaped spray for general rinsing, covering larger areas, or cleaning windows.
- **Fine Mist (Shower Type):** Delivers a gentle, atomized spray suitable for watering delicate plants and vegetables.



Image: This diagram illustrates the three primary spray patterns available: a gentle shower-type mist for watering, an umbrella-shaped fan spray for broad coverage, and a straight-line jet for powerful cleaning.

General Operation

1. Ensure the nozzle is securely attached to your garden hose.
2. Turn on your water supply.
3. Twist the nozzle head to select the desired spray pattern for your task.
4. Direct the water gun towards the area you wish to clean or water.
5. To stop the water flow, turn off your water supply at the faucet.

ONE TOOL, MULTIPLE USES

Perfect for All Outdoor Cleaning



Image: This composite image demonstrates the versatility of the water gun, showing its use for car washing, garden watering, patio cleaning, and even pet bathing.

Product in Action

Your browser does not support the video tag.

Video: This short video demonstrates the high-pressure water gun in various applications, including watering a lawn, washing a car, watering garden plants, cleaning house siding, and cleaning a patio. It showcases the different spray patterns and the product's effectiveness for diverse outdoor tasks.

MAINTENANCE

- **Cleaning:** After each use, rinse the nozzle with clean water to remove any dirt or debris.
- **Storage:** Store the water gun in a cool, dry place away from direct sunlight and freezing temperatures to prevent damage.
- **Inspect Connections:** Periodically check the hose connection and clamps for wear or damage. Replace clamps if they show signs of corrosion or weakness.
- **Nozzle Head:** If the spray pattern becomes inconsistent, check the nozzle head for blockages and clean as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water pressure	Low water supply pressure; partially closed faucet; nozzle blockage.	Ensure faucet is fully open. Check for kinks in the hose. Clean the nozzle head for any obstructions.
Water leaks at connection	Loose connection; worn hose washer; incompatible hose fitting.	Tighten the connection. Ensure hose clamps are properly secured. Check the hose washer and replace if damaged. Verify hose compatibility with standard fittings.

Problem	Possible Cause	Solution
Nozzle not adjusting spray	Debris in the nozzle mechanism; stiff rotation.	Rinse the nozzle thoroughly. Gently try to rotate the head to free any debris.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Power Source	Water Pressure
Color	Black (2PCS variant)
Item Weight	8 ounces
Product Dimensions (L x W x H)	10" x 2" x 12"
Maximum Pressure	1800 Pound per Square Inch (PSI)
Number of Items	2
Wand Length	12 Inches
Manufacturer	Gaoyashuiqiang

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Generic High-Pressure Car Wash Water Gun, please contact the seller, mingliangus, through the platform where you made your purchase. Please refer to your purchase details for specific warranty information, if applicable.