

Seesii C8 Pro+

SEESII 8-inch Cordless Electric Chainsaw C8 Pro+ Instruction Manual

Model: C8 Pro+

1. INTRODUCTION

Thank you for purchasing the SEESII 8-inch Cordless Electric Chainsaw C8 Pro+. This powerful and versatile tool is designed for efficient cutting of branches, firewood, and other wood materials. It features a brushless motor, long-lasting batteries, automatic chain lubrication, and multiple safety mechanisms to ensure a smooth and secure user experience. Please read this manual thoroughly before operation to understand the product's features, ensure safe use, and perform proper maintenance.

2. SAFETY INSTRUCTIONS

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

- **Personal Protective Equipment (PPE):** Always wear safety goggles, work gloves, hearing protection, and appropriate clothing (long sleeves, long pants, sturdy footwear) when operating the chainsaw.
- **Accidental Start Prevention:** The chainsaw is equipped with a safety lock. To start the tool, you must simultaneously press the safety lock button and the trigger switch. Never bypass or modify this safety feature.
- **Anti-Splash Baffle:** The 120° large anti-splash baffle is designed to protect you from flying wood chips and debris. Ensure it is in place and undamaged before operation.
- **Handle Guard:** The wide handle guard provides additional protection for your hands. Maintain a firm grip on both handles during operation.
- **Work Area:** Keep your work area clear of bystanders, children, and pets. Ensure good footing and balance. Avoid operating in wet conditions or near flammable liquids/gases.
- **Battery Safety:** Use only the specified batteries and charger. Do not expose batteries to extreme temperatures or moisture.
- **Maintenance:** Disconnect the battery before performing any maintenance, cleaning, or when changing accessories.
- **Kickback:** Be aware of kickback, which can occur when the moving chain at the tip of the guide bar contacts an

object. Always hold the chainsaw firmly with both hands.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon unpacking.

- 8-inch Chainsaw Unit x1
- 4000mAh Battery x2
- Replacement Chain x1
- Charging Adapter x1
- Guide Bar Cover x1
- Oil Bottle x1 (oil not included)
- Japanese Instruction Manual x1
- Storage Case x1
- Protective Goggles x1 (standard inclusion)
- Work Gloves x1 (standard inclusion)



Image: All components included in the SEESII 8-inch Cordless Electric Chainsaw C8 Pro+ package, including the chainsaw, two batteries, charger, spare chain, guide bar cover, oil bottle, manual, and storage case.

4. SETUP

4.1. Battery Charging and Installation

1. **Charging:** Connect the charging adapter to a power outlet and then to the battery. The battery indicator will show charging status. A full charge typically takes 2-3 hours.
2. **Installation:** Align the charged battery with the battery slot on the chainsaw handle and slide it in until it clicks securely into place.
3. **Removal:** Press the battery release button and slide the battery out.

改善点2

自動チェーン潤滑システム

オイル供給を自動制御！チェーン
とガイドバーの保護で部品寿命を200%延伸



Image: Two 4000mAh batteries with charge indicators, compatible with Makita 18V batteries, shown on a wooden surface.

4.2. Chain and Guide Bar Installation (if not pre-assembled)

1. Ensure the battery is removed.
2. Remove the side cover by loosening the tension knob.
3. Place the chain around the sprocket and guide bar, ensuring the cutting edges face the correct direction.
4. Position the guide bar onto the chainsaw body, aligning the chain with the guide bar groove.
5. Replace the side cover and lightly tighten the tension knob.

4.3. Chain Tension Adjustment

This chainsaw features tool-free chain tension adjustment.

1. With the side cover lightly tightened, rotate the dedicated adjustment knob by hand to adjust the chain tension.
2. The chain should be snug against the guide bar but still able to be pulled freely by hand. There should be no excessive slack.
3. Once tension is correct, fully tighten the tension knob to secure the guide bar and chain.



Image: Close-up of the chainsaw showing the tool-free chain tension adjustment knob being rotated by hand.

4.4. Automatic Lubrication System Setup

The chainsaw is equipped with an automatic oiling system for optimal chain and guide bar protection.

1. Locate the oil reservoir cap on the chainsaw body.
2. Unscrew the cap and fill the reservoir with appropriate chainsaw bar oil (oil not included in package). Do not overfill.
3. Securely replace the oil reservoir cap.

改善点1

**高枝切りも簡単!
手軽に完璧仕上がり!**

● ※高枝切り延長ポールは別売りです



Image: A close-up of the chainsaw showing the oil reservoir and oil being added, highlighting the automatic lubrication feature.

5. OPERATING INSTRUCTIONS

5.1. Starting and Stopping the Chainsaw

1. Ensure the battery is installed and the chain tension is correct.
2. Hold the chainsaw firmly with both hands.
3. To start, press the safety lock button (located near the trigger) and then squeeze the trigger switch simultaneously.

4. To stop, release the trigger switch. The chain will stop immediately.



Image: A collage showing the safety lock, 0-120° protective baffle, and wide handle guard, emphasizing the chainsaw's safety design.

5.2. Cutting Techniques

- **General Cutting:** Position the chainsaw with the chain clear of the material. Start the chainsaw, then slowly bring the moving chain into contact with the wood. Let the saw do the work; do not force it.
- **Maximum Cutting Diameter:** This chainsaw can smoothly cut logs up to 200mm (approximately 8 inches) in diameter.

- **High-Branch Cutting:** For high branches, a dedicated extension pole (sold separately) can be attached. This allows for safe cutting without the need for a ladder. Ensure the extension pole is securely attached and follow its specific instructions.



Image: A man using the SEESII chainsaw attached to an extension pole to trim high branches, demonstrating its versatility for high-reach tasks.



Image: A person operating the SEESII 8-inch Cordless Electric Chainsaw to cut a log, with wood chips flying, illustrating its cutting capability.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your chainsaw.

- **Chain Lubrication:** The automatic oiling system will continuously lubricate the chain during operation. Regularly check the oil level in the reservoir and refill with appropriate chainsaw bar oil as needed.
- **Chain Tension:** Periodically check the chain tension. A properly tensioned chain should be snug but still movable by hand. Adjust using the tool-free knob if necessary.
- **Cleaning:** After each use, remove the battery and clean the chainsaw. Use a brush or compressed air to remove wood chips, sawdust, and debris from the chain, guide bar, motor housing, and ventilation slots.
- **Chain Sharpening:** A dull chain will reduce cutting efficiency and increase strain on the motor. Sharpen the chain as needed or replace it with a new one (replacement chain included). The replacement chain specifications are: Pitch

1/4", Gauge .043", Drive Links 46.

- **Storage:** Store the chainsaw in its storage case in a dry, secure place, out of reach of children. Remove the battery before long-term storage.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or improperly installed; Safety lock not engaged; Faulty switch.	Ensure battery is fully charged and correctly installed. Press safety lock and trigger simultaneously. If problem persists, contact support.
Chain stops during operation or cuts poorly	Dull chain; Incorrect chain tension; Insufficient lubrication; Overload.	Sharpen or replace chain. Adjust chain tension. Refill oil reservoir. Avoid forcing the saw; let it cut at its own pace.
Excessive vibration or noise	Loose chain; Damaged chain or guide bar; Loose components.	Check and adjust chain tension. Inspect chain and guide bar for damage and replace if necessary. Ensure all components are securely fastened.
Oil leakage	Overfilled oil reservoir; Loose oil cap; Damaged oil seal.	Ensure oil reservoir is not overfilled and cap is tight. If leakage continues, contact support.

8. SPECIFICATIONS

Feature	Detail
Brand	Seesii
Model Number	C8 Pro
Power Source	Battery Powered
Motor Type	Brushless Motor
Chain Length	8 inches
Max Cutting Diameter	200 mm
Battery Capacity	4000mAh (x2 included)
Battery Compatibility	Makita 18V Lithium-ion batteries (BL1820b/BL1830b/BL1840b/BL1850b)
Product Dimensions (L x W x H)	40 x 20 x 30 cm
Item Weight	1.2 kg
Chain Pitch	1/4"
Chain Gauge	.043"

Feature	Detail
Chain Drive Links	46
Country of Origin	China

9. WARRANTY AND SUPPORT

Seesii products come with a 1-year warranty period. If you experience any product defects, please contact us for a refund or free exchange.

9.1. How to Contact Support

If you have any questions or problems with the product, please contact us through your Amazon order history:

1. Go to 'Order History'.
2. Select the relevant order.
3. Click on the product.
4. Click on the 'Store Name'.
5. Select 'Ask a Question'.

We aim to respond to all inquiries within 24 hours.