

[Manuals.plus](#) /

› [Xixini](#) /

› Xixini 9-Drawer Dresser with LED Lights and Power Outlet User Manual

Xixini HLG163-RB

Xixini 9-Drawer Dresser with LED Lights and Power Outlet User Manual

Model: HLG163-RB

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Xixini 9-Drawer Dresser. Please read this manual thoroughly before assembly and use to ensure safe and proper functionality of your product. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always install the anti-tipping device provided with the dresser.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



Figure 1: Installation of the Anti-Tipping Device. This device must be securely fastened to the dresser and a wall stud to prevent accidental tip-over, especially in households with children.

Ensure all electrical connections for the LED lights and power outlet are handled safely. Do not overload the power outlets.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged,

please contact customer support.

- Dresser Components (various panels, drawers, hardware)
- Accessory Bags (screws, dowels, cam locks, etc.)
- Instruction Manual (this document)
- Anti-Tipping Device
- LED Light Strip and Controller
- Power Outlet Unit with USB Ports

ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 2 hours with standard tools. It is recommended to have two people for assembly. Follow the step-by-step instructions provided in the separate assembly guide included in your package. Ensure all connections are tight and secure before use.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts using the parts list in the assembly guide.
3. Assemble the main frame of the dresser according to the diagrams.
4. Install the drawer slides onto the dresser frame and the drawer boxes.
5. Assemble the 9 drawers, ensuring the bottom panels are correctly seated and handles are attached.
6. Insert the assembled drawers into the dresser frame.
7. Install the LED light strip into the open compartment and connect the power outlet unit to the designated area on the tabletop.
8. Securely attach the anti-tipping device to the back of the dresser and to a wall stud.



Figure 2: Smooth-gliding drawer slides ensure easy operation of the drawers.

OPERATING INSTRUCTIONS

LED Ambient Lighting

The dresser features RGB LED lights in the open compartment. These lights can be controlled via a dedicated mobile application or a physical button.

- **App Control:** Download the specified mobile application (refer to the LED light instruction sheet for app name and QR code). Connect your device via Bluetooth to access over 60,000 static colors, adjust brightness, and select various lighting modes.
- **Music Sync Mode:** The LED system can synchronize with music, creating dynamic lighting effects. Activate this feature through the mobile application.
- **Button Control:** A physical button on the LED controller allows for basic control, such as turning the lights on/off

and cycling through preset colors/modes.



Figure 3: Illustration of the LED ambient lighting in both off and on states, highlighting control features.

Integrated Power Outlet

The dresser is equipped with a power strip on its tabletop for convenient charging and powering of electronic devices.

- **AC Outlets:** Features 2 standard 125V/12W AC outlets.
- **USB Ports:** Includes 2 USB ports (5V/2A) for charging mobile devices.
- **Power Cord:** The unit comes with a 4.92-foot power cord. Ensure it is plugged into a grounded wall outlet.

AMPLE STORAGE SPACE



Figure 4: The convenient charging station with AC outlets and USB ports.

MAINTENANCE AND CARE

To maintain the appearance and longevity of your dresser:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Heat:** Do not place hot items directly on the surface without protection.
- **Hardware:** Periodically check and tighten all hardware connections to ensure stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, loose hardware, obstruction.	Check drawer slide alignment. Tighten all screws on slides and drawer boxes. Remove any obstructions.
LED lights are not working.	Loose connection, power issue, faulty controller.	Ensure the LED strip is properly connected to the power source and controller. Check if the power outlet is functioning. Refer to the LED light instruction sheet for specific troubleshooting.
Power outlets/USB ports are not working.	Power cord not plugged in, circuit breaker tripped, faulty unit.	Verify the dresser's power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. If issues persist, contact customer support.
Dresser feels unstable.	Loose connections, uneven floor, anti-tipping device not installed.	Tighten all assembly hardware. Ensure the dresser is on a level surface. Crucially, install the anti-tipping device as per safety instructions.

SPECIFICATIONS



Figure 5: Detailed product dimensions and weight capacities.

Feature	Detail
Brand	Xixini
Model Number	HLG163-RB
Material	Engineered Wood (MDF, P2)
Product Dimensions (L x W x H)	59.1" x 15.75" x 39.37" (150 x 40 x 100 cm)
Number of Drawers	9
Item Weight	125.6 lbs (56.95 kg)
Drawer Weight Capacity	Up to 25 lbs per drawer
Tabletop Weight Capacity	Up to 180 lbs

Feature	Detail
LED Lighting	RGB Ambient Light, App & Button Control, Music Sync
Power Outlet	2 AC Outlets (125V/12W), 2 USB Ports (5V/2A)
Included Components	Accessory Bags, Dresser, Instruction Manual, Anti-Tip Kit

WARRANTY AND SUPPORT

For any questions, missing parts, or assistance with assembly or operation, please contact Xixini customer support. While specific warranty details are not provided in this document, Xixini typically offers a 30-day easy return policy. Please retain your proof of purchase for any support inquiries.

For customer support, please refer to the contact information provided on the packaging or the Xixini brand store on Amazon: [Xixini Amazon Store](#).

© 2023 Xixini. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GYN9YLXG>

More documents and user manuals: <https://manuals.plus/>