

BNCF Cinepad 13

BNCF CinePad 13 Tablet User Manual

Model: CinePad 13

Brand: BNCF

INTRODUCTION

Welcome to the BNCF CinePad 13 Tablet user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly before using your tablet to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The BNCF CinePad 13 is a high-performance tablet designed for entertainment, productivity, and communication. It features a large 13.4-inch FHD IPS display with anti-glare technology, an octa-core processor, ample memory and storage, and comprehensive connectivity options.

Key Features

- Powerful MTK MT6769 Octa-core Processor for smooth multitasking.
- 24GB Equivalent Memory (4GB physical + 20GB virtual) and 128GB Internal Storage, expandable up to 1TB via MicroSDXC.
- 13.4-inch FHD IPS Display (1920x1200) with AG (Anti-Glare) Soft Screen for comfortable viewing.
- Widevine L1 Support for high-definition streaming on popular platforms.
- Immersive Audio with 8 Speakers and DTS Sound Technology.
- Long-lasting 15000mAh Battery with 18W PD Fast Charging support.
- Dual Cameras: 5MP Front and 13MP Rear for video calls and photography.
- Versatile Connectivity: 4G LTE, Dual-band Wi-Fi (2.4G/5G), Bluetooth 5.0, and GPS.
- Includes a dedicated Silicone Protective Case with an integrated stand.



The BNCF CinePad 13 Tablet, showcasing its large display and sleek design.

WHAT'S IN THE BOX

- BNCF CinePad 13 Tablet
- Dedicated Silicone Protective Case
- 18W PD Charger
- USB Type-C Cable
- SIM Pin
- Instruction Manual (with warranty information)



An illustration of all items included in the BNCF CinePad 13 Tablet package.

SETUP GUIDE

Initial Charging

Before first use, fully charge your tablet using the provided 18W PD charger and USB Type-C cable.

1. Connect the USB Type-C cable to the tablet's USB-C port.
2. Connect the other end of the cable to the 18W PD charger.
3. Plug the charger into a power outlet.
4. The charging indicator will illuminate. Allow the tablet to charge until the battery is full.

Powering On/Off

To power on, press and hold the power button until the screen lights up. To power off, press and hold the power button, then select "Power off" from the options.

SIM Card and MicroSD Card Installation

The tablet supports 4G LTE communication and MicroSDXC card expansion.

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Insert the provided SIM pin into the small hole next to the tray to eject it.
3. Place your Nano-SIM card(s) and/or MicroSDXC card into the designated slots on the tray. Ensure correct orientation.
4. Carefully reinsert the tray into the tablet until it clicks into place.



A close-up view of the SIM/MicroSD card tray and how to insert cards.

Initial Setup (Android 16)

Follow the on-screen prompts to complete the initial setup, including:

- Language selection
- Wi-Fi network connection
- Google account login
- Date and time settings
- Security settings (PIN, pattern, password, face recognition)
- Granting microphone permissions for apps that require it.



The Android 16 home screen, illustrating the user interface.

OPERATING INSTRUCTIONS

Display and Touch Gestures

The 13.4-inch FHD IPS display supports multi-touch gestures.

- **Tap:** Select items, open apps.
- **Swipe:** Navigate through screens, scroll content.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Long press:** Access contextual menus or move icons.

Connectivity

Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to Settings > Network & internet > Wi-Fi.
2. Turn on Wi-Fi.
3. Select your desired network and enter the password if prompted.

Bluetooth Pairing

To pair with a Bluetooth device:

1. Go to Settings > Connected devices > Bluetooth.
2. Turn on Bluetooth.
3. Select the device from the list and follow pairing instructions.

4G LTE Data

If a SIM card is installed, mobile data will activate automatically. Manage data settings in Settings > Network & internet > Mobile network.

GPS Navigation

Enable location services in Settings > Location to use GPS for navigation apps.

Multimedia Playback

The tablet's 8 speakers and DTS sound provide an immersive audio experience.

- **Video:** Use pre-installed video players or download streaming apps (Widevine L1 supported for HD content).
- **Music:** Play audio files using the music player or streaming services.



The tablet showcasing its audio capabilities with 8 speakers and DTS sound.

Camera Usage

The tablet features a 5MP front camera and a 13MP rear camera.

1. Open the Camera app.
2. Select front or rear camera mode.
3. Tap the shutter button to take photos or record videos.

The front camera is optimized for video calls, while the rear camera is suitable for document scanning and general photography.



A user engaging in a video call on the tablet, highlighting the front camera's utility.

MAINTENANCE

Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.

Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original charger for optimal charging.

Software Updates

Regularly check for system updates in Settings > System > System update to ensure your tablet has the latest features and security patches.

Storage Management


Periodically clear unnecessary files and apps to maintain optimal performance. You can manage storage in Settings > Storage.

TROUBLESHOOTING

Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.

- Press and hold the power button for at least 10-15 seconds to force a restart.

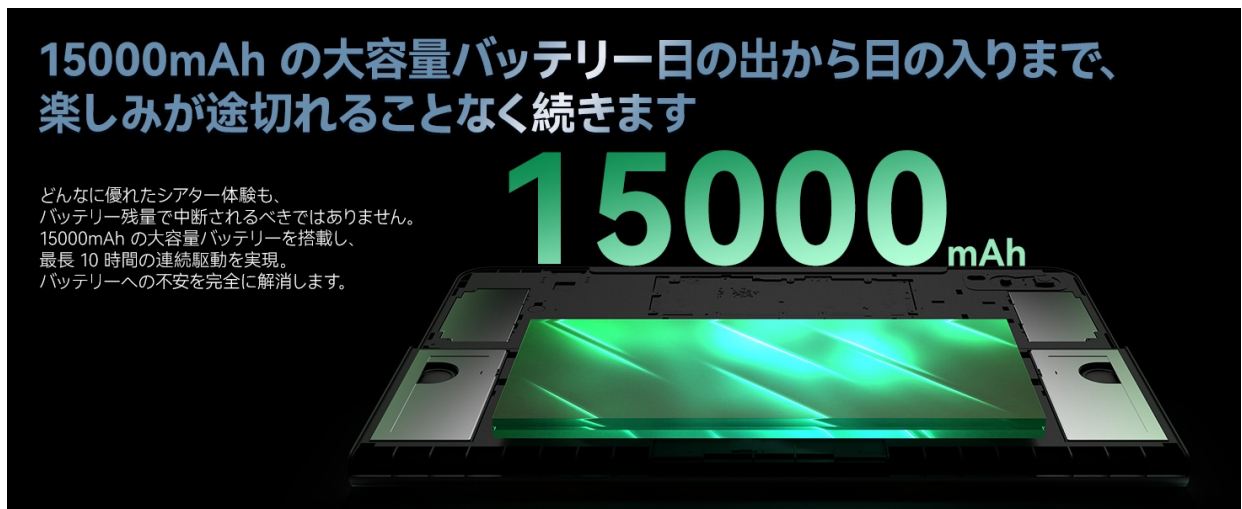

The tablet connected to its charger, indicating power input.

Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache).
- Restart the tablet.

Poor Wi-Fi Connection

- Ensure you are within range of the Wi-Fi router.
- Restart your Wi-Fi router and the tablet.
- Forget the network and reconnect (Settings > Network & internet > Wi-Fi > [Network Name] > Forget > Reconnect).

Sound Issues

- Check the volume levels (media, call, alarm) in Settings > Sound & vibration.
- Ensure no headphones are connected if you expect sound from speakers.
- Restart the tablet.

Screen Glare

The AG soft screen is designed to reduce glare. For optimal viewing in bright conditions, adjust the screen brightness and viewing angle.

SPECIFICATIONS

Feature	Detail
Brand	BNCF
Model Name	Cinepad 13
Operating System	Android 16
Processor	MTK MT6769 Octa-core (Helio G81/G88 Architecture), Max 2.0GHz
RAM	4GB Physical (24GB Equivalent with Virtual Memory)

Feature	Detail
Internal Storage	128GB
Expandable Storage	MicroSDXC up to 1TB
Screen Size	13.4 inches
Display Type	FHD IPS LCD with AG Low Reflection Soft Screen
Resolution	1920x1200 pixels
Aspect Ratio	16:10
Brightness	400 nits
Refresh Rate	60Hz
GPU	Arm Mali-G52 MC2
Rear Camera	13MP (Autofocus)
Front Camera	5MP (Face Recognition)
Video Recording	FHD 1080p
Speakers	8 Speakers with DTS Sound
Battery Capacity	15000mAh (20.9 Wh)
Charging	18W PD Fast Charging (USB-C)
Wi-Fi	Dual-band 2.4G/5G (802.11a/b/g/n/ac)
Bluetooth	Bluetooth 5.0
Cellular	4G LTE
GPS	GPS Compatible
Sensors	Face Recognition, GPS
Dimensions	30.9 x 20.8 x 0.8 cm
Weight	680 grams
Included Accessories	Silicone Case, 18W PD Charger, USB-C Cable, SIM Pin, Manual

WARRANTY AND SUPPORT

Warranty Information

This product comes with a **1-year manufacturer's warranty** from the date of purchase. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact BNCF customer support. Refer to the contact information provided in the included instruction manual or visit the official BNCF website.

Important Note: When using applications that require microphone access, a permission request pop-up will appear.

Please grant the necessary permissions for the application to function correctly.