

[Manuals.plus](#) /

› [SILLAID](#) /

› SILLAID Golf Range Finder BS01 User Manual

SILLAID BS01

SILLAID Golf Range Finder BS01 User Manual

Model: BS01 | Brand: SILLAID

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your SILLAID Golf Range Finder Model BS01. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. This range finder is designed to provide accurate distance measurements for golf and other outdoor activities.

PACKAGE CONTENTS

Upon opening your SILLAID Golf Range Finder package, please verify that all the following items are included:

- SILLAID Golf Range Finder (Laser Level I)
- Storage Case
- USB Type-C Charging Cable
- User Manual (this document)
- Strap
- Quick-Start Card
- Carabiner Clip
- Cleaning Cloth

Perfect Gift for Golf Lovers



- | | | |
|--------------------|--------------------|--------------------|
| 1 Golf Rangefinder | 2 Storage Case | 3 Strap |
| 4 User Manual | 5 USB Type-C Cable | 6 Quick-Start Card |
| 7 Carabiner Clip | 8 Cleaning Cloth | |

Figure 1: Included components of the SILLAID Golf Range Finder package.

PRODUCT OVERVIEW

The SILLAID Golf Range Finder is equipped with advanced features for precise distance measurement. Key components include:

- **Objective Lens:** 19mm, 85% light transmittance for clear viewing.
- **Eyepiece:** Adjustable for focus.
- **Power/Measurement Button:** Initiates measurement.
- **Mode Button:** Cycles through measurement modes.
- **Slope Switch:** External slide switch to enable/disable slope compensation.
- **USB-C Port:** For charging the internal battery.
- **Magnetic Strip:** Allows secure attachment to metal surfaces like a golf cart frame.



Figure 2: Optical features of the SILLAID Golf Range Finder, highlighting the 19mm objective lens and 7x magnification.

SETUP

1. **Initial Charge:** Before first use, fully charge the range finder using the provided USB Type-C cable. Connect the cable to the device's USB-C port and a standard USB power adapter (not included). The charging indicator will show progress. A full charge typically takes less than 2 hours.
2. **Attach Strap:** Secure the wrist strap to the designated loop on the range finder to prevent accidental drops.
3. **Adjust Eyepiece:** Look through the eyepiece and rotate it to adjust the focus until the display and target appear clear.

The Golfer's Must-Have Gift Set

- 1 Golf Rangefinder
- 2 Storage Case
- 3 Strap
- 4 Cleaning Cloth
- 5 Carabiner Clip
- 6 Quick-Start Card
- 7 User Manual
- 8 USB Type-C Cable



Figure 3: USB-C charging port on the SILLAID Golf Range Finder.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press the Power/Measurement button once to turn on the device. The display will activate.

- **Power Off:** The device will automatically power off after 20 seconds of inactivity to conserve battery. There is no manual power-off button.

Mode Selection

Press the Mode button to cycle through the available measurement modes:

- **Line Distance Mode:** Measures the direct distance to the target.
- **Pin Lock Mode:** Prioritizes the closest object (e.g., flagstick) and provides a short vibration upon locking.
- **Slope Compensation Mode:** Calculates and displays the adjusted distance based on elevation changes (uphill/downhill). This mode can be toggled on/off using the external slope switch.
- **Speed Measurement Mode:** Measures the speed of a moving object.

IP54 Waterproof
Long Lasting Durability



Figure 4: Available measurement modes.

Measuring Distance

1. Power on the device.
2. Select the desired mode using the Mode button.
3. Aim the crosshairs at your target.
4. Press the Power/Measurement button once. The distance will be displayed almost instantly.
5. In Pin Lock mode, the device will vibrate when it successfully locks onto the flagstick.



Figure 5: Measuring distance with the SILLAID Golf Range Finder.

Slope Compensation Switch

The SILLAID Golf Range Finder features an external slide switch to enable or disable slope compensation. This is crucial for tournament play where slope-adjusted distances are often prohibited.

- **Slope ON (Red Indicator):** Slide the switch to enable slope compensation. The device will calculate and display the "play as" distance, accounting for uphill or downhill terrain.
- **Slope OFF (Green Indicator):** Slide the switch to disable slope compensation. The device will only display the straight-line distance, making it compliant with tournament rules.

Slope Compensation

**SLOPE ON/OFF
Switch**



Figure 6: External slope compensation switch and its effect on distance measurement.

Switching Units (Yards/Meters)

To switch between yards and meters, press and hold the Mode button for approximately 3 seconds while the device is powered on. The unit displayed will change.

CHARGING

The SILL AID Golf Range Finder is equipped with a built-in rechargeable Lithium-Ion Polymer battery. To charge the device:

1. Locate the USB Type-C charging port on the side of the range finder.
2. Connect the provided USB Type-C cable to the port.
3. Connect the other end of the USB cable to a standard USB power source (e.g., wall adapter, computer USB port, power bank).
4. The charging indicator will illuminate. A full charge takes less than 2 hours and provides power for up to 20,000 measurements.

MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lenses and exterior of the device. Do not use abrasive materials or chemical cleaners.
- **Storage:** When not in use, store the range finder in its protective storage case to prevent scratches and damage. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The device is IP54 dustproof and splash-proof. While it can withstand light rain, do not submerge it in water.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.



Figure 7: Magnetic attachment, storage case, and IP54 waterproof feature.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device using the USB-C cable.
Display is blurry.	Eyepiece not focused.	Rotate the eyepiece to adjust focus until the image is clear.
Inaccurate distance readings.	Target too far or too close. Obstruction between device and target. Lens is dirty.	Ensure target is within 5-1200 yard range. Ensure clear line of sight. Clean the lenses with the provided cloth.
Pin Lock not working.	Not in Pin Lock mode. Flagstick not clearly visible or too small.	Ensure Pin Lock mode is selected. Aim steadily at the base of the flagstick.

SPECIFICATIONS

Feature	Detail
Model Number	BS01
Measuring Range	5 - 1200 yards
Accuracy	±0.5 yards
Response Time	0.04 seconds
Magnification	7X
Objective Lens Diameter	19mm
Light Transmittance	85% (Multi-coated)
Battery Type	Rechargeable Lithium-Ion Polymer
Charging Port	USB Type-C
Battery Life (per charge)	Up to 20,000 measurements
Water Resistance	IP54 (Dustproof & Splash-proof)
Dimensions (L x W x H)	4.5" x 1.6" x 2.9"
Material	Plastic

WARRANTY AND SUPPORT

SILLAIID stands behind the quality of its products. Your Golf Range Finder Model BS01 comes with the following:

- **Warranty:** 2-Year Limited Warranty.
- **Technical Assistance:** 7x24 Hour Tech Assistance.
- **Product Support:** Lifetime Support.

- **Returns:** 90-Day Free Returns.

For warranty claims, technical assistance, or any product-related inquiries, please refer to the contact information provided on the Quick-Start Card or visit the official SILL AID website.

© 2026 SILL AID. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question