

OOTD J11 Max

OOTD J11 Max Electric Scooter User Manual

Model: J11 Max

1. IMPORTANT SAFETY INFORMATION

Before operating your OOTD J11 Max Electric Scooter, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury or property damage.

- **Wear a Helmet:** Always wear an approved helmet and other protective gear (knee pads, elbow pads) when riding.
- **Check Before Each Ride:** Ensure all components are securely fastened, tires are properly inflated, and brakes are functioning correctly.
- **Understand Local Laws:** Be aware of and comply with all local laws and regulations regarding electric scooter use.
- **Riding Conditions:** Avoid riding in wet conditions, heavy rain, or on slippery surfaces. Exercise caution on uneven terrain.
- **Weight Limit:** Do not exceed the maximum weight limit of 330 pounds (150 kg).
- **Age Recommendation:** This scooter is designed for adult riders.
- **Visibility:** Use the integrated lights (headlights, taillights, turn signals, side lights) to ensure 360° visibility, especially during low-light conditions.
- **Braking:** Familiarize yourself with the dual braking system. Practice braking in a safe, open area before riding in traffic.

2. SETUP AND ASSEMBLY

Your OOTD J11 Max Electric Scooter requires minimal assembly. Follow these steps to prepare your scooter for its first ride.

1. **Unboxing:** Carefully remove all components from the packaging. Check for any damage or missing parts.
2. **Handlebar Installation:** Attach the handlebar to the stem. Ensure it is securely tightened.
3. **Seat Installation (if applicable):** If your model includes a seat, install it according to the instructions provided in the box.

4. **Initial Charge:** Fully charge the battery before the first use. Connect the charger to the scooter's charging port and then to a power outlet. The charging indicator will show when charging is complete (approximately 6 hours).
5. **Tire Check:** Verify that the 10-inch pneumatic tires are inflated to the recommended pressure.

Your browser does not support the video tag.

Video: J11 MAX Electric Scooter Installation Guide. This video demonstrates the assembly process for the J11 Max Electric Scooter, including handlebar attachment and initial setup.



Image: The OOTD J11 Max Electric Scooter in its fully assembled, unfolded state, showcasing the handlebar, seat, and overall design.

3. OPERATING INSTRUCTIONS

Learn how to safely operate your OOTD J11 Max Electric Scooter for an optimal riding experience.

1. **Power On/Off:** Insert the key into the ignition and turn it to the ON position. Press and hold the power button on the display to turn the scooter on. Repeat to turn off.

2. **LCD Display:** The clear LCD display shows current speed, selected riding mode, battery status, and other essential information.
3. **Riding Modes:** The scooter features multiple speed modes. Use the mode button to switch between them. Start with the lowest speed mode until you are comfortable with the scooter's handling.
4. **Acceleration:** Gently press the throttle lever to accelerate. The 1200W motor provides powerful acceleration.
5. **Braking:** Use the brake levers on the handlebars to engage the front and rear disc brakes. Apply both brakes smoothly and evenly for effective stopping.
6. **Lights and Signals:** Activate the LED headlights, taillights, and turn signals as needed for visibility and to indicate your intentions to others.
7. **Folding Mechanism:** To fold the scooter for transport or storage, locate the folding latch on the stem. Follow the instructions to safely fold the scooter into its compact size (50 x 9.8 x 17 inches).

Your browser does not support the video tag.

Video: J11 Max Electric Scooter Riding Display. This video demonstrates the scooter in operation, highlighting its riding capabilities and features like the display and lights.

FOLDING

ELECTRIC SCOOTER



1200w
Power Motor



330Lbs
Payload



35Mph
Max Speed



11 Inch
Solid Tire



27-33Miles
Medium Speed Mileage



One Step
Folding System



Image: A person riding the OOTD J11 Max Electric Scooter, demonstrating its use in an outdoor setting.

Easy to Fold

& Travel at Any Time



Unfolded Size: 48*23.6*53 IN
Folded Size: 50.0*9.84*16.93 IN



Image: Visual representation of the OOTD J11 Max Electric Scooter's folding mechanism and its folded and unfolded dimensions, illustrating its portability.

4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your OOTD J11 Max Electric Scooter.

- **Battery Care:**
 - Charge the 48V 18Ah battery regularly, even if not in use, to maintain battery health.
 - Avoid completely draining the battery.
 - Store the scooter in a cool, dry place when not in use, away from direct sunlight and extreme temperatures.
- **Tire Pressure:** Check the pressure of the 10-inch pneumatic tires weekly and inflate to the recommended PSI. Proper tire pressure improves ride quality and extends tire life.
- **Brake Inspection:** Regularly inspect the front and rear disc brakes for wear. Ensure brake levers are responsive and cables are not frayed. Adjust or replace brake pads as necessary.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using high-pressure water jets or harsh chemicals, which can damage electronic components.
- **Fastener Check:** Periodically check all screws, bolts, and quick-release mechanisms to ensure they are tight and secure.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your OOTD J11 Max Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not power on.	Battery is low or depleted; power button not pressed correctly; key not in ON position.	Charge the battery fully. Ensure the key is turned to the ON position. Press and hold the power button firmly.
Reduced range or speed.	Low battery charge; improper tire pressure; heavy load; riding uphill frequently.	Fully charge the battery. Check and adjust tire pressure. Reduce load if possible.
Brakes feel weak or noisy.	Worn brake pads; loose brake cables; dirt or debris on brake discs.	Inspect brake pads for wear and replace if necessary. Adjust brake cable tension. Clean brake discs.
Unusual noises during operation.	Loose components; motor issue; wheel bearing issue.	Check all fasteners for tightness. If noise persists, contact customer support.

6. SPECIFICATIONS

Detailed technical specifications for the OOTD J11 Max Electric Scooter.

Feature	Detail
Model Name	J11 Max
Motor Power	1200W
Max Speed	35 MPH
Battery	48V 18Ah Lithium Battery
Max Range	Up to 33 Miles

Feature	Detail
Charging Time	Approximately 6 hours
Tire Size	10 inches (All-Terrain Pneumatic)
Braking System	Dual Disc Brakes (Front & Rear)
Suspension	Dual Suspension
Max Load Capacity	330 pounds (150 kg)
Product Dimensions (Unfolded)	52"L x 26"W x 49"H
Folded Dimensions	50"L x 9.8"W x 17"H
Net Weight	55 pounds (25 kg)
Frame Material	Aluminum
Special Features	Adjustable Handlebar Height, Digital Display, Lights, Seat

7. WARRANTY AND SUPPORT

OOTD provides a comprehensive warranty and customer support for your J11 Max Electric Scooter.

- Warranty:** The scooter comes with a 12-month or 180-day warranty on various parts, as per manufacturer's terms. Please refer to the warranty card included with your product for specific details.
- Customer Support:** For any questions, technical assistance, or warranty claims, please contact the seller, Venus Ebike, or OOTD customer service. Contact information can typically be found on the product packaging or the seller's Amazon store page.

© 2026 OOTD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question