

KEPEAK LVSQ-001

KEPEAK Cordless Portable Washer LVSQ-001 User Manual

Model: LVSQ-001

INTRODUCTION

Thank you for choosing the KEPEAK Cordless Portable Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new portable washer. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

WARNING: Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Precautions

- Always wear appropriate personal protective equipment, including eye protection, when operating the washer.
- Do not direct the water stream at people, pets, or electrical devices.
- Keep children and bystanders away from the operating area.
- Ensure all connections are secure before starting the unit.
- Do not operate the washer if any part is damaged.
- Store the washer in a dry, secure location when not in use.

Battery Safety

- Use only the charger provided by KEPEAK for charging the batteries.
- Do not expose batteries to water, heat, or direct sunlight.
- Do not short-circuit the battery terminals.
- Dispose of batteries responsibly according to local regulations.
- If the battery is damaged or leaking, do not use it.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any parts are missing or damaged, please contact customer support.

GET WATER FROM ANY SOURCE



From Garden Hose



From Water Tap



From Bucket

Image: All components included in the KEPEAK Cordless Portable Washer kit, neatly arranged in a hard case.

- Cordless Portable Washer Unit
- 6-in-1 Multi-Function Nozzle
- Foam Cannon
- 2 x 4.0Ah Batteries
- Fast Charger
- 16.4 ft Flexible Hose
- Water Filter
- Stop Valve
- Faucet Adapter
- GHT Connector
- NPT Connector
- Transition Connector

- Waterproof Hard Case (Suitcase)
- User Manual

SETUP

1. Charge the Batteries

1. Insert a 4.0Ah battery into the provided fast charger.
2. Plug the charger into a standard electrical outlet.
3. Allow 2-3 hours for a full charge. The charger indicator light will change when charging is complete.
4. Ensure batteries are fully charged before first use for optimal performance.

21V4.0Ah Battery

Smart Power for Longer Use

20-45 Minutes
Working Time

2-3 Hours
Charging Time

Triple Protection System



Overheat



Overload



Low Voltage



Image: Illustration of the 21V 4.0Ah battery and its charging process, highlighting charging time and working time.

2. Assemble the Washer

1. Attach the 6-in-1 multi-function nozzle to the end of the spray wand by twisting it securely.
2. Connect the spray wand to the main washer unit.

3. Insert a charged 4.0Ah battery into the battery slot on the bottom of the washer unit until it clicks into place.

3. Connect Water Source

The KEPEAK Portable Washer can draw water from various sources:

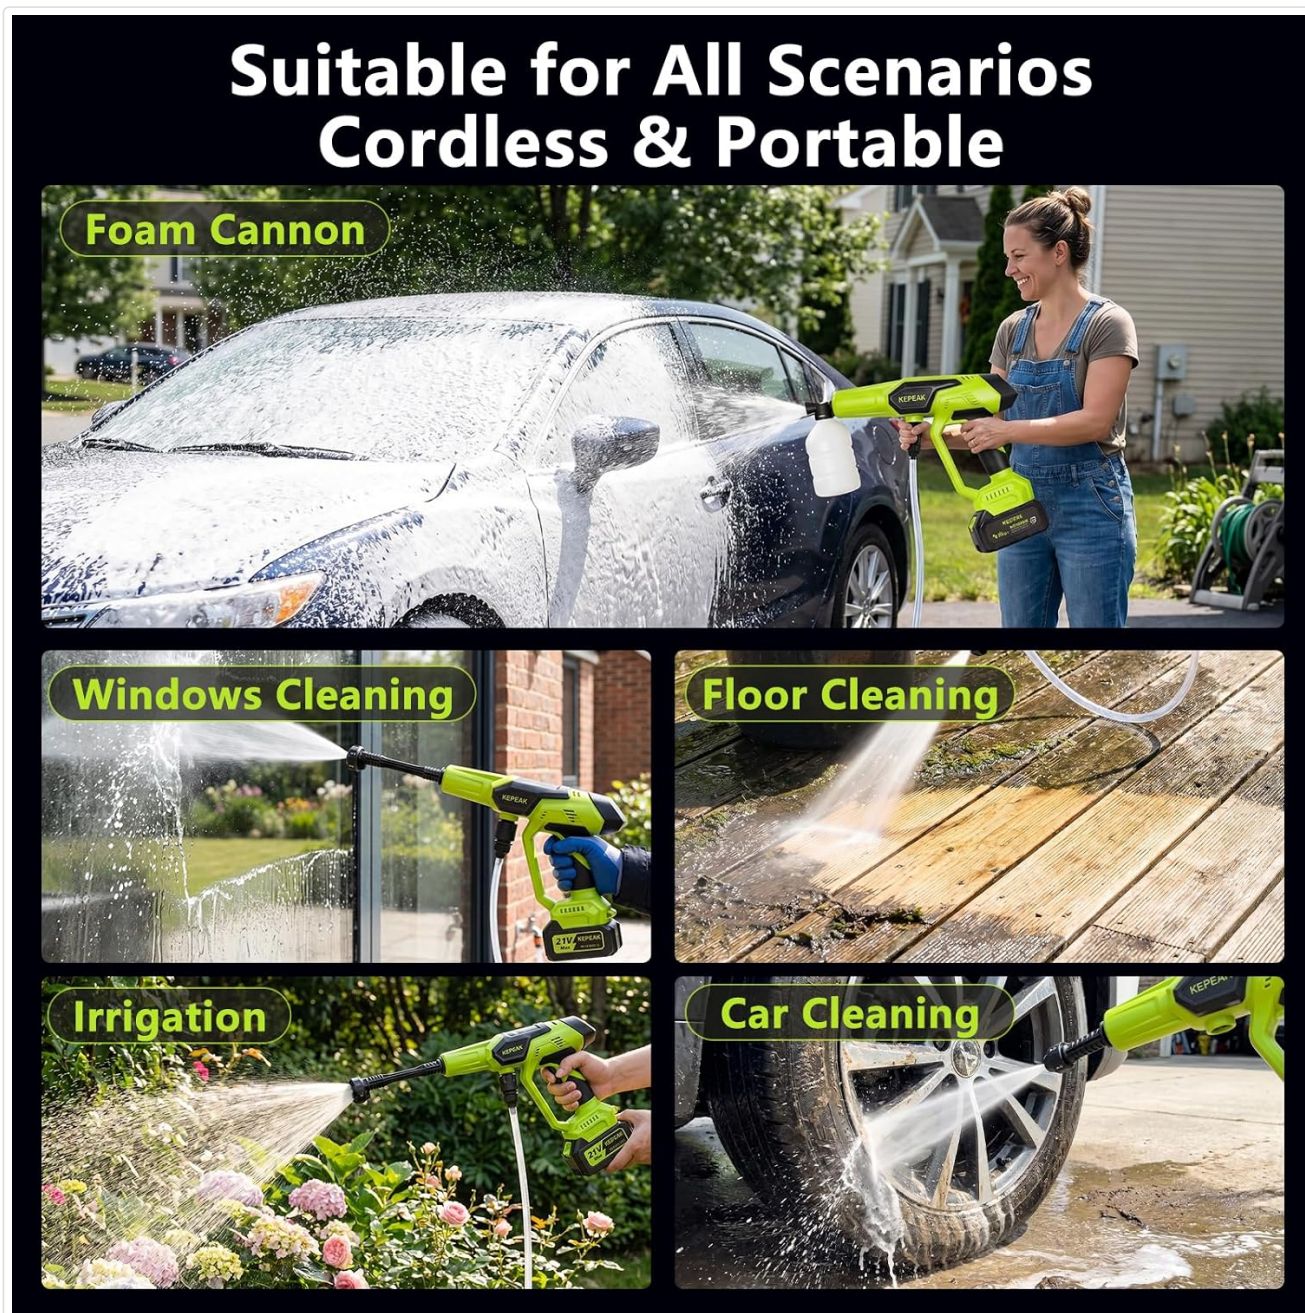


Image: Visual guide demonstrating how to connect the washer to a garden hose, water tap, or draw water from a bucket.

1. From a Bucket/Container:

- Attach the water filter to one end of the 16.4 ft flexible hose.
- Submerge the filtered end of the hose into a bucket, lake, or pool.
- Connect the other end of the hose to the water inlet on the washer unit.

2. From a Garden Hose/Water Tap:

- Use the appropriate faucet adapter (GHT or NPT) and transition connector to connect the 16.4 ft hose to your garden hose or water tap.
- Ensure the stop valve is installed between the hose and the washer unit for easy water flow control.
- Connect the other end of the hose to the water inlet on the washer unit.

OPERATING INSTRUCTIONS

1. Select Nozzle Spray Pattern

The 6-in-1 multi-function nozzle allows you to choose from various spray patterns by rotating the nozzle head. Ensure the washer is OFF when changing spray patterns to prevent accidental activation or leakage.



Image: Diagram showing the six different spray patterns available on the nozzle: 0°, 15°, 25°, 40°, Spray, and 45° Inclined.

- **0° (Direct Jet):** For stubborn stains and hard-to-reach areas.
- **15° (Narrow Fan):** For concentrated cleaning on smaller surfaces.
- **25° (Medium Fan):** General cleaning tasks.
- **40° (Wide Fan):** For gentle cleaning of larger, delicate surfaces.
- **Spray:** For watering plants or light rinsing.
- **45° Inclined:** For cleaning undersides or angled surfaces.

2. Using the Foam Cannon

1. Fill the foam cannon reservoir with appropriate cleaning solution.

2. Attach the foam cannon to the washer unit in place of the spray wand.
3. Activate the washer to apply a thick layer of foam for effective cleaning.

3. General Operation

1. Once the water source is connected and the battery is inserted, press the power button to turn on the unit.
2. Squeeze the trigger to start the water flow. Release the trigger to stop.
3. Always hold the washer firmly with both hands during operation.
4. For optimal cleaning, hold the nozzle at an appropriate distance from the surface.

Applications

The KEPEAK Cordless Portable Washer is versatile for various cleaning tasks:



Image: Collage showing the portable washer being used for car cleaning, window cleaning, floor cleaning, and plant irrigation.

- Car Washing
- Patio and Deck Cleaning
- Exterior Wall Cleaning

- Window Cleaning
- Garden Tool Cleaning
- Plant Watering (using the "Spray" nozzle setting)

Your browser does not support the video tag.

Video: Demonstration of the KEPEAK cordless pressure washer in action, showcasing its portability and cleaning power.

MAINTENANCE

1. Cleaning the Unit

- After each use, disconnect the battery and water source.
- Rinse the nozzle and hose with clean water to remove any detergent or debris.
- Wipe the exterior of the washer unit with a damp cloth. Do not immerse the unit in water.
- Clean the water filter regularly to prevent clogging and maintain optimal water flow.

2. Storage

- Ensure the unit is completely dry before storing.
- Remove the battery from the washer unit if storing for an extended period.
- Store the washer, batteries, and accessories in the provided waterproof hard case in a cool, dry place, away from direct sunlight and extreme temperatures.
- Protect the unit from freezing temperatures.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Washer does not start	Battery not charged or improperly inserted.	Ensure battery is fully charged and correctly inserted.
No water flow or low pressure	Water filter clogged; hose kinked; insufficient water source; air in pump.	Clean water filter; straighten hose; ensure water source is adequate; prime the pump by running water through it without the nozzle attached for a few seconds.
Water leakage	Loose connections; damaged O-rings.	Check all connections and tighten them. Inspect O-rings for damage and replace if necessary.
Motor stops during operation	Battery low; motor overheating.	Recharge battery. Allow motor to cool down if it has been running continuously for a long period.

SPECIFICATIONS

- **Brand:** KEPEAK
- **Model Number:** LVSQ-001

- **Power Source:** Battery Powered
- **Maximum Pressure:** 1450 PSI
- **Maximum Flow Rate:** 3.0 GPM
- **Battery Type:** 21V 4.0Ah Lithium-ion (2 included)
- **Battery Runtime:** Up to 30 minutes per full charge (per battery)
- **Charging Time:** 2-3 hours
- **Hose Length:** 16.4 feet
- **Product Dimensions:** 12"L x 3.5"W x 13"H
- **Weight:** 2.18 lbs (unit only)
- **Nozzle:** 6-in-1 Multi-Function (0°/15°/25°/40°/Spray/45° Inclined)

WARRANTY INFORMATION

KEPEAK products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or visit the official KEPEAK website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a problem with your KEPEAK Cordless Portable Washer, please contact our customer support team:

- **Website:** [Visit the KEPEAK Store on Amazon](#)
- **Email:** Refer to your product packaging or warranty card for direct contact information.
- **Phone:** Refer to your product packaging or warranty card for direct contact information.

When contacting support, please have your product model number (LVSQ-001) and purchase date ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question