

[Manuals.plus](#) /

› [Inexaccessories](#) /

› Inexaccessories Double Din Car Stereo Model B0GZ47862H User Manual

Inexaccessories B0GZ47862H

Inexaccessories Double Din Car Stereo User Manual

Model: B0GZ47862H

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Inexaccessories Double Din Car Stereo. Please read this manual thoroughly before using the product to ensure proper function and safety. Keep this manual for future reference.

PACKAGE CONTENTS

Before installation, verify that all items listed below are present in your package:

- Double Din Car Stereo Unit
- Rear View Camera
- Camera Cable
- Connecting Wire (RCA cables)
- Disassembly Tool
- Mounting Brackets
- Screws
- External Microphone
- Power Cable / Wiring Harness
- User Manual (this document)

HD IPS Touch Screen

With a resolution 1280×720, this car stereo is highly responsive and clear, having an ultra-rapid wake-up time.



Support Android/ iPhone Mirror Link

Sync your smartphone screen to the 7-inch big screen and enjoy the features such as videos or movies! (we do NOT suggest you do so for your safety when you are driving).



Figure 1: Included Components and Unit Dimensions

SETUP AND INSTALLATION

Professional installation is recommended for car stereo systems. Ensure the vehicle's battery is disconnected before beginning installation to prevent electrical damage.

Pre-Installation for CD/DVD Player

Before using the built-in CD/DVD player, it is essential to remove the two transport screws located on the top of the car radio unit. Failure to remove these screws will prevent the CD/DVD player from functioning correctly and may cause damage to discs or the unit.



Figure 2: Removing CD/DVD Transport Screws

Wiring Connections

Connect the provided wiring harness to your vehicle's existing wiring. Ensure all connections are secure and

correctly matched (e.g., power, ground, speaker outputs, antenna). Refer to your vehicle's wiring diagram if necessary. Connect the external microphone to the designated port for optimal hands-free calling and voice control performance.

Mounting the Unit

Use the included mounting brackets and screws to secure the double din unit into your vehicle's dashboard. Ensure the unit is firmly in place to prevent movement during driving.

OPERATING INSTRUCTIONS

Power On/Off and Basic Controls

Press the power button (usually a knob or dedicated button) to turn the unit on or off. Adjust volume using the rotary knob or volume buttons. Navigate menus and select options using the touchscreen or physical buttons.

CD/DVD Player Operation

Insert a CD or DVD into the disc slot. The unit will automatically detect the disc and begin playback. Use the on-screen controls or physical buttons to play, pause, skip tracks/chapters, and adjust playback settings.



Figure 3: CD/DVD Playback

Apple CarPlay & Android Auto

Connect your iPhone or Android smartphone to the car stereo via a USB cable. The unit will automatically launch Apple CarPlay or Android Auto. This allows you to access phone functions, music, maps, messages, and other compatible apps directly on the car stereo's 7-inch IPS HD screen. Use Siri or Google Assistant for voice commands.



Figure 4: Apple CarPlay and Android Auto Interface



Figure 5: Apple CarPlay Voice Control Example



Figure 6: Android Auto Voice Control Example

Bluetooth 5.2 & Voice Control

Pair your smartphone with the car stereo via Bluetooth for hands-free calling and wireless audio streaming. Access your phonebook, make/receive calls, and play music from your device. The external microphone ensures clear voice transmission during calls. Activate Siri or Google Assistant through the stereo for voice commands.



Figure 7: Bluetooth Hands-Free Calling and Voice Assistant



Figure 8: Voice Assistant Interaction

Mirror Link Function

The Mirror Link feature allows you to display your smartphone's screen directly onto the car stereo's 7-inch display. Connect your iOS or Android phone using a USB cable. This function is primarily for displaying content; avoid using

it for active phone interaction while driving for safety reasons.



Figure 9: Mirror Link Displaying Smartphone Content

Backup Camera Display

When the vehicle is shifted into reverse gear, the car stereo automatically switches to display the rear view from the included HD night vision backup camera. This provides a wide 170° viewing angle, assisting with safer parking and reversing maneuvers.



Figure 10: Automatic Backup Camera Display

Steering Wheel Control (SWC)

Connect your vehicle's steering wheel controls to the car stereo to manage functions such as volume, track skipping, and mode selection directly from your steering wheel. This enhances convenience and reduces distractions while driving.



Figure 11: Steering Wheel Control Interface

AM/FM Radio

Access the AM/FM radio tuner to listen to your favorite stations. The unit provides stable signal reception. Scan for stations, save presets, and switch between AM and FM bands using the touchscreen or physical controls.



Figure 12: AM/FM Radio Interface

30-Band Equalizer (EQ) Settings

Customize your audio experience with the built-in 30-band equalizer. Adjust frequency levels to match your preferences or select from various preset sound modes (e.g., Pop, Rock, Jazz, Classic). This allows for fine-tuning of the audio output.



Figure 13: 30-Band EQ Settings

HD IPS Touch Screen

The 7-inch HD IPS touchscreen offers a responsive and clear interface with a resolution of 1280x720. Interact with the system using touch gestures such as tapping, swiping, and dragging. The screen features a rapid wake-up time.



Figure 14: HD IPS Touch Screen Interaction

Multiple Input Modes

The car stereo supports various input sources for media playback, including USB flash drives, TF cards (up to 32GB), and AUX-IN connections. This allows for versatile audio and video playback options.



Figure 15: Available Input Modes

Knob and Button Controls

In addition to the touchscreen, the unit features physical knob and button controls for quick access to essential functions like volume adjustment, mode switching, and menu navigation.



Figure 16: Physical Knob Control

MAINTENANCE

To ensure the longevity and optimal performance of your car stereo, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the touchscreen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid abrasive materials or harsh chemicals.
- **Cleaning the Unit:** Periodically wipe the exterior of the unit with a dry, soft cloth to remove dust.
- **Disc Care:** Handle CDs and DVDs by their edges. Keep discs clean and free of scratches to ensure smooth playback. Store discs in their cases when not in use.
- **Avoid Extreme Temperatures:** Do not expose the unit to extreme heat or cold for extended periods, as this can affect performance and lifespan.
- **Software Updates:** Check the manufacturer's website periodically for any available firmware updates to improve performance or add new features.

TROUBLESHOOTING

If you encounter issues with your car stereo, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Blown fuse, incorrect wiring, loose power connection.	Check vehicle's fuse box and the stereo's fuse. Verify power and ground wire connections. Ensure wiring harness is securely connected.
No Sound	Volume too low, mute activated, incorrect speaker wiring, amplifier issue.	Increase volume. Check if mute is active. Verify speaker wire connections. If using an external amplifier, check its power and connections.
CD/DVD Not Playing	Transport screws not removed, disc dirty/scratched, incorrect disc format.	Ensure transport screws are removed (refer to Setup section). Clean the disc. Try a different disc.
CarPlay/Android Auto Not Connecting	Faulty USB cable, phone settings, incompatible phone.	Use an original or certified USB cable. Check phone settings for CarPlay/Android Auto permissions. Ensure your phone OS is up to date.
Backup Camera Not Displaying	Incorrect camera wiring, faulty camera, reverse trigger wire not connected.	Check camera power and video signal connections. Ensure the reverse trigger wire is correctly connected to the vehicle's reverse light circuit.
Touchscreen Unresponsive	System freeze, debris on screen.	Perform a soft reset (refer to unit's specific reset procedure, often a small reset button). Clean the screen.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Brand:** Inexaccessories
- **Model:** B0GZ47862H
- **Connectivity Technology:** USB, Bluetooth
- **Controller Type:** Linux
- **Special Feature:** Touchscreen, Apple CarPlay, Android Auto, CD/DVD Player, Backup Camera Support, Steering Wheel Control
- **Compatible Devices:** Smartphone
- **Connector Type:** RCA
- **Audio Output Mode:** Stereo
- **Color:** Black
- **Control Method:** Touch
- **Audio Output Type:** AUX, Speakers, TF, USB
- **Wireless Technology:** Bluetooth 5.2
- **Built-In Media:** Microphone
- **Unit Count:** 1.0 Count

WARRANTY INFORMATION

This Inexaccessories car stereo unit comes with a **2-year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided with your purchase or visit the official Inexaccessories website. When contacting support, please have your product model number (B0GZ47862H) and proof of purchase readily available.