

Decofy DC-TS02-113

Decofy 63-inch Fluted TV Stand User Manual

Model: DC-TS02-113
Brand: Decofy

INTRODUCTION

Thank you for choosing the Decofy 63-inch Fluted TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.

This TV stand is designed to accommodate televisions up to 70 inches and features a built-in charging station, sliding tambour doors, and adjustable shelves for versatile storage. Its walnut finish and mid-century modern design complement various home décors.

SAFETY INFORMATION

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Tighten all fasteners securely, but do not overtighten.
- Do not exceed the maximum weight capacity of the TV stand.
- For safety, it is recommended to assemble this product with two people.
- Use the included wall attachment brackets to secure the TV stand to a wall, preventing tipping.
- Keep children and pets away from the assembly area.
- Do not allow children to climb on or play with the TV stand.

PACKAGE CONTENTS

Verify that all components listed in your product's assembly guide are present before beginning assembly. The package typically includes:

- TV Stand panels (top, bottom, sides, shelves, back)
- Sliding tambour doors and associated hardware

- Solid wood legs and center support leg
- Built-in charging station unit (2 AC outlets, 1 USB port, 1 Type-C port)
- Assembly hardware (screws, dowels, cam locks, etc.)
- Wall attachment brackets
- Assembly instructions manual

Fit for TV up to 70"

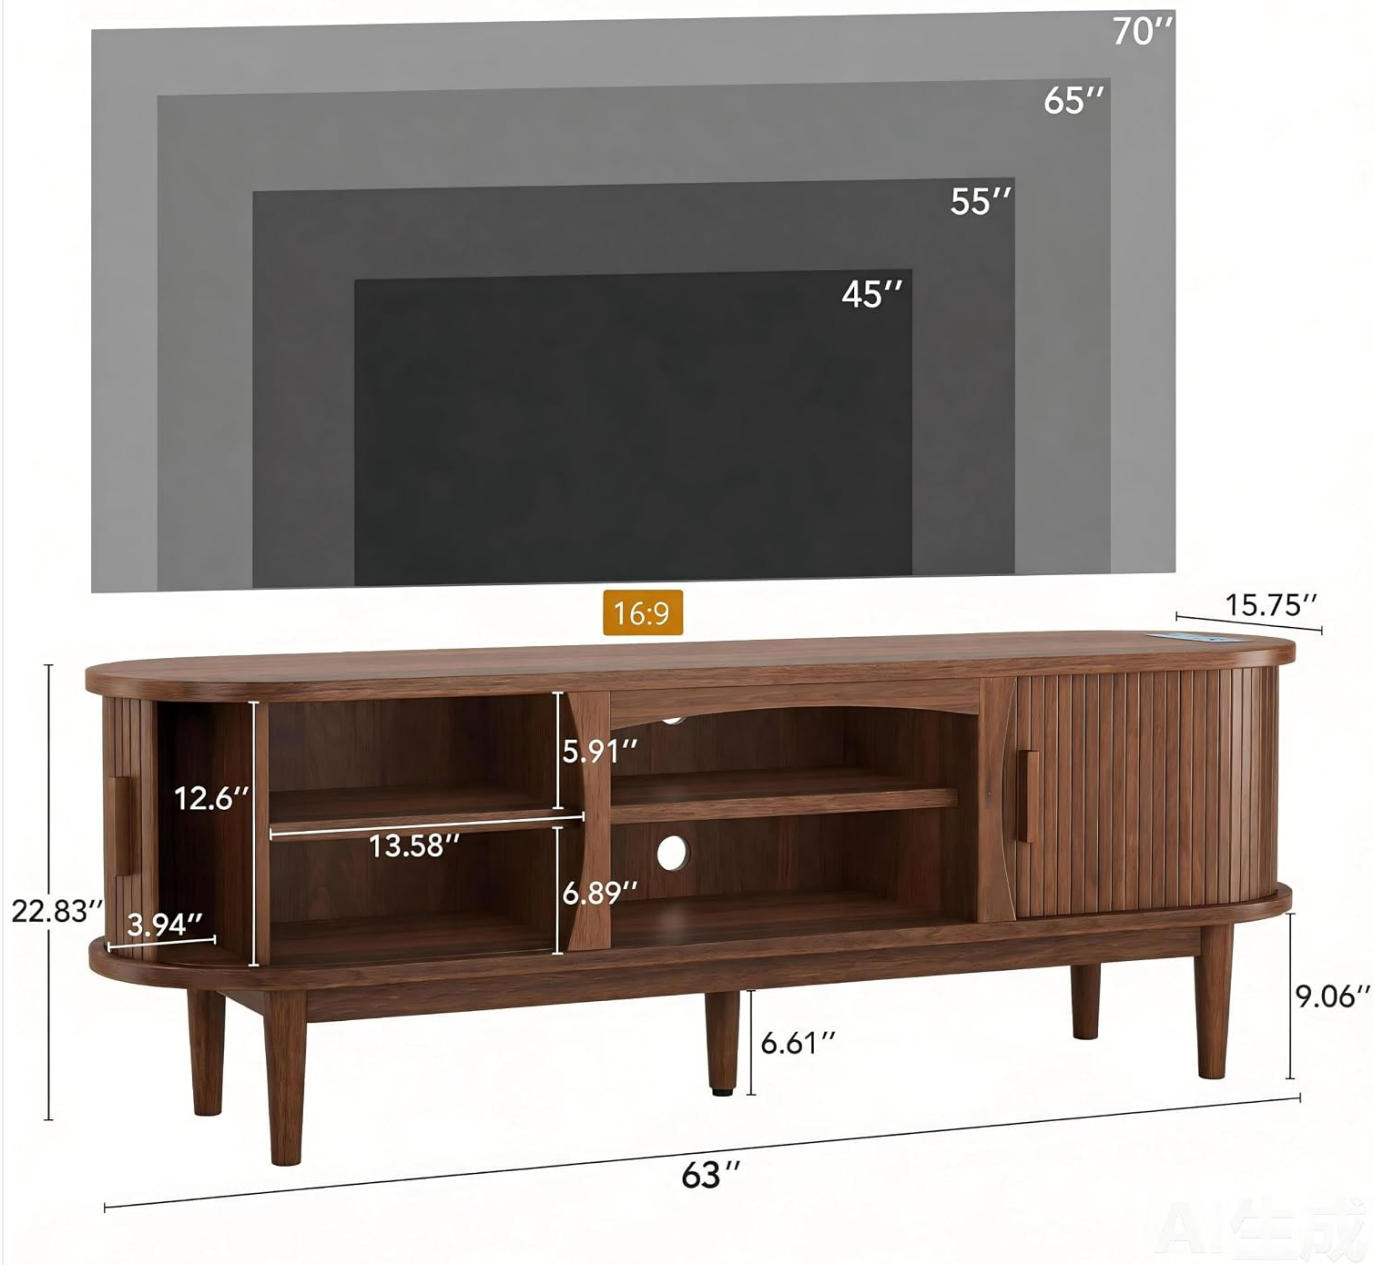


Image: Overview of the TV stand dimensions and TV size compatibility.

SETUP AND ASSEMBLY

Assembly typically requires a Phillips head screwdriver and a hammer (not included). Follow the step-by-step instructions provided in the separate assembly guide included with your product. Key steps generally include:

1. **Unpack and Identify Parts:** Lay out all components and hardware.
2. **Assemble Main Frame:** Connect the side panels to the bottom and top panels using the provided hardware.

3. **Install Shelves:** Insert adjustable shelves into desired positions.
4. **Attach Legs:** Secure the solid wood legs and the central support leg to the bottom panel.
5. **Install Sliding Doors:** Carefully insert the tambour doors into their tracks.
6. **Integrate Charging Station:** Place the charging station unit into its designated cutout on the tabletop and secure it.
7. **Attach Back Panel:** Secure the back panel, ensuring cable management holes are aligned.
8. **Secure to Wall:** Use the provided wall attachment brackets to anchor the TV stand to a wall for stability.

Refer to the detailed diagrams in your assembly guide for precise instructions and hardware identification.



Image: Detailed view of design elements and features.

OPERATING INSTRUCTIONS

Using the Built-in Charging Station

The TV stand includes an integrated charging station with 2 AC outlets (125V-2A), 1 USB port (5V-2A), and 1 Type-C port

(5V-2A). To use:

1. Ensure the TV stand's power cord (approximately 4.9 feet long) is securely plugged into a functional wall outlet.
2. Connect your devices (phones, tablets, speakers, gaming accessories) to the appropriate AC, USB, or Type-C ports.
3. The charging station is designed for convenience, reducing cable clutter around your entertainment area.



Image: Detailed view of the charging station ports.

Sliding Tambour Doors and Adjustable Shelves

The TV stand features two smooth sliding tambour doors that conceal storage compartments. Gently slide the doors horizontally to open or close them. The interior shelves are adjustable, allowing you to customize storage space for media players, books, game consoles, or decorative items. To adjust a shelf:

1. Empty the shelf of all contents.
2. Carefully lift the shelf and remove the shelf pins from their current holes.

3. Reinsert the shelf pins into the desired new holes, ensuring they are level.
4. Place the shelf back onto the pins.

Elegant Decoration & Practicality



Image: Illustration of sliding doors and adjustable shelves.

MAINTENANCE

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining.
- **Inspection:** Periodically check all fasteners to ensure they remain tight. Retighten if necessary.
- **Placement:** Avoid placing the TV stand in direct sunlight or near heat sources to prevent warping or fading.
- **Weight Distribution:** Distribute weight evenly across the top surface and shelves.

TROUBLESHOOTING

Stability Issues

- **Problem:** The TV stand feels wobbly or unstable.
- **Solution:** Ensure all assembly screws and fasteners are securely tightened. Verify that the central support leg is properly installed and making contact with the floor. Confirm the unit is placed on a level surface. Utilize the included wall attachment brackets to secure the stand to the wall.

Charging Station Not Working

- **Problem:** Devices are not charging when plugged into the built-in station.
- **Solution:** Check if the TV stand's main power cord is firmly plugged into a live wall outlet. Test the wall outlet with another device to ensure it is functional. Verify that the charging station unit is correctly seated and connected within the TV stand.

Sliding Doors Sticking

- **Problem:** The tambour doors are difficult to slide.
- **Solution:** Inspect the tracks for any obstructions or debris. Clean the tracks if necessary. Ensure the doors were installed correctly according to the assembly instructions.

SPECIFICATIONS

Brand	Decofy
Model Number	DC-TS02-113
Colour	Walnut
Size	63 inches TV Stand
Material	Engineered Wood
Style	Mid-Century
Item Weight	27.44 kg
Item Dimensions (L x W x H)	160 x 40 x 58 centimetres
Charging Station	2 AC Outlets (125V-2A), 1 USB Port (5V-2A), 1 Type-C Port (5V-2A)
Power Cord Length	Approximately 4.9 feet
Included Components	TV Stand, Wall Attachment Brackets



Image: Rear view of the TV stand with cable management.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Decofy customer service through the retailer where the product was purchased. Please have your model number (DC-TS02-113) and purchase date available when contacting support.

© 2026 Decofy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GZ48KWW4>

More documents and user manuals: **<https://manuals.plus/>**