

Monster S380

Monster S380 Bluetooth Speaker User Manual

Model: S380

INTRODUCTION

Thank you for choosing the Monster S380 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

The Monster S380 is a portable Bluetooth speaker designed to deliver powerful audio with clarity and deep bass.

Key features include:

- **Pure Monster Sound & 40W Powerful Audio:** Experience room-filling sound with rich bass and clear highs.
- **Advanced Bluetooth 6.0 & TWS Pairing:** Enjoy stable wireless connectivity and the option to pair two S380 speakers for immersive stereo sound.
- **20H Long Playback & Portable Design:** Extended battery life for all-day music and a convenient lanyard for portability.
- **IPX6 Waterproof & Multi-Input Interfaces:** Designed to withstand splashes and rain, with versatile connectivity options including AUX and TF card.
- **Built-in Mic & Handsfree Calling:** Integrated microphone for clear hands-free calls with noise-cancellation.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Monster S380 Bluetooth Speaker ×1
- USB-C Charging Cable ×1
- AUX-in Cable ×1
- Portable Rope ×1
- Quick Start Guide ×1



Image: Contents of the Monster S380 package.

PRODUCT OVERVIEW

Control Buttons

Image: Monster S380 control button functions.

1. **Mode Switching (M):** Press to cycle through Bluetooth, AUX, and TF Card modes.
2. **Play/Pause (▶ ▶):** Press to play or pause audio.
3. **Power On/Off (■):** Press and hold to power the speaker on or off.
4. **Volume - / Previous Song (-):** Press to decrease volume. Press and hold for the previous song.
5. **Volume + / Next Song (+):** Press to increase volume. Press and hold for the next song.

Input/Output Ports

PLAY IN MULTIPLE WAYS

Versatile connectivity with Bluetooth, AUX, and TF Card support for all your devices



Image: Multi-input interfaces on the Monster S380 speaker.

- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **USB-C Charging Port:** For charging the speaker.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status and turn off when fully charged.

2. Powering On/Off

Press and hold the Power button (■) for approximately 2-3 seconds to turn the speaker on or off. A sound prompt

will indicate the power status.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

UPGRADED BLUETOOTH 6.0

Enjoy ultra-stable, faster pairing and a seamless connection up to 100+ feet away



Lower Latency



Lower Power
Consumption



More Stable
Connection



Longer Transmission
Range

Image: Monster S380 with Bluetooth 6.0 indication.

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "Monster S380" in your device's Bluetooth list and select it to connect.
4. Once connected, the LED light will stop flashing, and you will hear a confirmation sound.

2. True Wireless Stereo (TWS) Pairing

TWS allows you to pair two Monster S380 speakers for a stereo sound experience.



Image: Two Monster S380 speakers paired for TWS connection.

1. Ensure both S380 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Play/Pause button (▶▶) for 3 seconds until you hear a TWS pairing prompt.
3. The two speakers will automatically search for and connect to each other. Once paired, you will hear a confirmation sound, and the LED on the primary speaker will flash slowly, while the secondary speaker's LED will be solid.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

3. AUX Input Mode

To use the AUX input:

1. Connect one end of the 3.5mm AUX cable to the speaker's AUX port and the other end to your audio device's headphone jack.
2. Press the Mode button (M) on the speaker until it enters AUX mode.
3. Audio will now play through the speaker from your connected device.

4. TF Card Playback

To play music from a TF (MicroSD) card:

1. Insert a TF card (with music files) into the TF card slot on the speaker.
2. The speaker will automatically switch to TF card mode, or you can press the Mode button (M) to select it.
3. Music will begin playing from the TF card.

5. Hands-Free Calling

When connected via Bluetooth, the speaker can be used for hands-free calls:

- **Answer Call:** Press the Play/Pause button (▶▶) once to answer an incoming call.
- **End Call:** Press the Play/Pause button (▶▶) once during a call to end it.
- **Reject Call:** Press and hold the Play/Pause button (▶▶) for 2 seconds to reject an incoming call.

MAINTENANCE

To ensure the longevity and optimal performance of your Monster S380 speaker, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Water Resistance:** The speaker is IPX6 waterproof, meaning it can resist high-pressure water jets. However, it is not designed for submersion. Ensure the port cover is securely closed when exposed to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the speaker regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.
- **Avoid Impacts:** Do not drop or subject the speaker to strong impacts, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your Monster S380 speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery; Power button not pressed correctly	Charge the speaker fully; Press and hold the Power button for 2-3 seconds.
No sound	Volume too low; Incorrect input mode; Device not connected	Increase speaker and device volume; Press Mode button to select correct input; Re-pair Bluetooth device.
Bluetooth connection unstable or fails	Speaker too far from device; Interference; Device Bluetooth issue	Move speaker closer to device (within 33 feet); Avoid obstacles; Restart speaker and device Bluetooth.
TWS pairing fails	Speakers already connected to other devices; Incorrect pairing procedure	Ensure both speakers are disconnected from other devices; Follow TWS pairing steps carefully.

Problem	Possible Cause	Solution
AUX/TF card not working	Incorrect mode; Cable/card issue; File format not supported	Press Mode button to select AUX/TF mode; Check cable connection/TF card insertion; Ensure audio files are in a supported format.

SPECIFICATIONS

Feature	Detail
Model Number	MS62153
Speaker Maximum Output Power	40 Watts
Connectivity Technology	Auxiliary, Bluetooth, USB
Wireless Technology	Bluetooth 6.0
Bluetooth Range	Up to 33 Feet (10 meters)
Audio Output Mode	Stereo
Waterproof Rating	IPX6
Battery Average Life	20 Hours
Power Source	Battery Powered
Control Method	Push Button
Product Dimensions	21 x 8 x 8 cm
Item Weight	880 g
Enclosure Material	Plastic
Compatible Devices	Bluetooth-enabled devices (smartphones, tablets, MP3 players, TVs, laptops)

WARRANTY AND SUPPORT

Warranty Information

The Monster S380 Bluetooth Speaker comes with a **180-day limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or any questions regarding your Monster S380 speaker, please contact Monster customer support through their official website or the retailer where the product was purchased.



© 2026 Monster. All rights reserved.