

LANCHEZ LZ-KLC-bull

LANCHEZ 4800PSI Electric Pressure Washer Instruction Manual

Model: LZ-KLC-bull

1. INTRODUCTION

Thank you for choosing the LANCHEZ 4800PSI Electric Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Improper use of this pressure washer can result in serious injury or property damage. Always follow safety guidelines.

- Always wear appropriate personal protective equipment, including eye protection, during operation.
- Ensure all connections are secure before starting the unit to prevent leaks and maintain pressure.
- Do not direct the spray at people, pets, electrical devices, or the unit itself. High-pressure spray can cause injury.
- Keep children and pets away from the operating area.
- The unit features an Automatic Total Stop System (TSS) which shuts off the pump when the trigger is released. This conserves energy and extends pump life.
- Ensure the power cord is properly grounded and avoid using extension cords that are not rated for outdoor use with high-power appliances.
- Never operate the pressure washer without a water supply. Dry running can damage the pump.

3. PACKAGE CONTENTS

Verify that all components are present before assembly and operation:

- LANCHEZ 4800PSI Electric Pressure Washer Unit
- High-Pressure Hose
- Spray Gun with Wand
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)

- Detergent Tank (500ML Soap Tank)
- Inlet Hose with Filter
- Nozzle Cleaning Needle
- User Manual



Figure 3.1: Overview of all included components and accessories.

4. SETUP

Follow these steps to set up your pressure washer for first use:

1. **Attach the Wheels and Handle:** Securely attach the wheels and handle to the main unit as per the assembly instructions.
2. **Connect the Water Inlet:** Attach the inlet hose with filter to the water inlet on the pressure washer. Ensure the connection is tight to prevent air from entering the system. Pull to check for a secure seal.

SCREW DOWN

TIGHTEN ALONG THE THREAD
DO NOT TWIST AGAINST THE THREAD



Figure 4.1: Tighten the water inlet connection knob to prevent air entry.

3. **Connect the High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer and the other end to the spray gun. Tighten all connections firmly.
4. **Attach a Nozzle:** Select the appropriate quick-connect nozzle for your task and insert it into the spray gun wand until it clicks into place.

5. **Connect to Water Supply:** Connect the inlet hose to a standard garden hose, and then connect the garden hose to a water faucet. Turn on the water supply completely.
6. **Purge Air from System:** Before plugging in the unit, squeeze the spray gun trigger for approximately 30 seconds to allow water to flow through the system and purge any trapped air.
7. **Connect to Power:** Plug the pressure washer into a grounded electrical outlet.

No official seller videos were available for embedding in this section.

5. OPERATING INSTRUCTIONS

5.1 Starting the Pressure Washer

1. Ensure the water supply is fully open and the unit is plugged in.
2. Turn the power switch on.
3. Squeeze the trigger on the spray gun to begin spraying. The motor will start automatically due to the Total Stop System (TSS).

5.2 Using Quick-Connect Nozzles

The pressure washer includes four quick-connect nozzles, each designed for specific cleaning tasks:

- **0° (Red):** Provides a concentrated, high-impact stream for stubborn stains and tough dirt. Use with caution on delicate surfaces.
- **15° (Yellow):** A powerful, narrow spray for intense cleaning of hard surfaces like concrete and brick.
- **25° (Green):** A versatile, medium-angle spray suitable for general cleaning of decks, fences, and driveways.
- **40° (White):** A wide, gentle spray for cleaning delicate surfaces such as cars, windows, and painted surfaces.



Figure 5.1: Quick-connect nozzles and their recommended uses.

5.3 Using the Detergent Tank

For tasks requiring detergent, fill the 500ML soap tank with an appropriate pressure washer-safe cleaning solution. Attach the detergent tank to the spray gun. The pressure washer will automatically mix the detergent with water at a lower pressure setting, typically when using the black soap nozzle (if included) or at a low-pressure setting on the adjustable nozzle.



Figure 5.2: Using the soap applicator for effective cleaning.

5.4 Self-Priming Options

The pressure washer supports self-priming from both a faucet and a bucket, offering flexibility in water source.



Figure 5.3: Self-priming from a faucet or bucket.

5.5 General Cleaning Applications

This pressure washer is suitable for a wide range of cleaning tasks, including:

- Cleaning cars, trucks, and motorcycles
- Washing fences, decks, and patios
- Removing grime from driveways and sidewalks
- Cleaning outdoor furniture and equipment

Great for All Kinds of Cleaning Jobs Around the house



Figure 5.4: Examples of various cleaning applications.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

6.1 Nozzle Cleaning

If the nozzle becomes clogged or the spray pattern is inconsistent, use the provided nozzle cleaning needle to clear any debris. Always disconnect the power and water supply before cleaning the nozzle.

SERVICE NOZZLE

REGULARLY CLEAN NOZZLE
USING PROVIDED CLEANING NEEDLE



Figure 6.1: Cleaning the nozzle with the provided needle.

6.2 Inlet Filter Maintenance

Regularly inspect and clean the inlet filter to prevent debris from entering and damaging the pump. Rinse the filter with water to remove any accumulated particles.



Figure 6.2: The water filter helps prevent impurities from entering the pump.

6.3 Hose and Cord Storage

Properly organize the high-pressure hose and power cord after each use to prevent kinks and tangles. The unit features an integrated hose reel and power cord storage for convenience.

HOW TO ORGANIZE THE LINES?



TOP KINK RESISTANT



OBVIOUS KINK POINT



Figure 6.3: Proper hose organization prevents kinks and damage.

Included Hose Reel

helps you keep neatly organized.
Avoids the risk of wire
entanglement.



Size: 13" x 12" x 28" (L x W x H)

Ergonomic height allows effortless
pulling without bending over.

Figure 6.4: Integrated hose reel and power cord storage for neat organization.

7. TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor does not start	No power supply; Power switch off; Thermal overload activated	Check power connection and outlet; Turn power switch on; Allow unit to cool down
Low pressure or pulsating spray	Insufficient water supply; Air in pump; Clogged nozzle; Kinked hose	Ensure full water supply; Purge air from system (squeeze trigger without power); Clean nozzle; Straighten hose
Water leaks from connections	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings
Detergent not dispensing	Detergent tank empty; Nozzle not set for detergent application; Clogged detergent line	Refill detergent tank; Use appropriate nozzle (e.g., black soap nozzle) or low-pressure setting; Clean detergent line

8. SPECIFICATIONS

Feature	Specification
Brand	LANCHEZ
Model Number	LZ-KLC-bull
Maximum Pressure	4800 PSI
Flow Rate	3.2 GPM
Product Dimensions (L x W x H)	12.2" x 16.9" x 16.5"
Color	Red
UPC	757939390190

9. WARRANTY AND SUPPORT

9.1 Protection Plans

Optional protection plans are available for purchase to extend coverage beyond the standard manufacturer's warranty. These plans typically offer:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly subscription covering multiple eligible purchases)

Please refer to the specific terms and conditions of any purchased protection plan for full details on coverage and claims.

9.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please contact LANCHEZ customer support. You can often find contact information on the product packaging or through the official LANCHEZ brand store online. Visit the [LANCHEZ Store](#) for more information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question