

GOLABS CT3

GOLABS CT3 Pop Up Camping Tent User Manual

Model: CT3

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using your GOLABS CT3 Pop Up Camping Tent. Failure to follow these instructions may result in injury or damage to the product.

- **Fire Hazard:** Keep all flame and heat sources away from the tent fabric. The tent material is not fireproof.
- **Ventilation:** Ensure adequate ventilation at all times to prevent suffocation. Do not seal all openings, especially when occupied.
- **Weather Conditions:** This tent is designed for 3-season use and is moisture resistant. It is not fully waterproof. Avoid using the tent in heavy rain, strong winds, lightning storms, or snowy conditions. Seek appropriate shelter during severe weather.
- **Securing the Tent:** Always use the provided stakes and guy lines to securely anchor the tent to the ground, especially in windy conditions.
- **Children:** Adult supervision is recommended when children are inside or around the tent.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- Instant Tent x 1
- Stakes x 8
- Guy Lines x 4
- Carry Bag x 1



Figure 2.1: Included components of the GOLABS CT3 Pop Up Camping Tent.

3. SETUP INSTRUCTIONS

The GOLABS CT3 Pop Up Camping Tent features a pre-attached pole system for quick and effortless setup. Assembly typically takes about 1 minute.

1. **Unpack the Tent:** Remove the tent from its carry bag and lay it flat on a clear, level surface.
2. **Lift the Center Pole:** Locate the central hub mechanism at the top of the tent. Gently lift the center pole upwards to begin expanding the tent structure.
3. **Secure the Hub:** Once the tent frame is mostly expanded, press down firmly on the central hub mechanism until it locks into place. You should hear a click, indicating the poles are secured.
4. **Stake Down Corners:** Extend the tent corners and use the provided stakes to firmly anchor each corner to the ground.
5. **Attach Guy Lines:** For added stability, especially in breezy conditions, attach the guy lines to the designated loops on the tent and stake them into the ground at an appropriate angle.



Easy Set Up in 1 Mins



PLEASE READ
NOT waterproof.
Avoid use in rain.
Breathable fabric.

Figure 3.1: Illustration of the quick setup process for the GOLABS CT3 Pop Up Camping Tent.

Your browser does not support the video tag.

Video 3.1: Official GOLABS video demonstrating the setup of the CT3 Pop Up Camping Tent.

4. OPERATING YOUR TENT

The GOLABS CT3 tent is designed for comfort and convenience during your outdoor activities.

4.1 Ventilation

The tent features 4 side mesh windows and a mesh door for optimal airflow. Keep these open when possible to ensure fresh air circulation and reduce condensation. The mesh also helps keep insects out.

4 Side Mesh & Door Ventilation



Figure 4.1: Illustration of the tent's ventilation system with mesh windows and door.

4.2 Interior Features

- **Storage Pockets:** Utilize the built-in storage pockets to keep small essentials organized and easily accessible.
- **Lantern Hook:** A hook is provided at the top of the tent for hanging a lantern or other lightweight items.
- **Smooth Zippers:** The tent is equipped with smooth-operating zippers for easy entry and exit.
- **Quick-Release Door Buckle:** Secure the door conveniently with the quick-release buckle.

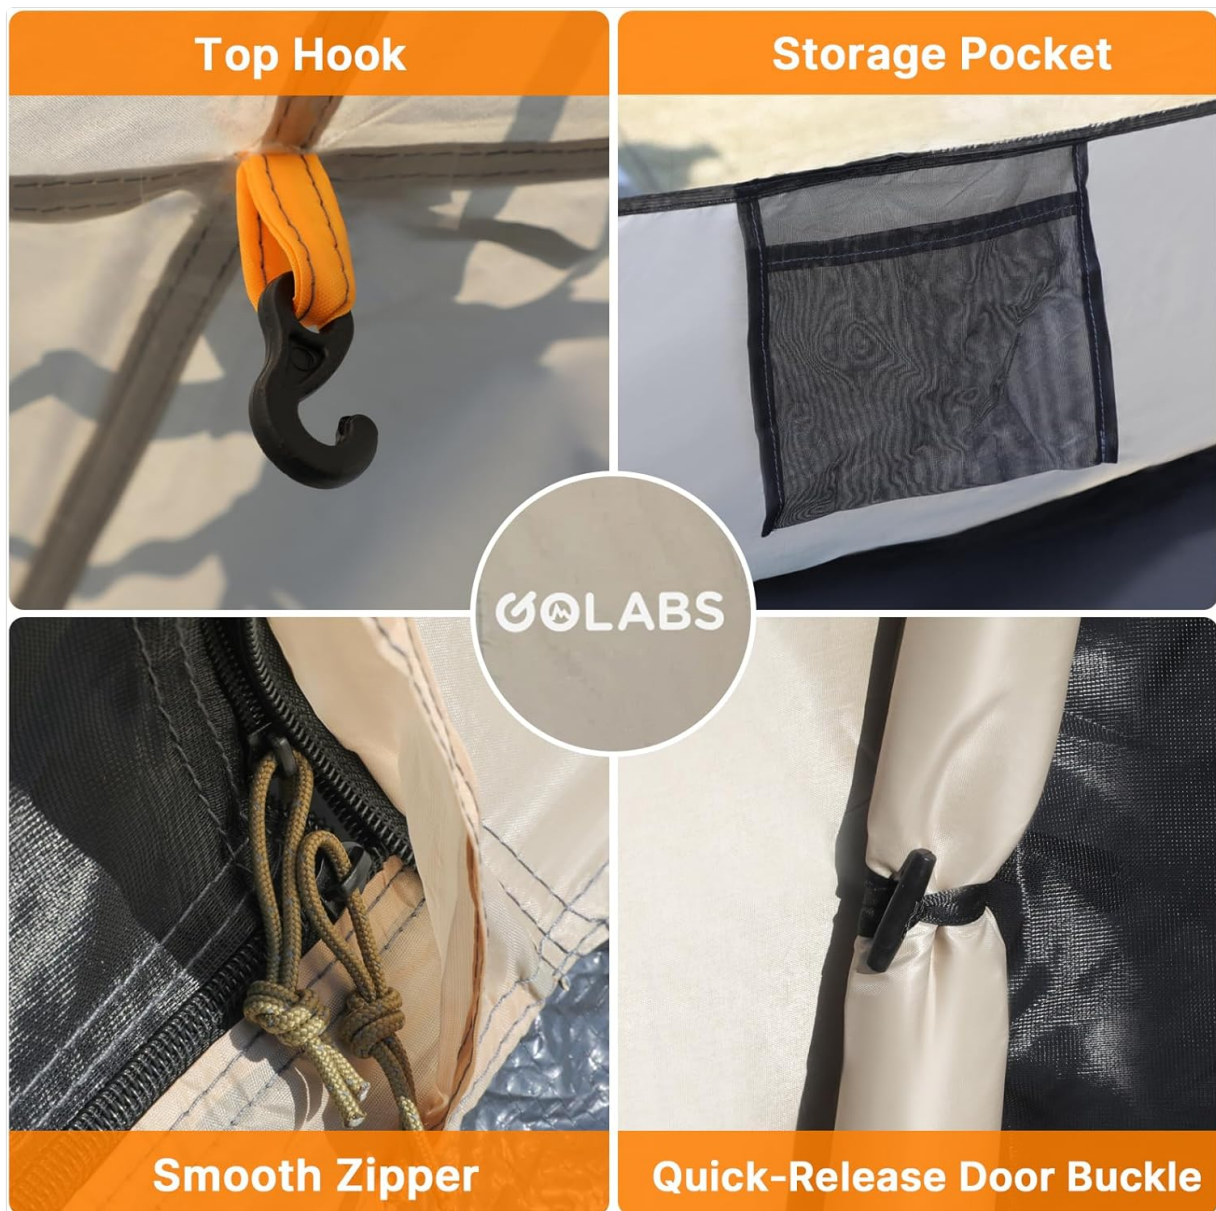


Figure 4.2: Details of interior organization features and tent hardware.

5. MAINTENANCE AND CARE

Proper care will extend the life of your GOLABS CT3 Pop Up Camping Tent.

- **Cleaning:** Clean the tent with a soft sponge, mild soap, and lukewarm water. Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric and coatings.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew growth, odors, and fabric degradation. Air dry in a shaded area, away from direct sunlight.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from extreme temperatures and direct sunlight.
- **Inspection:** Regularly inspect the tent for any signs of wear, tear, or damage to zippers, seams, and poles. Address minor issues promptly to prevent them from worsening.
- **Avoid Dry Cleaning:** Despite some general fabric care instructions, dry cleaning is not recommended for the entire tent as it can damage waterproof coatings and materials.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Condensation Inside Tent:** This is often caused by a lack of airflow. Ensure all mesh windows and the door are open when conditions allow to improve ventilation.
- **Minor Water Seepage:** While the tent has sealed seams and is moisture resistant, it is not fully waterproof. In light rain, check for any small gaps or damaged seams. Seam sealer can be applied to reinforce areas if needed. Avoid heavy rain.
- **Sticking Zippers:** Clean any dirt or debris from the zipper teeth. A small amount of zipper lubricant or silicone spray can help improve smooth operation.
- **Tent Instability in Wind:** Ensure all 8 stakes are firmly driven into the ground and all 4 guy lines are properly tensioned and secured. Reposition the tent to face the wind if possible.
- **Difficulty Packing Away:** Ensure all air is expelled from the tent before folding. Follow the reverse steps of setup, carefully collapsing the poles and folding the fabric to fit into the carry bag.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	GOLABS
Model Name	CT3
Occupancy	2 Person
Product Dimensions (L x W x H)	80.7"L x 59"W x 41.7"H
Interior Dimensions (L x W x H)	76.7"L x 55.1"W x 43.7"H
Item Weight	4.28 Pounds
Seasons	3 Season
Material Type	Polyester (Taffeta Rainfly, Polyethylene Floor)
Pole Material Type	Fiberglass (Pre-Attached)
Water Resistance	Moisture Resistant, Standard Water-Resistant Fabric & Sealed Seams (Not fully waterproof)
Number of Doors	1
Number of Windows	3 (Mesh)
Number of Pockets	1
Assembly Time	1 Minute

2 Person Instant Camping Tent



Figure 7.1: Detailed dimensions of the 2-person GOLABS CT3 Instant Camping Tent.

8. WARRANTY INFORMATION

The GOLABS CT3 Pop Up Camping Tent is backed by a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, improper care, or normal wear and tear.

For warranty claims or further details, please refer to the contact information in the Customer Support section.

9. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your GOLABS CT3 Pop Up Camping Tent, please contact our customer support team. For the most up-to-date contact information, please visit the official GOLABS website or refer to your purchase documentation.

We are committed to providing reliable products and support for your outdoor adventures.

© 2026 GOLABS. All rights reserved.